

# Jk300英文说明书（正）带微聊1.63版


正面

80mm

## VIDEO WALKIE-TALKIE USER MANUAL



### I. Appearance and Function Description

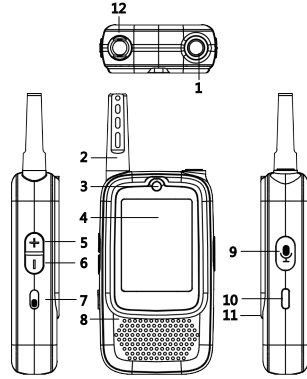

- 1-Mode/Back button
- 2-Antenna
- 3-Camera
- 4-Display screen
- 5-Volume Up/Up button
- 6-Volume Down/Down button
- 7-Power switch
- 8-MIC hole
- 9-Talkie button/OK button
- 10-Type-C interface
- 11-Charging indicator light
- 12-Lanyard hole

### II. Power On/Off Function

1. The power switch is in the "OFF" position when the product leaves the factory.
2. Turn the power switch to "ON". The product will turn on automatically and a four-grid menu will appear, which includes video intercom, WeChat, Photo Capture, and gallery.
3. When using this product for the first time, please fully charge it.



Power OFF



Power ON

### III. Charging indicator

1. Take the charging cable provided with this device and connect it to the charger. The power indicator light will turn red. When fully charged, the charging indicator light will automatically turn off.
2. Charger specifications: 5V/1A.

 
### IV. Function Description

#### Basic Button Functions


- 1) Short press the up/down keys to move left/right and select the desired function on the main interface.
- 2) After selecting a function, press the OK key (Talkie button) to enter.
- 3) To exit the function, press the Back key (mode key).
- 4) Long press the "+" key to increase the volume. Long press the "-" key to decrease the volume.
- 5) Press and hold the " " key to conduct voice communication. The voice transmission of this device is a one-way channel. Only after

60mm

the speaker finishes speaking and releases the intercom key can the other party press and hold the intercom key to send voice messages.  
6) This device has the following four screen display modes. In video intercom mode, switch between them by long-pressing the volume +/- buttons.



 Main menu interface: As shown in the image below



- 1-Video Intercom
- 2-WeChat
- 3-Photo Capture
- 4-Gallery

The following is a detailed explanation of the four main functions of the main menu interface:

#### A. Video Intercom:

- 1) Short press the Talkie button (OK button) to make a call, then long press the Talkie button to wait for the other party to answer. The receiving party only needs to short press the Talkie button to connect.
- 2) Long press the Talkie button to start the intercom.
- 3) Short press the volume +/- buttons to increase or decrease the volume.
- 4) Long press the volume +/- buttons to switch the video window display.
- 5) Long press the mode button to switch between different voice modes. (There are four voice modes: original, child, robot, and adult.)
- 6) Short press the mode button to return to the main menu.

**B. WeChat:** After entering the WeChat page, there are five functions to choose from at the bottom. From left to right are emoticons, voice intercom, music, photography, and pictures, as shown in the figure below



#### Button Operation:

- 1) Short press Volume +/- to switch functions, then short press the Talkie button to confirm, then use the up and down buttons to select the desired content, and press the OK button to send.
- 2) Press the mode button to return to the main menu.
- 1-Emoji Operation:** short press Volume +/- to move left and right to select an emoji, and press the confirm/call button to send.
- 2-Voice intercom operation:** Long press for voice intercom, long press to speak, release to end and send
- 3-Music Operation:** short press Volume +/- to move left and right to select music, and press the confirm/call button to send.
- 4-Shooting Operation:** Enter the photo interface, press the confirm/call button to take a photo and send it directly.
- 5-Image Operation:** Enter the image interface, short press Volume +/- to move left and right to select an image, and press the confirm/call button to send.
- C. Photo Capture:** Enter the image interface and press the OK/Talkie button to take a photo.
- D. Gallery:**
  - 1) Enter the album interface, press the volume +/- left and right buttons to select pictures, and press the confirm/call button to view pictures;
  - 2) Long press the confirm button to enable the deletion option, short press "+" to select the deletion type (all/single), and short press the "confirm button" to delete.
  - 3) Press the mode key/return key to return to the main menu
- V. Product Power On/Off and Automatic Shutdown Function**  
This product enters working mode upon power-on and will remain operational regardless of use. It will automatically shut down when the battery is low. To stop use, please turn the power switch to the

"OFF" position. To restart the product, simply turn the power switch to "OFF" and then to "ON" to start it normally.

#### VI. Product Pairing and Connection Method:

This product uses a 2.4G Wi-Fi transmission and connection mode. Each package contains two walkie-talkies, which are already paired. These two walkie-talkies cannot be connected to other devices. If multiple sets are purchased, they can only be connected one-to-one per set; multiple products cannot be connected to each other simultaneously.

#### VII. Precautions:

- a. This product is suitable for outdoor use.
- b. This device is not waterproof.
- c. The indoor distance for the product should be such that the image does not stutter.

#### VIII. Product Specifications

|                  |                 |
|------------------|-----------------|
| Screen           | 2.0 Inch IPS    |
| CMOS pixel       | 30W             |
| Battery capacity | 3.7V 650mAh     |
| Language         | English         |
| USB Port         | Type-C          |
| Operate TEMP     | -20°C ~ 60°C    |
| Storage TEMP     | -30°C ~ 70°C    |
| Power            | 5V/1A           |
| Product size     | 124mm*54mm*23mm |

CE FCC RoHS  
Made in China

#### FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.