

Jk800英文说明书（正）带微聊4代

80mm


VIDEO WALKIE-TALKIE USER'S MANUAL



60mm

EN

1. Appearance and functional description

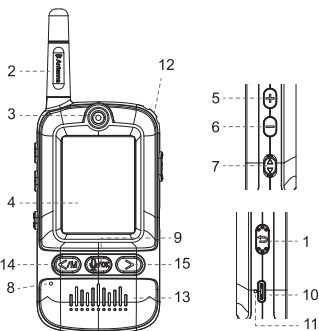

- 1- Mode key/Return key
- 2- Antenna
- 3- Camera
- 4- Display Screen
- 5- Volume up/up button
- 6- Volume Down/Down Button
- 7- Power switch
- 8- MIC hole
- 9- intercom button/confirm button
- 10- Type-C interface
- 11- Charging indicator light
- 12- Rope hole
- 13- Speaker
- 14- Left Move Key
- 15- Right arrow key

 
2. Basic button function operation

- 1) Short press the up and down keys and move left and right to select the desired function on the main interface
- 2) After selecting the function, please press the confirm button (call button) to enter
- 3) To exit this function, please press the return key (mode key) to exit
- 4) Long press the "+" key to increase the volume. Long press the "-" key to decrease the volume.
- 5) Press and hold the "🗣️/📞" key for voice communication. The local voice is transmitted through a one-way channel, and only when the speaker releases the intercom button can the other party press and hold the intercom button for voice transmission.

3. Power on and off functions

Turn the 'power switch' upwards to turn on, and downwards to turn off. When the power switch is turned up, a six grid main interface will appear, as shown below:

- 1- Video intercom
- 2- WeChat mode
- 3- Camera mode
- 4- Album Mode
- 5- Theme Mode
- 6- Game Mode



4. Detailed explanation of the six major functions of the main menu interface:

1-Video intercom

- a. Short press the intercom button (confirm button) to make a call, then long press the call button and wait for the other person to answer. The recipient only needs to press the call

button briefly to connect; b. Long press the call button to initiate intercom communication; c. Short press the volume button "+/-" to increase or decrease the volume; d. Long press the volume button "+/-" to switch the video window display; e. Long press the mode key to switch between magic sounds (magic sounds are divided into four types: original sound/child/robot/adult); f. Short press the mode key to return to the main menu

2-WeChat

After entering the WeChat page, there are five functions to choose from at the bottom, from left to right: emoticons, voice intercom, music, photography, and pictures. As shown in the following figure:



(1) Emoji operation:

Short press the volume +/- left and right to select the expression, press the confirm/call button to send

(2) Voice intercom operation

Long press for voice intercom, long press to speak, release to end and send

(3) Music operation

Short press the volume +/- left and right buttons to select music, press the confirm/call button to send

(4) Photography operation

Enter the photo interface, press the confirm/call button to take a photo and send it directly

(5) Image manipulation

Enter the image interface, briefly press the volume button "+/-" to move left and right to select the image, and press the confirm button to send

3-Take photos:

Enter the photo interface and press the confirm/call button to take a photo

4- Album:

a. Enter the album interface, short press the volume "+/-" to move left and right to select pictures, press the confirm/call button to view pictures. b. Long press the "confirm" button to enable the deletion option, press left or right to select the deletion type (all/single), short press the "confirm" button to delete

c. Press the mode/return key to return to the main menu

5-Theme mode:

Short press the intercom button (confirm button) to enter the theme mode, short press the left/right button to select the desired theme, and press the confirm button

6-Game mode:

Short press (confirm key) to enter the game mode, select the two player mode, short press the left and right movement keys to select the desired icon 🧑🏻 🧑🏻 🧑🏻 and press the "confirm key".

5. Charging indicator

a. Take the local charging cable, connect the charger, and the power indicator light "red light" will turn on. When fully charged, the charging indicator light will automatically turn off.

b. Charger adaptation specifications: 5V/1A.

c. Please fully charge the product before using it for the first time.

6. Product power on/off and automatic shutdown function

This product enters the working state after being turned on; Whether used or not, the product will always be in working condition. When the product is in a low power state, it will automatically shut down. If you stop using it, please turn the toggle switch to the "OFF" state. If you need to restart the product, simply turn the power toggle switch to "OFF" first, and then to "ON" to start it normally.

7. Product pairing and connection method:

This product adopts WIFI 2.4G transmission and connection mode; Each package contains two walkie talkies that have been paired and cannot be connected to other machines for use. If multiple sets of products are purchased, they can only be connected one-to-one in sets and cannot be used simultaneously.

8. Attention:

- a. This product is suitable for outdoor use.
- b. This machine is not waterproof
- c. The indoor distance of the product shall be based on the image without any lag.

9. Product specifications

display	2.0 Inch IPS
CMOS pixel	30W
battery capacity	3.7V 400-650mAh
USB port	Type-C
Operating temperature	-20°C~60°C
Storage temperature	-30°C~70°C
power supply	5V/1A
Product dimensions	137mm*55mm*23mm

CE FC RoHS

Made in China

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit, not expressly approved by the party responsible for compliance, could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.