

Children's video interphone

Instruction Manual



Video Guide

Scan with your phone camera for support.


1. Register for Lifetime Warranty & Returns.
2. Access Tutorial Videos & Technical Support.



Email: support@csoei.com

CE RoHS MADE IN CHINA

I. Appearance and functional description

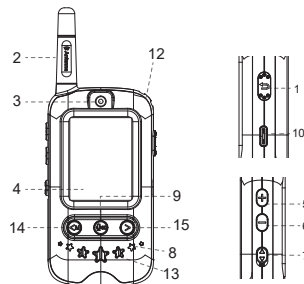

- | | |
|--------------------------|--------------------------------------|
| 1- Return key | 9-Intercom button/
Confirm button |
| 2- Antenna | 10-Type-C interface |
| 3-Camera | 11 -Charging indicator light |
| 4- Display Screen | 12- Lanyard hole |
| 5-Volume up/up button | 13- Horn |
| 6-Volume down/Down arrow | 14- Left arrow key |
| 7- Power switch | 15- Right arrow key |
| 8-MIC hole | |

II. Basic function operation of buttons

 
- 1) Short press the "+" key to increase the volume. Short press the "-" key to decrease the volume.
- 2) After selecting the function, please press the confirm button (call button) to enter
- 3) To exit this function, please press the return button on the right side.
- 4) Short press the "+" key to increase the volume. Short press the "-" key to decrease the volume.
- 5) In video mode and WeChat chat mode, long press the, "📞/ok" button to initiate voice communication. In video intercom mode, transmission is through a one-way channel, and only after the speaking party ends the conversation by releasing the intercom button can the other party press and hold the intercom button to send voice messages. When a microphone icon appears on the screen, it indicates that the other party is speaking.

III. Power-on and Power-off Functions

Turn the 'power switch', pull up to turn on, and pull down to turn off.

When the power switch is turned upwards, the main interface of the six-grid layout will appear, as shown below:

- 1-Video intercom
- 2-WeChat mode
- 3-Photo mode
- 4-Album Mode
- 5-Theme Mode
- 6- Game Mode



IV. Detailed explanation of the six major functions of the main menu interface:

1-Video intercom

a. Short press the intercom button (confirmation button) to make a call, and the recipient simply needs to short press the call button to connect; b. Single press the right button to switch the video window display; c. Single press the left button to switch between four voice effects (original voice, child voice, robot voice, and adult voice); d. Short press the back button to return to the main menu.

2-WeChat

Upon entering the WeChat chat page, there are five functions available at the bottom, arranged from left to right as follows: Emoticons, voice chat, music, photography, and images

As shown in the figure below:



(1) Emoji operation: 😊

Short press the "Call/OK" button to enter the selection mode, short press the "</M" or ">" button to select an expression, and short press the "Call/OK" button to send

(2) Voice intercom operation: 🗣️

- 1) Long press to activate voice chat, long press to speak, release to end and send.
- 2) Short press 'volume + or -' to query historical information, and short press 'call/OK' to listen to historical voice. Press the

left or right button to exit the query information.

Note: Messages after the 8th will be automatically overwritten and cleared. Restarting the device will automatically clear all messages!

(3) Music operation: 🎵

Short press the "Call/OK" button to enter the selection mode, short press the "</M" or ">" button to select music, and short press the "Call/OK" button to send.

(4) Photography operation: 📷

Short press the "Call/OK" button to enter the photo-taking interface, take a photo, and send it directly.

(5) Image processing: 🖼️

Short press the "Call/OK" button to enter the image interface, short press the "</M" or ">" button to select a picture, and short press the "Call/OK" button to send.

3-Take a photo: 📷

Enter the photo interface and press the confirm/call button to take a photo

4- Photo album:

Enter the album interface, use the left and right buttons to select pictures, briefly press the "Call/OK" button to view photos, and press the back button to exit.

Deleting Photos: Select a photo, long press the "Call/OK" button, use the left and right buttons to select "OK" to delete a single photo, select "ALL?" to delete all photos, short press

the "Call/OK" button to confirm, or press the back button to cancel the deletion.

5-Theme mode:

Press the intercom button (confirmation button) briefly to enter theme mode, press the left and right buttons briefly to select the desired theme, and then press the confirmation button

6-Game mode:

Press the confirm button briefly to enter game mode. Both players need to enter game mode together to automatically start the game. Use the left and right buttons to select the type, and press "Call/OK" briefly to confirm.

V. Charging Indication:

a. Use the charging cable provided with this device, connect it to the charger, and the power indicator light will turn "red". When fully charged, the charging indicator light will automatically turn off.

b. Charger compatibility specification: 5V/1A.

c. Before using this product for the first time, please fully charge it.

VI. Product power-on/off and automatic shutdown functions:

This product enters working mode upon power-on; it remains in working mode whether in use or not. When the product is in a low battery state, it will automatically shut down. If you stop using it, please set the toggle switch to the "OFF" position. To restart the product, simply toggle the power switch to "OFF" first, and then to "ON" to start it normally.

VII. Product pairing and connection methods:

This product adopts a WiFi2.4G transmission and connection mode; each package contains two intercoms, which have

been pre-paired. These two intercoms cannot be connected to other devices for use. If multiple sets of products are purchased, they can only be connected one-to-one on a set basis, and multiple products cannot be connected and used simultaneously.

VIII. Precautions:

a. This product is suitable for outdoor use. Slight echo may occur when used face-to-face at close range. This is a normal acoustic feedback phenomenon.

b. This device is not waterproof

c. The indoor distance of the product should be determined based on the principle of ensuring smooth images.

IX. Product specifications

Display	2.0 Inch IPS
CMOS pixel	30W
Battery capacity	3.7V 400-650mAh
USB port	Type-C
Operating temperature	-20°C~60°C
Storage temperature	-30°C~70°C
Power supply	5V/1A
Product dimensions	124mm*54mm*23mm

CE FC RoHS

Made in China

FCC Warning

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note 1: According to Part 15 of the FCC rules, this device has been tested and meets the limits for Class B digital devices. These limits are intended to provide reasonable protection against harmful interference in residential installations. This device generates, uses, and can radiate radio frequency energy. If not installed and used according to instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If this device does cause harmful interference to radio or television reception, it can be determined by turning the device off and on. Users are encouraged to try to correct the interference through one or more of the following measures:

- Redirect or reposition the receiving antenna.
- Increase the spacing between the equipment and the receiver.
- Connect the device to a socket different from the one connected to the receiver.
- Please consult a dealer or an experienced radio/TV technician for assistance.

Note 2: Any changes or modifications to this device without the explicit approval of the party responsible for compliance may render the user's authority to operate the equipment invalid.

This device has been evaluated as compliant with general radiofrequency exposure requirements. It can be used under portable exposure conditions without any restrictions.