

Earpanda Phone Ringer User Manual

(EPR-01)



①**Power ON/OFF:** Hold the Power button for 3 seconds.

After a prompt tone, the ringer will turn ON/OFF.

Powered on by default for customer ease of use.

②**Ringtone:** Press the button to cycle & select through 5 tone options.

Reset: Press & hold the button for 8 seconds, after a prompt tone, Bluetooth connections will be cleared and reset finished. With blue light flashing, It is in pairing mode for a new device connection.

③⑤Volume Control: Press the +/- buttons to adjust the sound level from 120dB (maximum) to mute.

Flashing lights = volume at max/muted.

④Flashing Lights: Press the button to cycle through 4 brightness levels Off/Low/Medium/High.

The lights will not flash during selecting to protect your eyes.

Setup Tips:

1. Keep the ringer in a proper spot at home — make sure you can hear and see it easily at most times.
2. Always keep it plugged into a wall outlet and connected to your phone via Bluetooth to work properly.
3. For optimal range, please ensure the antenna is pointing in a vertical (upright) position.
4. Select and confirm your preferred ringtone, volume and flashing light brightness.
5. Use the original factory supplied adapter (5V/2A) or others with the same specification.

Initial Pairing Instructions:

- 1) Ensure your Earpanda Ringer is powered on.
- 2) Enable Bluetooth on your phone.

3) Select and confirm "Earpanda Ringer" from your device list.

4) Connection is ok and the ringer blue light stops flashing.

All done. Now enjoy the set and forget phone ringer.

Pair One Phone with Two Ringers

1) Power on Ringer No.1 → follow initial pairing steps →

Power off Ringer No.1

2) Power on Ringer No.2 → Repeat initial pairing steps for

Ringer No.2

3) Place both ringers at opposite ends of your space.

4) Keep them plugged into power outlets and powered on, also your phone Bluetooth is on all the time.

Both ringers remain active for uninterrupted alerts.

Note: One ringer connecting with two phones at the same time is not supported.

Trouble Shooting:

1) Connection Drops (Ringer Blue Light Flashing):

Check Your Phone:

- Phone powered off
- Bluetooth disabled
- Your phone is connected to another Bluetooth device

- Out of Range: Up to in line 150ft/50m range

2) Can't Pair with a New Phone?

Ringer Bluetooth Reset Required. Perform a reset to clear previous connections.

See P1: **②Ringtone Reset** Instruction.

Thanks for Purchasing Earpanda Ringer EPR-01

☑ 60 DAYS FREE TRIAL!

☑ 18 Months FREE REPLACEMENT.

For refund, replacement, or any question, suggestion, feedbacks, etc., just be free to contact us at
info@earpanda.com

Shenzhen Soundaids Technology co., Ltd

HK Soundaids co., Ltd

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.