

正

封面

反

MANUFACTURER INFORMATION

ZHEJIANG MAMBOBABY BABY PRODUCTS CO., LTD.
Address: No. 6, Wuhang Road, Yiwu, Zhejiang 322000, China
Customer Hotline: 1-331-307-8370
Website: <http://www.mambobaby.com>
MADE IN CHINA

Document Revision: REV-2025-08-001
Keep this manual for future reference.

BLUETOOTH CALLING & MUSIC PLAYBACK

POWER ON & PAIRING

- After powering on, a rotating red light indicates pairing mode.
- Select "MamboTunes" in your phone's Bluetooth list; a rotating blue light (2 cycles) confirms connection, then automatically enters the first light mode.
- Bluetooth Pairing Replacement Steps: To pair with a new Bluetooth device, press and hold the button to enter re-pairing mode, then repeat the pairing process.

MUSIC PLAYBACK

- Play/Pause, Volume, Previous/Next Track can be controlled via:
 - Physical buttons on the speaker

Short press Power Button: Play/Pause

Volume Buttons: Adjust volume

Previous Track Button/Next Track Button

- Music apps on your phone (Supports Spotify, Apple Music, Amazon Music, etc.).

- Music Playback Quality Assurance: For optimal music playback performance, ensure no water enters the speaker driver (speaker unit) interior. If water enters the speaker driver while the device is floating on water, turn the volume up to 80% or higher-the water will be vibrated out within a few minutes. If a large amount of water has entered, invert the speaker and shake it to drain the accumulated water inside.

PHONE CALLS

- Answer: Single press the power button.
- Hang Up: press the power button once.
- Reject: Double press the power button.
- Call Quality Tips: For optimal voice pickup, speak within 4 inches of the microphone. If using the speaker while floating on water, water droplets on the microphone surface may affect sound quality-simply wipe the microphone and try again.

TROUBLESHOOTING

ISSUE	SOLUTION
Device not found	1. Ensure speaker is in pairing mode (rotating red light). 2. Restart phone Bluetooth.
Music interruptions	1. Keep devices within 33 ft with no metal obstructions. 2. Maintain >3m distance from WIFI 6 routers.
Microphone mute	1. Clean the microphone mesh with a soft brush. 2. Restart the speaker.

FIVE LIGHT MODES

MODE 1	
MODE 2	
MODE 3	
MODE 4	
MODE 5	
MODE SOS	

OPERATION STEPS

- Single Press:** Cycle through Strip Light modes (Mode 1 → Mode 2 → Mode 3 → Mode 4 → Mode 5).
- Long Press:** Turn off the strip light.
- Long Press:** Activate or deactivate the SOS mode immediately: flashing red light alarm frequency: 1-second on/off cycle. This can be used to alert people on shore of your location.

DETACHABLE CARRY STRAP

FUNCTION DESCRIPTION

- Load Capacity: Static suspension 3.97 lbs, dynamic tension 2.65 lbs.
- Length: 6.9 inches.

OPERATION STEPS

- Attach the Strap:
 - Unfasten the buckle.
 - Align with the hanging point and fasten the buckle.
- Hanging Scenarios:
 - Poolside: Hook onto railings or lounge chair arms (ensure load-bearing ≥ 3.3 lbs).
 - Stroller: Attach to handles or basket sides (compatible width 1.2-2 inches).
 - Diaper bags, travel backpacks, etc.

CHARGING INSTRUCTIONS

WHEN TO CHARGE?

- Low Battery Indicator: When the volume automatically decreases, the battery level is below 10%.
- Regular Maintenance: Charge at least once every 3 months if the speaker is not in regular use to maintain battery health.

CHARGING STEPS

- Prepare Accessories:

Open the Waterproof Plug:

- Locate the charging port on the speaker's side; gently pull out the waterproof plug to expose the USB-C port.

Connect the Charger:

- Plug one end of the cable into the USB-C port, the other end into the power adapter, then plug into a outlet.

POST-CHARGING STEPS:

- Seal the Waterproof Plug: After charging, firmly press the plug back into place to ensure a watertight seal (critical for pool use).

- Safety Reminder:** Do not use the speaker in water while charging.

TECHNICAL SPECIFICATIONS:

- Input Voltage: 5V DC
- Charging Current: 2A (Max)

KEY NOTES FOR POOL USE

- Waterproof Plug Integrity: Always inspect the plug for debris or damage before sealing to avoid water ingress.
- Charge Before Use: Fully charge the speaker onshore before bringing it into the pool area.

MAINTENANCE & WARRANTY

DAILY MAINTENANCE

- Cleaning: Wipe with a damp cloth. Avoid alcohol, bleach, or acidic/alkaline solvents (pH < 5 or > 9).
- Charging: Use a 5V/2A. Red light turns blue when fully charged (≈ 3 hours).
- Storage: Charge for 1 hour before long-term storage; keep in a dry, cool place (temperature ≤ 30°C).

 
WARRANTY POLICY

- Coverage: 1-year limited warranty (free repair for non-human damage).
- Exclusions: Damage from drops, water ingress, or disassembly is not covered.





MamboTunes FLOATING SPEAKER WITH CUP HOLDER USER MANUAL

The MAMBOTUNES FLOATING SPEAKER WITH CUP HOLDER is a multifunctional floating Bluetooth speaker designed for family outdoor activities, integrating music playback, hands-free calling, beverage storage, and a safety warning light system. Its innovative design includes a foldable cup holder made of food-grade silicone, a detachable carry strap, and an IPX7 waterproof structure, suitable for pools, beaches, camping, and indoor environments. It provides convenient pool entertainment for parents and children while ensuring safe storage of beverages when infants are floating in water.

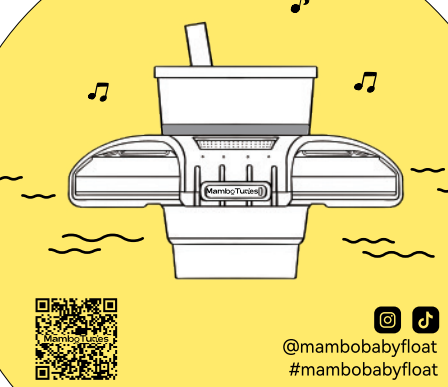

CORE SPECIFICATIONS

  - Maximum Dimensions:** 9 inches diameter (circular), 3.94 inches Height
- Weight:** 1.87 lbs
- Materials:**
 - Cup Holder: Silicone
 - Carry Strap: Polyester
 - Main Body: ABS
- Waterproof Rating:** IPX7 (fully submersible for 30 minutes)
- Battery Capacity:** 2600 mAh (9.62Wh)
- Battery Life (Music Playback):** Up to 3.5 hours (Bluetooth mode, 50% volume)
- Bluetooth Version:** 5.2

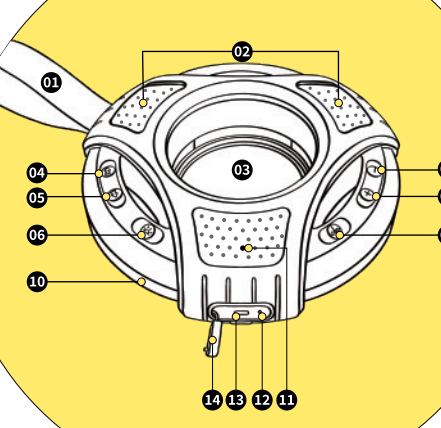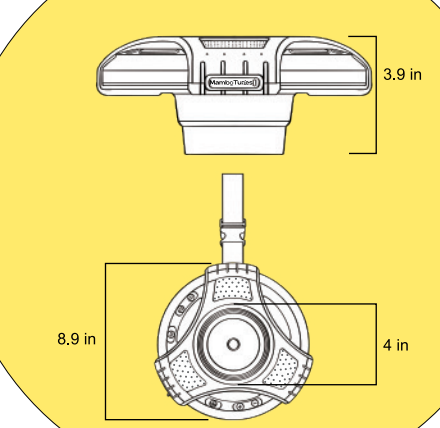

- 01 Detachable Carry Strap
- 02 Speaker
- 03 Cup Holder
- 04 Previous Track Button
- 05 Next Track Button
- 06 Strip Light Mode Button
- 07 Power On/Off Switch
- 08 Volume Up Button
- 09 Volume Down Button
- 10 Strip Light
- 11 Microphone
- 12 Charging Status Indicator
- 13 USB-C Charging Port
- 14 Waterproof Plug

USAGE INSTRUCTIONS FOR CUP HOLDER

FUNCTION DESCRIPTION

- Floating Structure: 9-inch circular buoyancy base supports a total weight of speaker + cup holder up to 1.2 lbs.

Cup Holder Specifications:

- Foldable design, 2 inches thickness when folded.
- Weight Capacity: 1.2 lbs when floating in water.
 - Maximum beverage height in cup: ≤4.5 inches, ≤550 ml.
 - Maximum cup height: ≤6 inches.
- Compatible Cup Size: Bottom diameter ≤2.91 inches.

OPERATION STEPS

- Unfold the Cup Holder: Push the top of the cup holder downward with a cup or hand until fully extended.

- Place Beverage: Insert the cup bottom into the silicone holder, ensuring it fits and sits horizontally.
- Fold the Cup Holder: Push upward from the bottom of the holder and fold inward until parallel to the speaker base (avoid forcing it).

WARNING

CHILD SAFETY:

- Never wrap the strap around children's necks or limbs.
- Use under adult supervision. Not a swimming aid or toy.

ELECTRICAL SAFETY:

- Do not charge while submerged or in high heat (input: 5V±0.5V, 2A max).

WATERPROOF LIMITATIONS:

- For freshwater use only. Rinse with clean water and air-dry completely (≥2 hours) after saltwater or chlorinated water exposure.

- Do not submerge for more than 30 minutes dive with it.

HIGH - TEMPERATURE ENVIRONMENT:

- Avoid hot surfaces (e.g., near grills).
- Operating temperature: 14°F-49°F (-10°C-45°C).

CUPS AND CUP HOLDER RELATED:

- Overfilled cups or exceeding weight limits may cause tipping.
- Before placing the speaker in water, please test-fit the cup into the cup holder on land to ensure the cup sits securely in the holder.

- Cups with sharp protrusions or sharp accessories may scratch the silicone cup holder. Once the cup holder is damaged, it cannot be replaced and will no longer function as intended.
- Inspect the carry strap regularly; replace immediately if any cracks are found.

PACKAGE CONTENTS

ITEM	QUANTITY
MAMBOTUNES Floating Speaker with Cup Holder and Carry Strap	1
USB-C Charging Cable	1
User Manual	1

封底

封面背面

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.