

蓝牙耳机

80G书写纸 单色双面印刷 80*80mm 扇贝折首 6页5折

正面



H8

开放式蓝牙耳机
使用说明书

产品参数

产品名称	开放式蓝牙耳机	耳机电池容量	50mAh
产品型号	H8	输入	360mA
无线版本	V5.4	播放时间	≈10H
传输距离	≥10M	待机时间	≈200H
驱动单元	13mm	充电时间	≈2H
频 响	20~20KHz	产品净重	90g
阻 抗	20Ω	充电仓尺寸	73*66*25mm
额定功率	10mW		
充电仓电池容量	500mAh		

产品使用操作说明

触摸屏上基本操作设置:双击亮屏(向右滑动解锁)

- 1.上一曲/播放/下一曲
- 2.音量加/减
- 3.均衡器(标准、摇滚、流行、经典、爵士)
- 4.定时闹钟(短时间定时)
- 5.屏幕亮度调节
- 6.多国语言切换
- 7.触摸灵敏度
- 8.找到我的耳机(耳机发出刺耳的声音,方便找到)
- 9.时间/日期设置
- 10.下一个视频 点赞 上一个视频
- 11.拍照(远距离点击手机拍照)
- 12.灯光(夜间开启灯光)
- 13.快捷功能:
亮屏/熄屏(单击按键);关机/重启/恢复出厂设置(双击按键,关机后需要长按10秒或充电才能开机)

操作方式

- 开机:打开充电盒盖开机
- 关机:耳机放入充电盒中,并且关闭充电盒盖关机
- 播放/暂停:左/右耳双击
- 上一曲:左耳三击
- 接听/挂断:左/右耳双击
- 拒接:左/右耳长按2S
- 音量加:右耳单击
- 音量减:左耳单击
- Siri开/关:长按左或右耳2S
- 充电仓显示屏显示来电提示:可拒接/接听



无线连接时注意事项

1. 请将无线耳机和手机(或其他连接设备)的距离控制在1米的范围内,越近越好;
2. 可将耳机放在充电盒中,打开充电盒盖即可连接;
3. 耳机从充电盒中取出连接时,确保左右耳机已连接;
4. 连接过程中请勿关闭充电盒盖
5. 充电盒需要有足够电量,如开盖耳机不能开机,请将耳机放入充电盒中,关盒盖插上充电器最少充电1.5小时以上;

***注意事项**

温度/湿度范围:产品在干燥通风的室内,应避免与腐蚀性物质接触,远离火源及热源。
产品在储存过程中每3个月充电1次。工作:0~40℃ 存储:-10~45℃ 工作湿度:小于70% 存储湿度:小于70%

产品使用时警告事项及注意事项:1.切勿使用具有腐蚀性的清洁剂清理本产品。
2.切勿让本产品加热或靠近火源,如煮食炉。3.切勿让本产品长时间受阳光直接照射。
4.切勿将本产品放置于水中,避免发生操作。5.切勿尝试拆开本产品作出任何修改,因为它并不包含任何维修组件。
6.切勿在雨中使用本产品。7.如果长时期内不打算使用本产品,请您将它储存在干燥的环境中,并每月至少为耳机充电一次以延长寿命,避免极端的温度和灰尘。

***注意事项**

- 1.不要在高温、高湿、高粉尘、高电磁辐射及雷电环境下使用本品;
- 2.不要使用非原装充电器充电;3.充电时间不超过3小时;
- 4.长时间不用时每隔60天补充充电一次;5.长时间使用时音量不要超过60分贝,以免损伤听力;
- 6.不可随意拆卸,否则不保修;7.产品寿命到期后可送往专业回收机构,请勿随意丢弃,以免污染环境;

安全守则

① 不管任何时候都不要拆开的蓝牙耳机,因为这样做可能损坏你的蓝牙耳机或导致电池自燃。
② 请把蓝牙耳机带到指定的维修服务点维修,或更换电池。
③ 当你戴着蓝牙耳机开车时,请遵守你在国家或地区的规定。
④ 避免把蓝牙耳机放在高温环境(高于50°C/122°F),比如放在太阳下暴晒,这会损坏蓝牙性能,减少电池寿命。
⑤ 不要使蓝牙耳机淋雨或浸于液体之中。
⑥ 长时间高音量使用耳机可能会损伤你的听力。

常见问题及其解决方法

问题描述	造成原因	问题解决方法
不开机	电池电量耗尽	用充电器充满电即可
不充电	充电插头没插好	把充电插头重新插入
不关机	误操作导致耳机程序出错	用充电器充电复位即可
搜索不到或配对失败	耳机没有进入配对状态	将耳机进入配对状态
	手机蓝牙应用程序出错	关掉手机重新开始配对

产品中有害物质的名称及含量

部件	有害物质					
名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
机芯	○	○	○	○	○	○
电路板	○	○	○	○	○	○
外壳	○	○	○	○	○	○

本表依据SJ/T 11364的规定编制。
○:表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定的限量要求以下。
X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T26572规定的限量要求。

保修条例

本产品有效保修期为自出售之日起一年内,在保修期间内正常使用和维护的情况下,机器本身材料的功能出现问题,发生故障,经证实,本公司将提供免费修理及更换零件。

本产品的保修不适用于: A. 耳机已超出保修期; B. 用户未按照说明指南要求,造成耳机损坏,外壳破裂; C. 未经本公司授权自行拆修、修理、改动结构; D. 无法提供保修卡及消费凭证; E. 因自然灾害等不可抗力(如地震、火灾)原因造成的产品故障或损害; F. 保修服务不包含产品运输费用及在不提供上门服务

保修反馈表(勾选)

A. 耳机无声音 B. 音质变差 C. 按键无法操作 D. 无法配对设备
E. 无法充电 F. 其他

用户购买时间 _____

购买的经销商 _____

问题出现时间 _____

用户联系方式 _____

反面



H8

OPEN-EAR WIRELESS EARBUDS
INSTRUCTION MANUAL

Parameter

Product Name	OPEN EAR WIRELESS EARBUDS	Earbud Battery Capacity	50mAh
Product Model	H8	Input	360mA
Wireless Version	V5.4	Play Time	≈10H
Transmission Distance	≥10M	Standby Time	≈200H
Driver Unit	13mm	Charging Time	≈2H
Frequency Response	20~20KHz	Net Weight	90g
Impedance	20Ω	Charging Case Size	73*66*25mm
Rated Power	10mW		
Charging Case Battery Capacity	500mAh		

Product Operation Instructions

Basic Operations Settings on the Touch Screen: Double-tap to wake up (slide right to unlock)

1. Previous track/Play/Next track
2. Volume up/down
3. Equalizer (standard, rock, pop, classical, jazz)
4. Timer & alarm (short-time timing)
5. Screen brightness adjustment
6. Language switch
7. Lock screen wallpaper replacement
8. Find my earbuds(earbuds will emit a piercing sound)
9. Time/Date setting
10. Next video, like, previous video
11. Take a photo (take a photo remotely)
12. Light (illuminate at night)
13. Charging case button functions: Case button function: Press the charging case button twice to choose among Shutdown, Restart and Restore Factory Settings. After shutting down, users need to press and hold the button for 10s or charge the case to turn it back on.

Operation Method

- Power on: Open the charging case lid to power on
- Power off: Place the earbuds in the charging case and close the lid to power off
- Play/Pause/Left/Right Ear Double Tap
- Previous/Left Ear Triple Tap
- Next song: triple tap on the right ear
- Answer/hang up: double-tap on the left/right ear
- Reject/Left/Right ear long press 2S
- Volume up: right ear click
- Volume down: Left ear click
- Siri on/off: Long press the L/R ears for 2S
- Incoming call prompt on the charging case display screen: Can reject/answer



Precautions for Wireless Connection

1. Please keep the distance between the wireless earbud and your phone (or other wireless devices) within 1 meter, and the closer the better;
2. Make sure the earbuds are placed in the charging case. Open the charging case and it will start connecting with devices;
3. When the earbuds are taken out of the charging case, make sure that the left and right earbuds are connected;
4. Do not close the charging case cover during connection;
5. Make sure that the charging case is of enough power. If the earbuds cannot be powered on when opening the charging case, then put them back in the charging case and plug in the charger to charge for at least 1.5 hours.

Temperature/humidity range

Place the product in a dry and ventilated space, avoid contact with corrosive substances, and keep away from fire and heat sources. The product should be charged once every 3 months during storage.
Working Temperature: 0~40℃ Storage Temperature: -10~45℃
Working humidity: Less than 70% Storage humidity: Less than 70%

Warnings:

1. Do not use any abrasive detergent to clean this product.
2. Do not heat this product or keep it close to a fire source, such as a cooking stove.
3. Do not expose this product to direct sunlight for a long time.
4. Do not dispose of this product in the fire to avoid explosion.
5. Do not try to disassemble this product to make any modifications, for it does not contain any maintenance components.
6. Do not use this product in the rain.
7. If the product is not for use for a long period of time, please store it in a dry environment, and charge it at least once a month to extend its life and avoid extreme temperatures and dust.

Cautions

1. Do not use this product under high temperature or environment of high humidity, high cold, high dust, high electromagnetic radiation and lightning conditions;
2. Do not use non-original charging accessories to charge;
3. Charging time does not exceed 3H;
4. Recharge every 60 days when not in use for a long time;
5. Do not exceed 60 decibels when used for a long time to avoid hearing damage;
6. Do not disassemble at will, otherwise no warranty;
7. After the product has expired, it can be sent to a professional recycling agency. Do not drop it at will, so as not to pollute the environment.

General Safety Information

① Do not attempt to disassemble the earbud to avoid damaging your earbud or causing battery spontaneous combustion. Ask authorized maintenance service for help.
② If you use the earbud while driving, follow your local regulations.
③ Do not place this wireless earbud in high temperatures (above 50°C /122°F), for example, exposure to the sun, to avoid damaging its wireless performance or reducing its battery life.
④ Do not leave the earbud in moisture or soak it in liquids.
⑤ Using the earbud at high volume for a long time may damage your hearing.

Troubleshooting

Problems	Causes	Solutions
Cannot Power on	Dead battery	Charge the earbud
Cannot charge	The charger plug was not connected firmly or correctly	Replug the charger
Cannot Power off	Incorrect operation led to an error in the earbud program	Use the charger to charge and reset
Cannot be searched (or paired)	The earbud did not enter the pairing state Certain phone's wireless application program went wrong	Let the earbud go into pairing mode Power off and pair with the earbud one more time

Name and composition of hazardous substances in the product

Components	Hazardous substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Movement	○	○	○	○	○	○
PCBA	○	○	○	○	○	○
Shell	○	○	○	○	○	○

This table is prepared in accordance with the provisions of SJ/T 11364.
○: Indicates that said hazardous substance in all of the homogeneous materials for this part is below the limit requirement of GB/T26572.
X: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T26572.

This product is covered under warranty for a period of one year from the date of sale limited to normal use and maintenance of the machine parts, materials and functions. Problems and failures verified upon further identification will be provided free repair and replacement parts.

This warranty does not apply:

(A) to a product that is out of warranty;
(B) to damage caused by operating the product outside the permitted or intended uses described;
(C) to a product that has been disassembled, repaired or modified without the authorization;
(D) if warranty card and proof of purchase cannot be presented;
(E) to damage caused by earthquake, fire or other external causes, natural disasters, etc.

Note: The warranty does not include product transport costs and does not provide on-site maintenance services.

Warranty Feedback Form(Tick Off)

A. No sound B. Sound quality deteriorates C. Button mal-function D. Unable to pair other devices E. Can not be recharged F. Others

Buying time _____

Dealers of sale _____

Time of problems _____

User's contact info _____

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.