

TWS蓝牙耳机

[illegible]

呼出手机 显示数字	连续按下，则屏幕在基频锁20秒后， 显示欠费通知信息（请充值后拨打）。	/	"喂"
耳机充电指示	耳机充电，每15分钟显示1次， 5次后熄灭。	耳机红灯闪烁	提示音 "battery low"
满电提示	连续语音提示，语音为充电耳机满电提示。 充电时，耳机充电灯常亮，满电后熄灭并显示 充电信息。插座、蓝牙耳机等不在此列。	红灯长亮5秒钟	提示音 "power off"
耳机充电	耳机插入充电仓内充电，耳机充电指示灯长亮，耳机充满指示灯熄灭。		
耳机充电提醒	耳机插入充电仓内未充电，充电仓白色指示灯常亮。耳机充满充满充电指示灯熄灭。		
充电仓充电	充电仓插入充电底座充电，充电底座上指示灯常亮5秒后绿灯闪烁进行充电，充电仓充满时 灯熄灭，充电底座灯熄灭。		

喇叭灵敏度:125dB ± 3dB
喇叭阻抗:16Ω ± 15%

喇叭灵敏度: 125dB $\pm$ 3dB
喇叭阻抗: 16 Ω $\pm$ 15%
喇叭额定功率: 10 mW
充电接口: USB Type-C
充电仓充电时间: $\approx$ 1.5 小时

故障	原因	解决方法
不开机	耳机电量不足	对耳机进行充电
耳机没灯显示	耳机电量不足	对耳机进行充电
光电无提示	耳机没有放好	调整耳机放置的位置
自动关机	耳机电量不足	对耳机进行充电
耳机有回音	蓝牙大造成串扰太严重	调节音量或更换环境
耳机有杂音	外界干扰严重造成蓝牙手机干扰	调整地点或靠近手机
对方声音小	蓝牙耳机距离不够或音量太小	调节耳机距离或音量大小
连接不稳定	外界干扰严重造成蓝牙手机干扰	调整蓝牙手机的连接或靠近手机

[illegible]

True Wireless Stereo

Power on	When the headset is in the charging case, the power button on the left earbud can be used to turn on the headset. The headset will be in the standby state after the power button is pressed for 2 seconds to turn on the headset.	Make the light flash red for 5 seconds to turn on the headset.	Press the power button on the left earbud for 2 seconds to turn on the headset.
Shutdown	Press the power button on the left earbud for 5 seconds to turn off the headset. The headset will be in the standby state after the power button is pressed for 5 seconds to turn off the headset.	The light will flash red for 15 seconds to turn off the headset.	Press the power button on the left earbud for 5 seconds to turn off the headset.
Device pairing	Turn on the headset, and then left and right headsets will automatically connect to the paired device.	The main earbud flashes red alternately, and the light on the earbud turns on.	Press and hold the power button on the left earbud for 5 seconds to enter pairing mode.
Device Connection	Open the Bluetooth device, search for "4620" to connect. Connect successfully	Light off	Press the power button on the left earbud for 5 seconds to disconnect the headset.
Disconnect	When the headset is in the charging case, the power button on the left earbud can be used to disconnect the headset. The headset will be in the standby state after the power button is pressed for 2 seconds to disconnect the headset.	The main earbud flashes red alternately, and the light on the earbud turns on.	Press and hold the power button on the left earbud for 5 seconds to disconnect the headset.
Play/Pause	Press the play/pause button on the left earbud to play/pause the music. The headset will be in the standby state after the play/pause button is pressed for 2 seconds to play/pause the music.		/
Up and down	After the music player is started, click the up/down button on the left earbud to increase/decrease the volume. The headset will be in the standby state after the up/down button is pressed for 2 seconds to increase/decrease the volume.		/
Reject call	When the headset is in the charging case, the power button on the left earbud can be used to reject the call. The headset will be in the standby state after the power button is pressed for 2 seconds to reject the call.		/
Volume	Press the volume up/down button on the left earbud to increase/decrease the volume. The headset will be in the standby state after the volume up/down button is pressed for 2 seconds to increase/decrease the volume.		/
Volume	When connected, click the left ear earbud to adjust the volume. The headset will be in the standby state after the left ear earbud is pressed for 2 seconds to adjust the volume.		Press and hold the power button on the left earbud for 5 seconds to enter pairing mode.

Call out the USB voice assistant	In connected state, press and hold the voice assistant button (located on the right side of the headset) to activate voice assistant (see music data)	"dnn"
Headphones to battery reserves	The headset battery is low, and, if the battery level is not restored by the time the headset will be turned on, the headset will not start	Headphones flash red light quickly
Clear pairing	When not connected to a device, press and hold the voice assistant button (located on the right side of the headset) for 10 seconds. The headset will be cleared of all pairing information and will not be able to be paired on any other device	Prompt tone "power off"
Headphones charging	Put the earphones into the charging case and close the cover. The LED indicator on the front of the case will light up when the case is charging. The LED indicator will turn off when the case is fully charged	The light starts to flash on the LED indicator
Charging in the charging case	Put the earphones into the charging case and close the cover. The LED indicator on the front of the case will light up when the case is charging. The LED indicator will turn off when the case is fully charged	Prompt tone "power off"
Charging in the charging case	Put the earphones into the charging case and close the cover. The LED indicator on the front of the case will light up when the case is charging. The LED indicator will turn off when the case is fully charged	Prompt tone "power off"

Horn sensitivity: 125dB $\pm$ 3dB
Horn impedance: 16 Ω $\pm$ 15%
Horn rated power: 10mW
Charging interface: USB Type-C
Charging time of charging bin: $\approx$ 1.5 hours

Troubleshoot	Reason	Solutions
Noct On	The headset is low on power	Charge the headphones
Headphones flash white	The headset is low on power	Charge the headphones
Charging not prompt	The headphones are not in place	Adjust the position of the headphones
Automatic shutdown	The headset is low on power	Charge the headphones
Headphones are not working	Use the headset in turn-off or in the environment in a low power	Adjust the headset or change the environment
Headphones are not working	Use the headset in turn-off or in the environment in a low power	Adjust the headset or change the environment
The other side is quiet	The headset is low on power	Charge the headphones
The signal is intermittent	The headset is low on power	Charge the headphones

[illegible]

WARNING

1. Please follow the contents of this manual to avoid damage to the product due to incorrect operation.
2. Please keep this product away from children, fire, heat, freezing, water and chemicals.
3. Please do not listen at high volume for a long time to avoid adverse effects on hearing.
4. Do not immerse the product and accessories in any liquid or rinse the product with water.
5. Please do not touch the product with wet hands.
6. Please do not place the product in the sun or high temperature. High temperature will shorten the service life of electronic components, damage the battery, and deform the product.
7. Please do not store this product in a dusty place where the temperature and humidity are high.
8. Please do not touch the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe to be damaged.
9. Please do not put more pressure on the product, or disassemble, smash or shake the product.
10. Please do not use this product near the heat source, such as radiators, hot air exhausters, or other instruments that generate heat.
11. Please do not block the opening of this product, such as the charging port.

in the rain or moisture, and when you exercise strenuously or sweat a lot, so as to prevent liquid from penetrating into the interior of the product and damaging the product.

13. The product belongs to the built-in polymer battery and cannot be replaced. Please do not throw it away or put it in the fire to avoid explosion, fire and other dangers.

14. If the consumer violates the above warning and does not use it properly, the personal and property damage will be borne by itself. The company will not

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.