

使用说明书

M09

夹耳式 蓝牙耳机

产品结构图



像佩戴耳夹一样将夹耳式耳机夹在耳廓上，佩戴好后调整耳机的位置直至调整到最舒适为清晰的位置。

包装清单

耳机x1对
充电仓x1pcs
Type-C充电线 x1pcs
说明书x1pcs

产品操作介绍

功能	操作	指示灯	提示音
配对名	M09		
开机	耳机从仓里拿出，耳机自动开机。耳机开机状态长触触按键3秒开机。	冰蓝灯闪烁3次	提示音 "power on"
关机	耳机放回充电仓内合盖，耳机自动关机。	白灯长亮15熄灭	提示音 "power off"
设备配对	耳机开机，左右耳机自动互通后进入设备配对状态。	主耳白冰蓝交替闪烁，副耳熄灭	提示音 "pairing"
设备连接	打开蓝牙设备，搜索" M09 "进行连接，连接成功。	指示灯熄灭	提示音 "connected"
断开连接	耳机超出蓝牙信号范围，耳机与设备断开配对成功。此时耳机电量设备旁显示红色信号。耳机超出5分钟未连接左/右耳机自动关机。	主耳白冰蓝交替闪烁，副耳熄灭	提示音 "disconnected"
播放/暂停	音乐播放键启动后，双击左/右耳触按键。	/	/
上下曲	音乐播放键启动后，三击左耳上一曲，三击右耳下一曲。	/	/
接听来电	来电状态，双击左或右耳触按键。	/	/
拒接来电	来电状态，长按左或右耳触按键25拒接来电。	/	/
音量+	播放状态下，单击右耳耳触按键音量+，最大提示音。	/	提示音 "铃铃"
音量-	播放状态下，单击左耳耳触按键音量-，最小提示音。	/	提示音 "铃铃"

呼出手机 语音助手	连接状态下，长按左或右耳触按键25秒。	/	"咚"
耳机电量提示	耳机电量低，每1分钟连续提示音1次，5次后关机。	耳灯白灯快闪	提示音 "battery low"
清除配对	未连接设备状态，连续左右耳耳触按键5次后左、右耳机关。（清除配对和连接时所有信息）（单耳、双耳都可以操作）	白灯长亮15熄灭	提示音 "power off"
耳机充电	耳机放入充电仓内，耳机开始充电白灯长亮，耳机充满指示灯熄灭。		
充电仓给耳机充电	耳机放入充电仓内，充电仓白灯指示常亮，耳机电量充满充电仓指示灯熄灭，充电仓电量显示白灯闪烁。		
充电仓充电	充电仓电量充足过程，请给充电仓插上标准5V电源适配器进行充电，充电仓充电时冰蓝灯闪烁，充满冰蓝灯常亮。		

耳机参数

1.产品名称：夹耳式 蓝牙耳机 型号：M09	7.喇叭灵敏度：125dB ±3dB
2.蓝牙版本：Bluetooth 6.0	8.喇叭阻抗：16Ω ±15%
3.支持模式：AAC/SBC	9.喇叭额定功率：10 mW
4.蓝牙传输距离：10m	10.充电接口：USB Type-C
5.频带频率：402GHz~2.480GHz	11.充电仓充电时间：~1.5小时
6.喇叭频率：20Hz~20KHz	12.充电输入：5V/200mA

简单故障排查

故障	原因	解决方法
不开机	耳机电量不足	对其机进行充电
耳机灯白闪	耳机电量不足	对其机进行充电
充电无提示	耳机没有放好	调整耳机放置的位置
自动关机	耳机电量不足	对其机进行充电
耳机有杂音	音量太大或环境太嘈杂	调节音量至舒适环境
耳机有杂音	外界干扰严重或距离手机太远	更换地点或靠近手机
对方声音小	耳机佩戴不正确或音量太小	调节耳机佩戴或音量大小
信号断续	外界干扰严重或距离手机太远	选择无干扰的环境或靠近手机

安全指引

- 初次使用本产品前，请先充电再使用。
- 产品不宜玩弄，12岁以下儿童应在成人监护下使用。
- 请使用通过正规厂家安全认证的5V/1A充电器，避免支持高压电的快速充电器对产品造成损坏。
- 请在安全的场景下充电，在给充电仓充电时，电量充满后请尽快将充电线拔出，避免长时间充电对电池造成损坏，充电仓的充电方式为Type-C接口。
- 本产品内置不可拆卸的内置锂电池，避免对耳机进行充电和放电时会随时推移而导致电池性能下降，这对于所有可以重复充电电池来说均属于正常现象。
- 本产品带有锂电池，如长时间未使用，请至少一个月充一次。
- 因个体差异原因，如佩戴时感到皮肤不适，请停止佩戴并咨询医生。
- 在蓝牙耳机产品使用时，请将耳机声音调至合适音量大小，以免长期在大量音状态下对听力造成损伤。
- 如果您在从事需集中注意力的活动时使用本产品，应注意自身和他人安全，例如驾车或骑自行车时，在道路、施工现场、铁路或徒步行走时，您应取下耳机或调整音量以确保可以听到周围的声音，包括警报和警告信号。
- 请遵守所在地区或国家的有关规定，驾车时按照要求使用本产品。
- 本产品含有磁性材料，使用或存放产品时，请远离具有强磁场或强磁场的电源，如微波炉、电冰箱等。

- 建议在温度-0℃~+45℃的环境中使用本产品。当环境温度低于 +5℃时，电池性能会受到限制。
- 有明文规定禁止使用无线设备的场所，请勿使用本产品，否则可能干扰其它电子设备或导致其它危险。
- 请勿长时间使用大量接听，以免听力造成不良影响。
- 请勿将产品及附件浸入任何液体或用水冲洗产品，否则会导致火灾或触电危险。
- 请勿将产品放置在太阳直射或者温度高的地方，高温会缩短电子部件的使用寿命，损坏电池，使某些塑料部件变形。
- 请勿将本产品放在尘土多、湿度和湿度过高或过低的地方保存。
- 请勿将磁卡（例如银行卡、公交卡等）长期接触本产品，否则可能导致磁卡被磁场损坏。
- 请勿在本产品上施加较大的压力，或拆卸、拆卸、震动本产品，以防产品损坏。
- 请勿在靠近热源处使用本产品，如散热器、热风调节器、炉灶或其他产生热量的仪器。
- 请勿将本产品产品的开关打开，如充电口、指示灯、麦克风等。
- 请勿在暴雨天气下使用设备，雷暴可能导致设备出现短路，增大电击的风险。
- 请勿将本产品及其配件雨淋或受潮，且激烈运动出汗较多时使用本产品，防止液体渗透到产品内部损坏本产品。
- 产品属于内置聚合物锂电池，不可更换，请勿丢弃或置以火中，以免爆炸、起火等危险发生。
- 如因消费者违反上述警示而不恰当使用所造成的的人身及财产损失将自行承担一切后果本公司将不承担任何法律责任。

警告

- 请遵循本说明书的内容进行使用，避免产品因误操作损坏。
- 本产品请远离儿童、火源、热源、冷冻源、水源及化学品。
- 请勿长时间使用大量接听，以免听力造成不良影响。
- 请勿将产品及附件浸入任何液体或用水冲洗产品，否则会导致火灾或触电危险。
- 请勿将产品放置在太阳直射或者温度高的地方，高温会缩短电子部件的使用寿命，损坏电池，使某些塑料部件变形。
- 请勿将本产品放在尘土多、湿度和湿度过高或过低的地方保存。
- 请勿将磁卡（例如银行卡、公交卡等）长期接触本产品，否则可能导致磁卡被磁场损坏。
- 请勿在本产品上施加较大的压力，或拆卸、拆卸、震动本产品，以防产品损坏。
- 请勿在靠近热源处使用本产品，如散热器、热风调节器、炉灶或其他产生热量的仪器。
- 请勿将本产品产品的开关打开，如充电口、指示灯、麦克风等。
- 请勿在暴雨天气下使用设备，雷暴可能导致设备出现短路，增大电击的风险。
- 请勿将本产品及其配件雨淋或受潮，且激烈运动出汗较多时使用本产品，防止液体渗透到产品内部损坏本产品。
- 产品属于内置聚合物锂电池，不可更换，请勿丢弃或置以火中，以免爆炸、起火等危险发生。
- 如因消费者违反上述警示而不恰当使用所造成的的人身及财产损失将自行承担一切后果本公司将不承担任何法律责任。

INSTRUCTION MANUAL

M09

clip-in-ear Bluetooth headphones

PRODUCT STRUCTURE DIAGRAM



The earphones are centered on the corridor as if you were wearing an ear clip. After wearing it, adjust the position of the headphones until they are adjusted to the clearest sound position.

PACKING LIST

Headphones x1 pair
Charging compartment x1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

PRODUCT OPERATION INTRODUCTION

Pairing Name	M09		
Power on	When put the headset out of the charging compartment, the headset will automatically turn on. When the headset is turned off, press and hold the touch button for 3 seconds to turn on.	The white light is always on 15s and goes out.	Prompt sound "power on"
Shutdown	Put the earphones back into the charging case and close the lid, the earphones will automatically shut down.	The main ear alternately flashes white, ice, and blue, and the secondary ear is extinguished.	Prompt sound "power off"
Device pairing	Turn on the headset, and the left and right headsets will automatically connect to each other and enter.		Prompt sound "pairing"
Device Connection	Open the Bluetooth device, search for "M09" to connect. Connect successfully.	Light off	Prompt sound "connected"
Disconnect	When the headset is out of the Bluetooth signal range, the headset and the device are disconnected and enter pairing mode. At this time, the headset pairing name can be retrieved by other devices. The headset will automatically shut down if the left/right headset is not connected for more than 3 minutes.		Prompt sound "disconnected"
Play/Pause	After the music player is started, double-click the left/right ear touch button.	/	/
Up and down	After the music player is started, triple-click the left ear to play the previous song, and triple-click the right ear to play the next song.	/	/
Answering a call	Incoming call status, double-click the left or right ear touch button.	/	/
Reject call	Incoming call state, long press the left or right ear touch button for 5 seconds to reject the call.	/	/
Volume+	When connected, click the volume + button on the right earphone to adjust the volume to the maximum.	/	Prompt sound "dong dong"
volume-	When connected, click the left ear touch button volume - minimum.	/	Prompt sound "dong dong"

Call out the mobile phone voice assistant	In connected state, press and hold the left or right ear touch button for 2 seconds to start/stop the voice assistant.	/	"dong"
Headphones low battery reminder	The headset battery is low, and a warning tone will be played once every minute. After 5 times, the headset will shut down.	The headphones flash with white light.	Prompt tone "battery low"
Clear Pairing	When not connected to a device, tap the left or right ear touch button 5 times to turn off the left or right earphone (clear all pairing and connection information) (can be operated on one or both ears).	The white light is always on 15s and goes out.	Prompt sound "power off"
Headphones charging	The earphones are placed in the charging compartment, the earphones start to charge, the white light is always on, and the earbuds are full of indicator light and turn off.		
The charging case charges the earphones	The earbuds are placed in the charging compartment, and the white indicator of the charging compartment is solid. The headphones are fully charged and the charging compartment indicator light goes off. The charging compartment battery is low and the white light is flashing.		
Charging in the charging case	When the battery of the charging compartment is too low, please connect the charging compartment to a standard 5V power adapter for charging. The ice blue light flashes when the charging compartment is charging, and the full ice blue light is always on.		

HEADPHONE PARAMETERS

1.Product Name: clip-in-ear Bluetooth headphones. Model: M09	7.horn sensitivity:125dB ±3dB
2.Bluetooth version:Bluetooth 6.0	8.horn impedance:16Ω ±15%
3.Support mode:AAC/SBC	9.Horn rated power:10mW
4.Bluetooth transfer distance:10m	10.Charging interface:USB Type-C
5.Carrier frequency:2.402GHz~2.480GHz	11.Charging time of charging bin: ~1.5 hours
6.Frequency response range:20Hz~20KHz	12.Input:DC 5V/200mA

SIMPLE TROUBLESHOOTING

Fault	Reason	Solutions
Not On	The headset is low on power	Charge the headphones
Headphones flash white	The headset is low on power	Charge the headphones
Charging no prompt	The headphones are not in place	Adjust the position of the headphones
Automatic shutdown	The headset is low on power	Charge the headphones
The headphones are not in place	The volume is too loud or the headphones are not in place	Adjust the volume or change the headphones
There is a noise in the ear	The headphones are not in place	Change location or close to the headphones
The other side is quiet	The headphones are not in place	Adjust the volume or change the headphones
The signal is intermittent	The headphones are not in place	Change location or close to the headphones

SAFETY GUIDELINES

- Please fully charge before first using this product.
- The product is not a toy, and children under the age of 12 must be used under adult supervision.
- Please use a 5V/1A charger certified by a formal manufacturer to avoid damage to the product caused by fast charging chargers that support high voltage.
- Please charge in a safe environment. When charging the charging compartment, please unplug the charging cable as soon as possible after the charge is full to avoid damage to the battery caused by long-term charging. The charging case is charged by Type-C interface.
- This product has a built-in non-removable rechargeable battery. Repeated charging and discharging headphones will reduce battery performance over time, which is normal for all rechargeable batteries.
- This product comes with a reasonable battery. If it has not been used for a long time, please charge it at least once a month.
- For individual differences, if you feel uncomfortable when wearing it, please stop wearing it and consult your doctor.
- When Bluetooth is connected to this product, please adjust the sound of the headphones to the appropriate volume to avoid damage to hearing in a high volume for a long time.
- If you use this product when engaging in activities that require concentration, you should pay attention to your own safety and that of others, such as driving or cycling, on roads, construction sites, railways, or walking on foot. You should remove the headphones or adjust the volume to ensure that the surrounding sounds, including alarms and warning signals, can be heard.
- Please abide by the relevant regulations of your region or country and use this product as required when driving.
- This product contains magnetic materials. When using or placing the product, please stay away from electrical appliances with strong magnetic or electric fields, such as microwave ovens, refrigerators, etc.
- It is recommended to use this product in an environment with a temperature of

- 0℃~+45℃. When the ambient temperature is below +5℃, the battery performance will be limited.
- In places where the use of wireless devices is clearly prohibited, please do not use this product, otherwise it will interfere with other electronic devices or cause other dangers.
 - Before being close to medical and industrial equipment or boarding the plane, please consult the local staff if it can be used.
 - Before cleaning and maintaining this product, please stop using this product, turn off all applications, and disconnect all connections or cables from other devices.
 - Please dispose of waste electronic products correctly in accordance with local laws and regulations, and do not dispose of electronic and electrical equipment, components, batteries and other household waste.

WARNING

- Please follow the contents of this manual to avoid damage to the product due to incorrect operation.
- Please keep this product away from children, fire, heat, freezing, water and chemicals.
- Please do not listen at high volume for a long time to avoid adverse effects on hearing.
- Do not immerse the product and accessories in any liquid or rinse the product with water, otherwise it will cause fire or electric shock.
- Please do not place the product in the sun or high temperature. High temperature will shorten the service life of electronic components, damage the battery, and deform some plastic parts.
- Please do not store this product in a dusty place where the temperature and humidity are too high or too low.
- Please do not touch the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, otherwise it may cause the magnetic stripe card to be damaged by the magnetic field.
- Please do not put more pressure on this product, or disassemble, smash or shake the product to prevent damage to the product.
- Please do not use this product near the heat source, such as radiators, hot air regulators, stoves or other instruments that generate heat.
- Please do not block the opening of this product, such as the charging port, indicator light, microphone, etc.
- Please do not use the equipment in heavy rain. Thunderstorms may cause equipment failure and increase the risk of electric shock.
- Please avoid using this product when this product and its accessories are wet or the rain or moisture, and when you exercise strenuously or sweat a lot so as to prevent liquid from penetrating into the interior of the product and damaging the product.
- The product belongs to the built-in polymer battery and cannot be replaced. Please do not throw it away or put it in the fire to avoid explosion, fire and other dangers.
- If the consumer violates the above warning and does not use it properly, the personal and property damage will be borne by itself. The company will not incur any legal responsibility.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.