 


Instruction Manual

Portable Video Radio


Model: SM-617

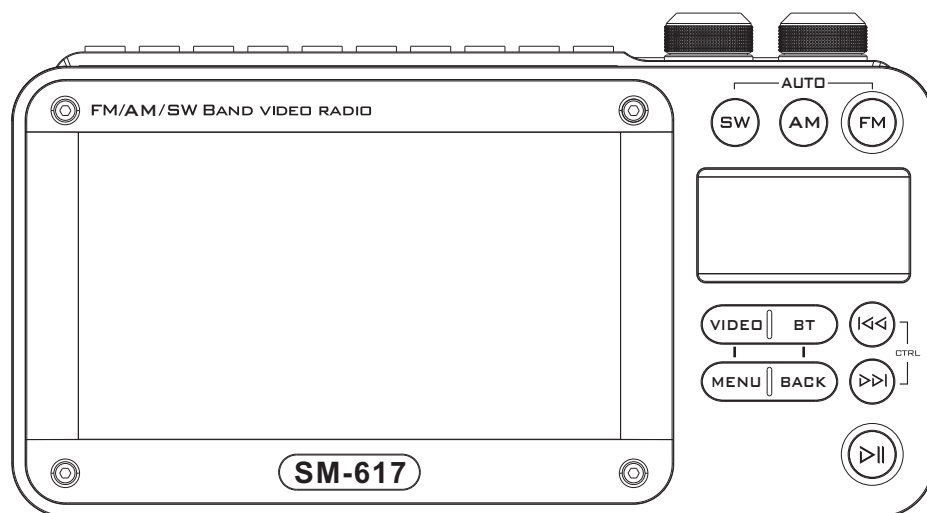

IMPORTANT SAFEGUARDS:

1. Do not allow water to spill onto the surface or into the product.
2. This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or a lack of experience and knowledge unless they are supervised or given instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure they do not play with the unit.
4. If the product surface is damaged or if there is a mechanical or electrical malfunction, do not use the unit. Contact the authorized service center immediately.
5. Do not shake the unit.
6. Do not place the unit in the water.
7. Do not place the product in direct heat. This unit is to be placed in a dry and ventilated place.
8. Do not place heavy objects on the unit.
9. If the battery is completely flat, connect the USB charging cable to charge the unit. Please note that the unit may not work properly for the first couple of minutes of charging.

PARTS INTRODUCTION:

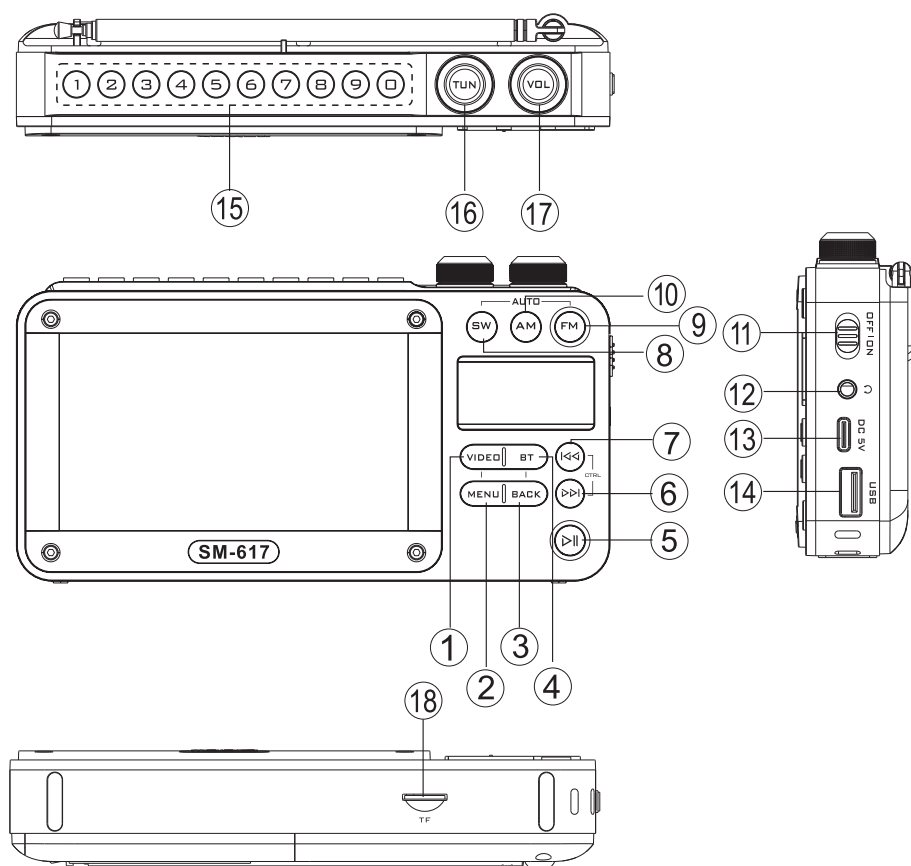

1. **Video Button:** Short-press the Video Button to switch to Video mode; During Video mode, short-press the Video Button to power on/ off the Video display.
2. **Menu Button:** During Video mode, short-press the Menu Button to view the file information, and select the play mode, etc.
3. **Back Button:** Short-press the Back Button to return from the current pager to the previous page.
4. **BT Button:** Short-press to Bluetooth mode.
5. **▶|| (Play/Pause) Button:** When playing music, short press to play and pause.
6. **▶▶ (Next Track) Button:** During Video mode and music playing mode, short-press the next track. Long press to fast-forward, short press again to exist fast-forward. In Radio mode, short press to next radio station.
7. **◀◀ (Previous Track) Button:** During Video mode and music playing mode, short-press the previous track. Long press to rewind, then short press again to exit rewind. In Radio mode, short-press the previous radio station.
8. **SW Button:** Short press to enter SW, long press to start to search SW stations automatically.
9. **FM Button:** Short press to enter FM, long press to start to search FM stations automatically.
10. **AM Button:** Short press to enter AM, long press to start to search AM stations automatically.
11. **Power ON/OFF Switch**
12. **Earphone Jack**
13. **DC 5V Charging Port**

14. **USB Port:** For reading USB Flash Drive, playing music, video, E-books, images, and other files.
15. **1-0 Number Keys:** Select the track by using a single number button and a combination of numbers. In Radio mode, select the desired stations.
16. **Tuning Button:** Search and select the radio stations for FM, SW/AM.
17. **Volume Button**
18. **TF (Micro SD) Slot:** For reading TF cards, play music, audio, E-books, images, and other files.

Power On:

Open the Battery compartment, put into 3 pcs rechargeable batteries, and make sure it is in the correct direction based on the "+" or "-" polarity; otherwise, the unit will not work. Push the Power button to the "ON" position, and the device will go into Bluetooth mode. Then you can select your desired function.

◆ Charging:

Connect the small plug from the supplied USB charging cable into the DC 5V (TYPE C) Port on the unit. Connect the full-size USB plug to the USB port on another USB power source, such as a DC 5V adapter, PC/MAC USB port, etc. The battery on the LED display screen will blink during charging and will keep the light on when the charge is finished.

◆ About Recharge Battery:

This item uses 3 pieces of 18650 lithium batteries (included). When installing the battery, pay attention to the direction of the battery. You can also use the same type and model batteries to replace them. Please remove the battery from the unit and keep it properly if the unit is not in use for a long time.

Due to the limited lifespan of batteries, we do not provide warranty for them.

Bluetooth Connection

Push the Power ON/OFF switch to the ON position to power on the unit. "BLUE" will blink on the LED display screen. Search for "SM-617" on your cell phone or tablet to pair it. The unit will stop blinking once it is paired.

FM/SW/AM Operation

- 1) Power on the unit and press the FM (SW/MW) button, and enter to FM (SW/MW) mode.

- 2) Turn the Turning Button or Number keys to select different stations. Or you can long press FM (SW/MW) button for a few seconds, the unit will automatically to search and store all available stations then play the first store station.

Please note that you can not delete stored radio stations or manually store radio stations.

Video Play



Power on the unit, short-press the Video button, and you will see the startup video. Wait for a few seconds to enter video mode. Insert a USB flash or TF (Micro SD) Card that already stores video files into the USB/Micro SD (TF) Card Slot. Then you can play your video or drama.

- 1) Short press ►► or ◀◀ Button to select the video shown on the screen.
 - 2) Short press ►|| Button to start playing the selected video
 - 3) During video playing, long press ►► or ◀◀ Button to fast-forward or rewind, then short press press ►► or ◀◀ or ►|| Button again to exit fast-forward or rewind.
- ◆ The video radio doesn't have build-in memory, it supports min 16GB - max 128GB FAT32 format USB Flash Drive or TF card.
 - ◆ Support full format 720P high-definition video playback; RM, H264, Xvid, Mpeg2 max support 1080P.
 - ◆ H.264HPhigh bit rate decoding: RM, AVI, MKV, VOB, MOV, FLV, ASF, DAT, MP4, 3GP, MPG, MPEG, etc.
 - ◆ **IMPORTANT:** If the video radio couldn't play your video or pictures look atrocious, it means it is not compatible with the video or pictures. You have to change the video format to HD720P or (MP4 format HD720P).

Some Video Converter Software Suggestion: (Online-audio-converter or Convertio), or some video converter software that you are familiar with it.


Music Play



Power on the unit, short-press the Video button, and you will see the startup video. Wait for a few seconds to enter video mode. Insert a USB flash or TF (Micro SD) Card that already stores mp3 music files into the USB/Micro SD (TF) Card Slot. Then you can play your mp3 music.

- 1) Short press ►► or ◀◀ Button to select the mp3 music shown on the screen.
 - 2) Short press ►|| Button to start play mp3 music.
 - 3) During Music playing, long press ►► or ◀◀ Button to fast-forward or rewind, then short press ►► or ◀◀ or ►|| Button again to exit fast-forward or rewind.
- ◆ Support MP3, WAV, OGG, APE, FLAC format music playback. Support lyrics display and need to download the “LRC” lyric file.

 E-books Display

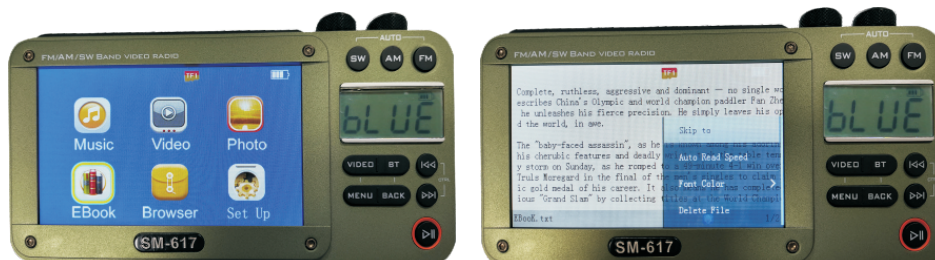

Power on the unit, short-press the Video button, and you will see the startup video. Wait for a few seconds to enter video mode. Insert a USB flash or TF (Micro SD) Card that already stores E-books in a TXT file into the USB/Micro SD (TF) Card slot.

- 1) Short press ►► or ◀◀ Button to select the “E-BOOKS” shown on the screen.
- 2) Short press ►|| Button to start display E-books which stored in the USB/TF card.
- 3) Short press ►► or ◀◀ Button for page turning.
- 4) Short press ►|| Button to enter automatic flipping reading.

Short-press the menu button, set up the automatic reading interval, quickly turn page, and switch fonts and backgrounds.

- ◆ If your text e-book is unread, please transfer it to the standard code “UTF-8”. Open the e-book in text format, select “SAVE AS”, and the code “UTF-8” to save the e-book .
- ◆ Support E-book format: JEP, JPEG, BMP, GIF, PNG, TXT, ANSI

Images Display



Power on the unit, short-press the Video button, and you will see the startup video. Wait for a few seconds to enter video mode. Insert a USB flash or TF (Micro SD) Card that already stores Images into the USB/Micro SD (TF) Card slot.

- 1) Short press ►► or ◀◀ Button to select “Images” showed on the screen.
- 2) Short press ►► Button to start display images.
- 3) Short press ►► or ◀◀ Button for images turning.
- 4) Short press ►► Button to enter automatic images turning (PPT mode).

Short press Menu Button, set up the PPT playing interval, images zooming, view images information, etc.

- ◆ Support JPG, JPED, BMP, GIF, PNG,etc file

Troubleshooting Guide:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No power	The main power switch is not in the ON position	Switch the power to the POWER ON position
/	Battery drained	Recharge the battery, power on later
No sound	Volume level in the minimum position	Rise volume level by turning the VOLUME button
/	Plugged in earphone	Unplug earphone
/	Audio/Video file was damaged	Switch trucks or download the music again
Radios reception effect poor	The radio antenna is not deployed	Pull the radio antenna apart and adjust it to the optimal position

/	Radio frequency deviation	Adjust the frequency to match the radio frequency
/	There are interference devices around this unit	Move the unit away from interference sources, preferably at the window for easy signal reception
/	The unit side on in AM radio mode	Properly place the unit, keeping the unit parallel to the horizon
The video file cannot be played, and there is a splash screen or automatic jump during the playback process	The file format is too large and incompatible	Suggest to use a format conversion tool to convert video files to 720P. Please note that this unit supports H.264 1080P (30Hz)
/	The storage device or stored video file is damaged	Reformatting storage devices; Suggest using FAT32 or EXFAT format to download the video file again
No charging or the light does not light on when charging	If the battery installed properly	Re-install the battery correctly
/	The light does not light on when charging	Re plug and unplug the charging cable, or replace the phone charger and charging cable for testing
Can Not recognize a USB or TF Card		Supports 16-128 GB FAT32 format USB Flash Drive or TF card, testing with different USB or TF card.
Can Not Play Video /MP3/E-Book/Photos		Check if the system supports the format.

Specification:

Speaker: 5W

Input: DC 5V/1A

Driver: 2.5" Dual magnetic horn

Dimension: 162.6*33.5*88.9mm

Package Included:

1* Portable Video Radio

1* TYPE C USB Charging Cable

3*18650 Lithium battery (3*1200mAh)

1* Hand Strip

1* Instruction Manual

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.