


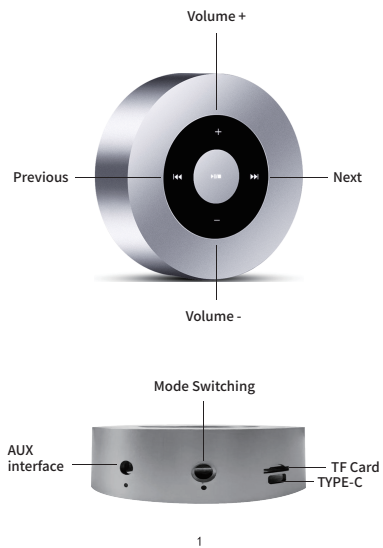

Wireless Pairing Instructions

This speaker supports wireless stereo audio. Your mobile phone or wireless adapter must support the A2DP audio profile.

- Step 1
Press and hold the Power button for approximately 3 seconds to turn on the speaker. Make sure the speaker has sufficient power.
- Step 2
After powering on, the speaker will automatically enter wireless pairing mode and wait for connection.
- Step 3
Turn on wireless on your mobile phone. On most phones, wireless search will begin automatically.
- Step 4
Open your phone's wireless settings and scan for nearby devices.
- Step 5
Select "A8" from the list of available devices. The speaker will enter pairing mode.
- Step 6
If a password is required, enter "0000".
(Only required for wireless version 2.1 or lower. Newer versions do not require a password.)
- Step 7
Pairing will complete automatically. When successfully connected, the wireless icon on your phone will change.

Charging Voltage:USB-C DC5V 1A	Battery: 3.7VDC,800mAh,Li-ion
The Pairing Name: A8	Battery Capacity:800mAh
Charging Input: USB 5V 500mAh	Charging Time: 2H
Operating Range: ≥10M	Supported: A2DP,AVRCP
Output Power: 4Ω5W	Frequency Response: 40Hz-18kHz
Signal Noise Ratio:≥80dB	Distortion Degree: <1%
Unit Weight:276g	Unit Size: Φ85*H30mm

Storage environment: When not in use for a long time, it is recommended to store it in a dry and well-ventilated place with a temperature range of -10°C to 45°C and a humidity range of 30% to 70% to protect the battery. Operating ambient max. 45 °C.

Button Operations

Power / Mode Button

- Press and hold to power on or power off
- Short press to switch modes (Wireless / TF Card / AUX)
- Volume + / Volume -
- Short press to increase or decrease volume
- Previous / Next Track
- Short press to change tracks
- Long press to rewind or fast forward
- Play / Pause
- Short press to play or pause music

Hands Free Calling

When connected in wireless mode:

- Short press the Play/Pause button to answer an incoming call
- Short press again to end the call
- During a call, music playback will pause automatically and resume after the call ends

Charging Instructions

Use the included USB cable to connect the speaker to a USB power source.

- The indicator light will turn on while charging
- The indicator light will turn off when charging is complete

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Instruction Manual MODEL:A8 Brand: DrinKabana



Package Contents

- A8 Wireless Speaker × 1
- Instruction Manual × 1
- AUX Audio Cable × 1
- USB Charging Cable × 1

Charging Limitations and Precautions

1. Charging Limitations Use only the recommended charging cable and adapter provided by the manufacturer.
Do not charge the speaker with voltage or current exceeding the specified limits. Charging time may vary depending on the power source and battery level. The speaker may stop charging automatically once the battery is full to prevent overcharging.
Avoid using the speaker in extreme temperatures (very hot or very cold) while charging, as this can affect battery performance.
2. Precautions During Charging Do not expose the speaker to water or moisture while charging to prevent electric shock or damage.
Place the speaker on a flat, stable, and well-ventilated surface during charging. Avoid covering the speaker, as it may overheat during charging.
Disconnect the charger once the battery is fully charged if prolonged charging is not recommended.
Do not use damaged cables or adapters, as they may cause short circuits or fire hazards.
Keep the device away from flammable materials while charging.
If the speaker becomes unusually hot, emits odor, or shows signs of damage, stop charging immediately and consult customer support.
3. Battery Safety Tips Do not attempt to open, puncture, or modify the battery. Keep the speaker away from direct sunlight and high heat sources.
Charge the speaker regularly to maintain battery health, especially if not used for long periods.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

Improper battery handling may cause leakage, explosion, or fire, leading to burns or toxic exposure. Keep batteries out of reach of children. In case of accidental injury, seek immediate medical attention. This product contains a built-in rechargeable battery, which is not replaceable. When the battery reaches the end of its life, dispose of the entire product properly in accordance with local regulations.

Do not short-circuit, disassemble, or attempt to open the battery. This may cause overheating, fire, or explosion. Never expose the battery to fire or water. Do not expose batteries to mechanical stress. Avoid applying mechanical stress to the battery. Keep the product away from extreme temperatures and direct sunlight, such as near radiators or other heat sources.

DISTRIBUTOR:

Gateway Promotions Group
5 Colonial Hills Drive, Suite 1000
St. Louis, MO 63141
(314) 614-3989
DrinKabana.com

MANUFACTURE:

Huirong Toys and Gifts Co., Limited
No. 480, Youyi Rd., Dengwu Area,
Qiaotou Town, Dongguan City,
Guangdong Province, China