


REMOTE CONTROL ANTENNA MOUNT -WAHOO 68


Installation Instruction

www.bluewingfishing.com

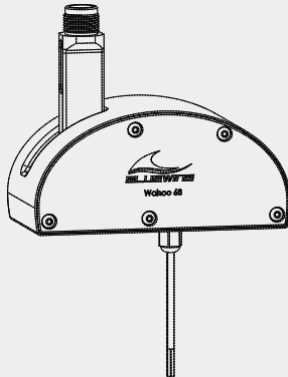

Product Net Weight	3.0 kg
Input Voltage	DC 12/24 V
Power Consumption	10 W
Current	0.4 A
Maximum Power	18 W
Limiting Current	1.5 A

PRODUCT PARTS

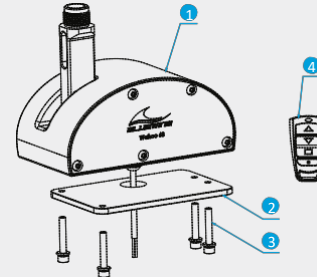

PartNO.	Description	QTY
①	VHF Antenna Mount	1
②	Base Plate	1
③	M6*70Screw	4
④	Remote Control	2

TOOLS REQUIRED


Safety instructions should always be followed when using the product:

- [1] Ensure you are proficient in operating power tools, including drills and saws.
- [2] Select the installation location for your base, confirming that there is adequate space at the mounting site. Verify that the combined thickness of the top plate and backing plate does not exceed 2 inches. If the thickness is greater than 2 inches, please obtain longer screws. The required screw length should equal the thickness of the

top plate plus 6 mm plus 20 mm. Additionally, ensure there is sufficient clearance for the handle; we recommend a minimum radius of 9 inches for optimal comfort and accessibility.


- [3] Utilize marine-grade silicone sealant for waterproofing.
- [4] Prepare masking tape and a pencil for precise marking.
- [5] Have a socket set, hex key set, a 1-inch hole saw, and a 0.276-inch (#70 size) drill bit available for use.

Dimensions shown in mm,
values in [] are in inches.

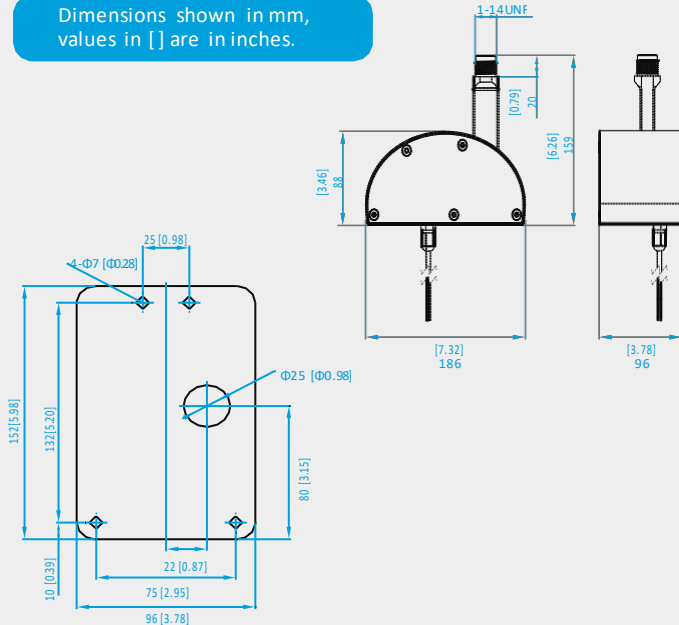

ASSEMBLY INSTRUCTION

STEP 1

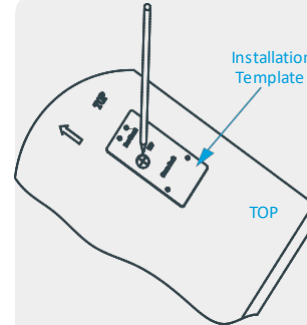


- [1] Using the included installation template, mark the holes for the installation location.
- [2] Use a 1.0 in hole saw and 0.276 in drill bit to create the mounting holes. After drilling, remove the drill mark sticker.

STEP 2

- [1] Apply a marine-grade silicone sealant to the bottom surface of the base to ensure a secure and watertight fit.

- [2] Carefully assemble the base with the top section, ensuring all components align properly. Position the backing plate on the underside of the assembly.

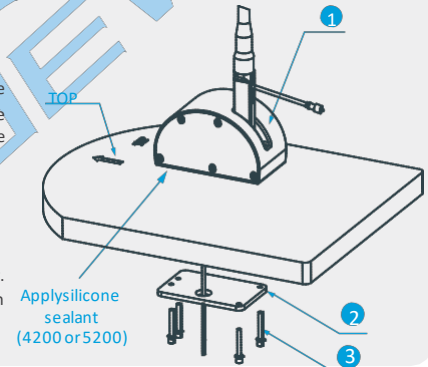


- [3] Use M6*70 screws to secure the assembly. Tighten the screws firmly to guarantee stability and integrity of the structure.


STEP 3

Connect the DC 12/24 V power supply, ensuring the correct polarity. The red wire is positive, and the black wire is negative.

Press the UP or DOWN button to check if the indicator light on the remote control flashes. If the light is on, the remote control is functioning properly. If the light does not turn on, check if the remote control has power. The battery you will need is a CR2032.

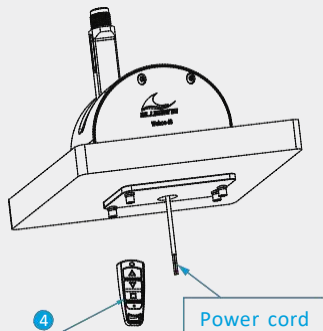


BATTERY REPLACEMENT OPERATION

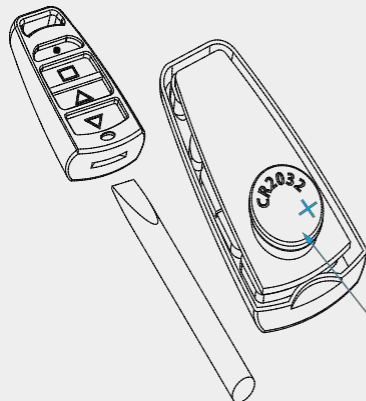

Use a flathead screwdriver to insert into the notch on the front of the remote control. Turn the screwdriver to open the top and bottom covers of the casing, then replace the battery.

The remote control device is equipped with 2 units. If a new remote control is needed, please purchase it from our company website.

OPERATION STEPS

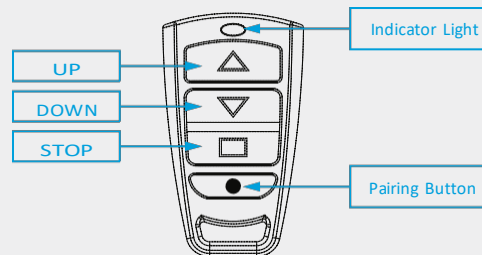

After disconnecting the power, reconnect it and press and hold the  button for 5 seconds within 15 seconds. At the same time, the remote controls should be as close as possible to the device, and the power indicator light should face the device.

If there are two devices, please operate one device at a time.

If you attempt to pair two devices simultaneously, it is possible that one remote control may operate both devices at the same time.

Thank you for choosing BLUEWING products.
Your satisfaction is our pursuit.

If you have any questions or suggestions,
please feel free to contact us.

You can visit our official website at
www.bluewingfishing.com,
reach us by phone at 561-774-2056,
or email us at support@bluewingfishing.com.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.