

 


Instruction Manual

Please read instructions before using.
Please keep these instructions as they contain important information.

1. Warning:

- This product is suitable for users ages 8 and above.
- The forklift's internal battery is rechargeable but non-replaceable.
- The remote control uses replaceable CR2032 (3V) coin cell batteries. Battery replacement must be done under adult supervision as swallowing batteries is potentially fatal.
- Adult supervision is required during the charging process to prevent accidents. Charging cable and plug should be unplugged after charging. If the product is not in use for an extended period of time, it is recommended to charge the product once every two weeks for maintenance.
- The product should be kept away from water and chemicals to avoid damage. Do not use it on soft surfaces such as blankets or sand as this will affect its speed and service life.

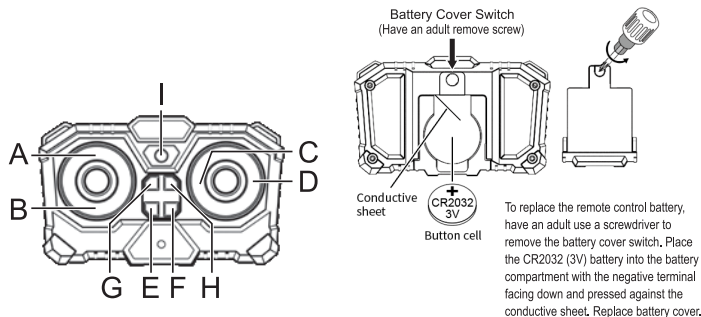


2. Remote Control Function:

1. Note: When the forklift is not in use, push the power switch to OFF otherwise the forklift will continue to use power, which may damage the built-in battery.
Push the left control lever to the position marked "A" to move the forklift forward. Push the lever to the position marked "B" to move the forklift backward. Push the right control lever to the position marked "C" to make the forklift turn left and to position "D" to turn right. Press the button marked "E" to lift the front fork and "F" to lower the front fork. A short press of the "H" button turns the lights on or off; a long press of the "H" button activates demonstration mode. Pressing any button will stop the demonstration. A short press of the "G" button switches between three speeds: 30%, 60%, and 100%.
3. Press and hold the "G" button until the remote control indicator light flashes. Then move the left control lever forward or backward to activate cruise control. Press and hold the "G" button to deactivate. Note: Only use the cruise control function in an open area.

5. When the remote control indicator light dims and the remote control operating distance becomes shorter, replace the remote control battery. Have an adult remove the remote control battery cover and replace the CR2032 (3V) battery in the correct orientation and replace the battery cover.

 3. Forklift Undercarriage Diagram:

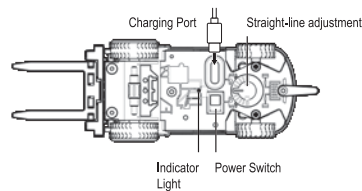

Important Battery Information:

- Batteries should be replaced by an adult.
- Do not charge non-rechargeable batteries.
- Supply terminals should not be short-circuited.
- Ensure batteries are inserted with the correct polarity.
- Spent batteries should be removed from the product.
- Rechargeable batteries should be removed from the product and charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries, or new and used batteries.
- Do not dispose of batteries in household waste or fire, as batteries may explode. Dispose spent batteries safely at local authorities or approved waste sites.

Keep this packaging as it contains important information.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
 
Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

4. Forklift Function:

1. After the forklift is turned on, if there is no operation for 3 minutes it will enter sleep mode. Exit sleep mode by turning the power switch on the forklift off and on again.
2. During the charging process, the indicator light on the forklift will turn red. When charging is complete, the red light will turn off. The charging process needs to be supervised by an adult. After the forklift is fully charged, the charging cable and plug should be unplugged.
3. The charging port is USB Type C, which can be used with mobile phone chargers but does not support fast charging.
4. The rear lights on the forklift are controlled by remote control and will not flash when moving in reverse.

5. Front Fork Diagram:

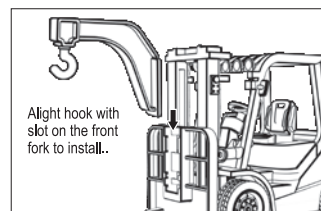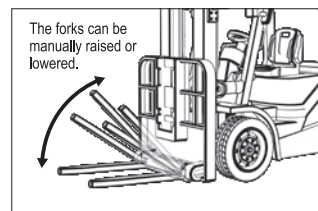

Hafan, IA 51537 ©2025

Printed in China