



 
Harlan, IA 51537 ©2025

Printed in China

Product Features:


For ages 8 and up.
Operation time: 6-10 minutes.
Remote control distance: 20-40 ft.
2.4 GHz frequency for strong signal

Remote Control Functions:




Setup:

 
1. Remove remote control from F1 Car platform after disengaging the lock.

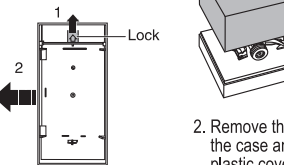

 
2. Remove the tape from the case and pull off the plastic cover.



 3. Have an adult use a screwdriver to remove the screw securing the F1 car.

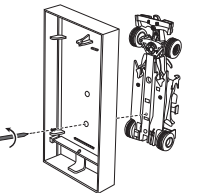


 4. Have an adult remove the battery cover and install 3 "AA" (1.5V) batteries in the correct orientation and replace the battery cover.

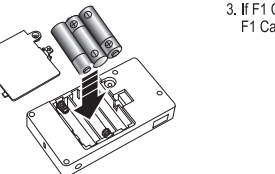


Setup:

 1. Press the Forward or Backward button on the remote control to move F1 Car forward or backward. Press Turn Right or Turn Left button while moving forward or backward to turn F1 Car.
2. Press the Speed Button on the remote control button to change to high speed mode. Press the Speed Button again to revert back to normal speed mode.
3. If F1 Car is not moving in a straight line forward or backward, use the Alignment Dial on the underside of the F1 Car. Move the dial to the left to adjust motion to the right. Move the dial to the right to adjust motion to the left.




Charging:

 1. Turn switch on F1 Car to "OFF".
2. Open the charging cover on the remote control and remove the charging plug. Insert plug into charging port on F1 Car. Charging LED on remote control will turn on. After 10 minutes, Charging LED will turn off, indicating that the F1 Car is fully charged.

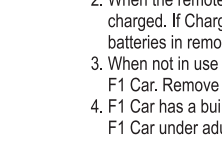

Warning:

 1. F1 Car will operate slowly when the internal battery is depleted. Charge F1 Car according to the procedure described in this manual.
2. When the remote control is lacking power, F1 Car cannot be charged. If Charging LED on remote control is dim or off, replace batteries in remote control.
3. When not in use for an extended time, turn off the remote control and F1 Car. Remove batteries from the remote control.
4. F1 Car has a built-in 3.7V Li-ion rechargeable battery. Please charge F1 Car under adult supervision.



Important Battery Information:

- Batteries should be replaced by an adult.
- Do not charge non-rechargeable batteries.
- Supply terminals should not be short-circuited.
- Ensure batteries are inserted with the correct polarity.
- Spent batteries should be removed from the product.
- Rechargeable batteries should be removed from the product and charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries, or new and used batteries.
- Do not dispose of batteries in household waste or fire, as batteries may explode. Dispose spent batteries safely at local authorities or approved waste sites.

Keep this packaging as it contains important information.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help