

Technical drawing of the Sonic Electric Toothbrush. The drawing shows the toothbrush handle and head. Dimensions are indicated: 65.00 mm for the width of the handle and 150.00 mm for the length of the handle. The text "Sonic Electric Toothbrush" and "Instruction manual" is present. The drawing also shows the toothbrush head with bristles and a power button on the handle.

To our valued customers:

Caution:

- Even health teeth, there will be tiny bleed or pain when use this brush in the beginning, it is because the gum is not suitable for the stimulation for the first usage, the symptom can disappear within 1-2 weeks. If it over 2 weeks, means your gum in abnormal status, please stop to use this toothbrush and consult dentist

Diagram of the Philips SH5000 electric shaver components:

- Bruth Head
- Mode Indicator
- Brush Handle
- Charging port
- Powver Mode Button
- Battery Indicator

Power/Mode Button

Clean : Clean mode, with
toothpaste clean mouth
Refresh : Rinse mouth mode,
clean mouth foam
White : Whitening mode, bright
white teeth
Gum Care : Gum care mode,
massage gums
Sensitive : Sensitive mode, the
intensity of the toothbrush
vibration decreases

1. Fix the Brush Head firmly on the Handle Shaft, leave a gap about 1mm between the head and the handle.

- 2. Wet the brush head, squeeze a bit toothpaste on the brush head.**

3. Put the brush head against the border of teeth and gum.

Plug the USB charging line into a USB charger or computer USB interface, toothbrush indicator light will be changed from red to green in 6 hours that means the charging is completed.

- 

The warranty card show that this is a qualified product

- 1.The warranty is legally valid from the day of purchase and keeps valid for a year within the Chinese mainland (Hongkong, Macao, and Taiwang are excluded). If lost, the warranty card won't be reissued.
- 2.Product with valid warranty card and purchase voucher can be maintained or repaired free.
- 3.In case of the following, even with valid warranty card and purchase voucher, the product will be maintained or repaired with charge:

- The product is purchased over a year.
- No warranty card, or no valid purchase voucher within a year.
- Failure due to force majeure, such as fire earthquakes typhoons floods or other external factors.
- Any scratch, dirty or appearance damage.
- Disassembly by user without permission.
- Damage caused by non-personal usage.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device can be used in portable exposure condition without restriction.