 


5. APP control usage



For google For ios For android

Scan the QR code above that is suitable for your mobile system. Download and install an app called "Baby swing" or "Baby swings". Turn on the rocking chair power button and open the app. Within approximately 5 meters, the phone will automatically connect to the device. The mobile page is shown in the following figure. If the connection is successful, the rocking chair pattern is orange. If not, the rocking chair pattern is gray.

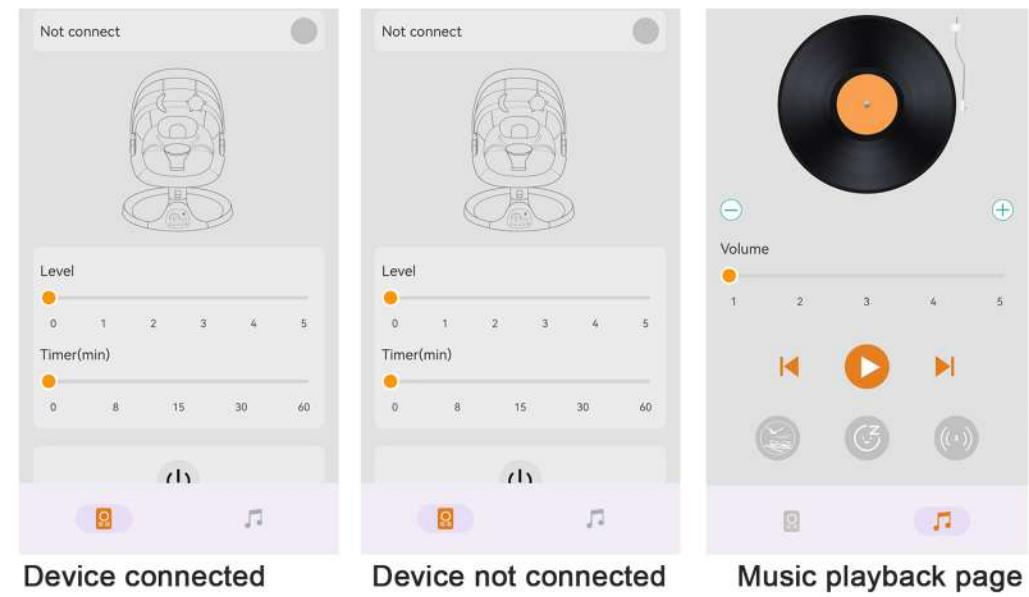

Device connected Device not connected Music playback page

6. Bluetooth instructions

1-Open your phone's Bluetooth list, find the Bluetooth name for "Yaolan" and click to connect. 2-After a successful Bluetooth connection, open the music app on your phone and play your favorite songs on the app. 3-If you want to connect Bluetooth to another phone, please disconnect the Bluetooth connection on the original phone first.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

5



WARNING



- **NEVER** leave the child unattended.

- **STAY** near and watch baby during use. This

product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

- **SUFFOCATION HAZARD:** Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway. **ALWAYS** keep swing seat fully reclined until infant is at least 4 months old **AND** can hold up head without help. [Only if required per 8.6.1.1]

- **ALWAYS** use restraints and adjust to fit snugly.

- **FALL HAZARD:** Babies have suffered skull fractures falling while in and from bouncers or have strangled in straps.

- **NEVER** use this product on a bed, sofa, cushion, or other elevated surface. Use bouncer **ONLY** on floor

- **NEVER** carry when baby in bouncer.

- **STOP** using product when infant starts to stand up or attempts to climb out (approximately 9 months) or has reached [insert manufacturer's recommended maximum weight, not to exceed 20 lb], whichever comes first.

6

TRACKING LABEL

Product Name: Electric baby rocking chairBbay cradle swing\Auto swing
Model: S-Y609
Voltage: 5V Current: 1A Power: 5W
Manufacturer: Huizhou Shengbaoluo Maternal And Child Products Co., Ltd.
Address: Shangnan Industrial Zone, Yuanzhou Avenue Boluo County, Huizhou City, Guangdong Province China 516123, China Tel: 0752 6388729
Importer Name: TRANS-PAC CHINA LLC
Address: 3715 S 182ND ST APT C120 SEATTLE WA 98188-9993US
Contact Person: Lisa lee Tel: +1 (818) 818-0538
Email: lisaleeinchina@gmail.com

Manufacture Date:

Product Batch:



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- **A** swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



This model of product has multiple versions mentioned above. If the version you are using does not have the corresponding components, you can ignore the relevant instructions.

IMPORTANT!

READCAREFULLYANDKEEPFORFUTUREREERENCE

User's manual




Product Name:

Electric baby rocking chair\Bbay cradle swing\Auto swing

Model: S-Y609

Made in china

1. Installation steps

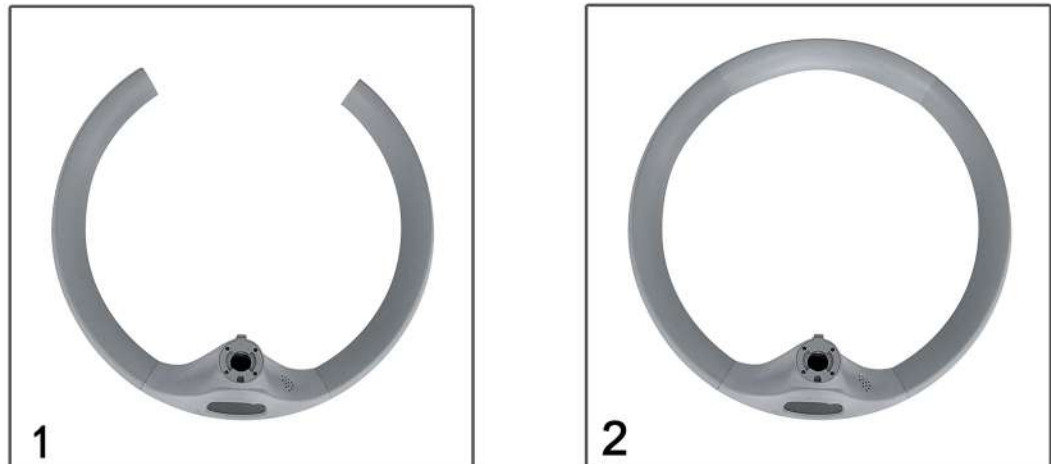

- 1, Insert the triangular openings of two curved aluminum tubes into both ends of the host. (As Figure 1)
- 2, Insert a curved plastic part between two aluminum tubes to form a circular base. (As Figure 2)




- 3, The Version C\D are equipped with 6 casters, and the pins of the 6 casters are inserted into the 6 circular holes of the base. (As Figure 3)
- 4, Insert the two ends of the U-shaped iron pipe into the circular holes of two plastic parts. (As Figure 4)




- 5, Open the seat flat and tidy up the cloth cover. (As Figure 5)
- 6, Insert the seat shaft into the bearing hole of the base. (As Figure 6)


1

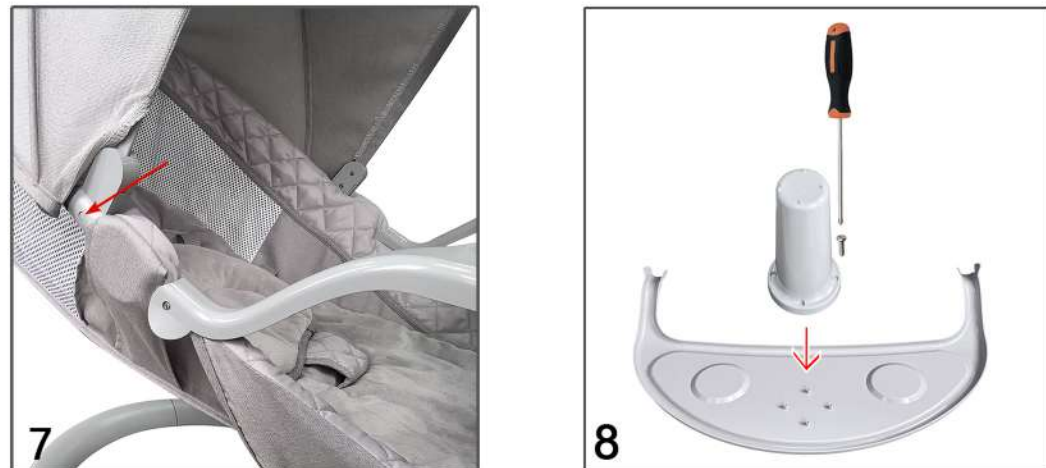

- 7, Pay attention to the locking points of the canopy support legs.
- 8, The Versions B/C/D are equipped with plates. First, install the support pillar at the bottom of the plate, align it with the four holes, and screw in four screws. (As Figure 8)

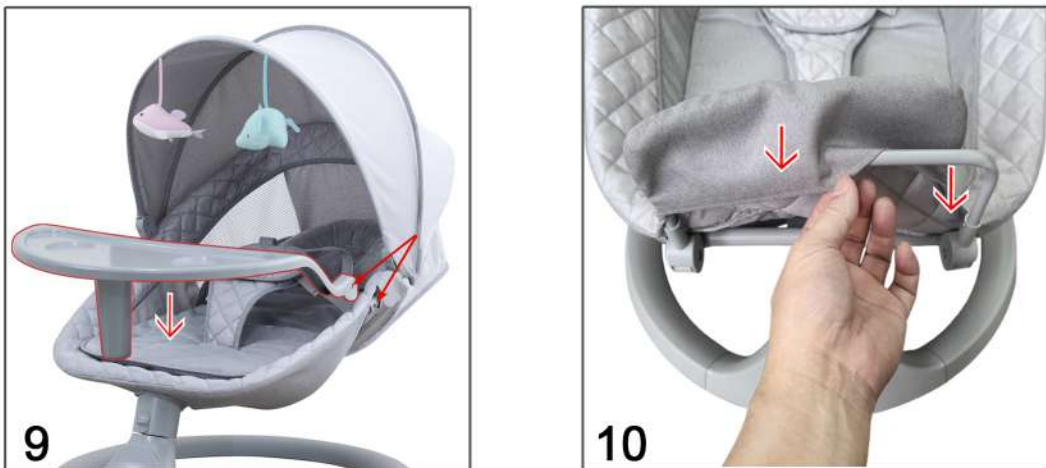

- 9, Insert the slots of the handles on both sides of the dining plate into the rocking chair, and the small holes in the slots are outside the screw heads. (As Figure 9)
- 10, The Version D is comes with one foot pedal. First, insert the U-shaped tube into the holes of the two angle adjustment components, and then wrap the foot pedal cloth around the U-shaped tube. (As Figure 10)

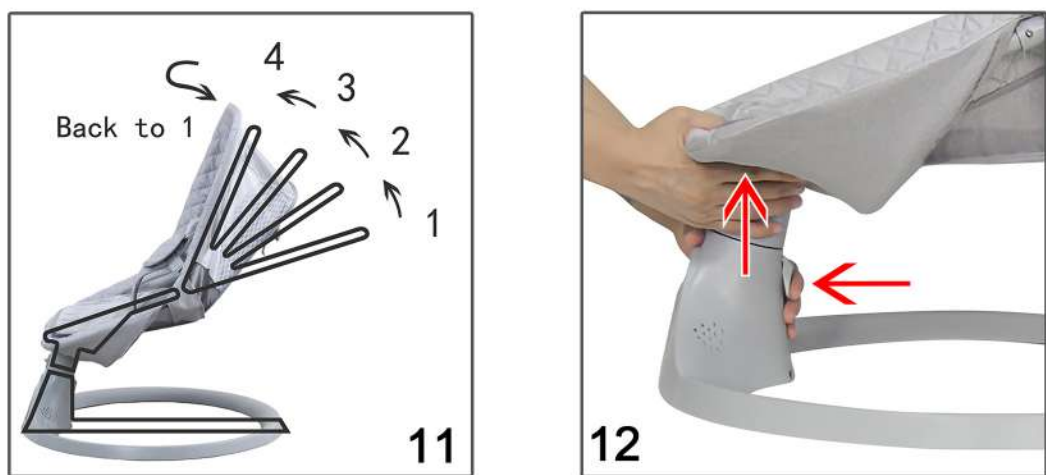

- 11, The method of adjusting the angle of the seat back.
- 12, Method for disassembling the seat and base. (As Figure 12)

2



- 13, The lock button for seat sway, push up to open and push down to lock. (As Figure 13)





- 14, There are two power sockets on the back of the rocking chair base, which can be used with 5.0DC power cords and Type-C power cords, as well as 5-6V power adapters and power banks. (As Figure 14)

2. General Troubleshooting

- Fault 1: There is no response when starting up, no indicator light is on, and no swing
- Check method:
1. Check whether the power is turned on. Under normal circumstances, there will be an indicator light on the button panel flashing when the power is just turned on.
 2. If the indicator light is not on and there is no response when the power is turned on, first check whether the socket is powered on, and you can use other sockets to test
 3. The second is to check the power adapter, you can use the mobile phone charger to test or use
 4. Check whether the power cord or power socket is plugged in properly
- Fault 2: The indicator light is on when the machine is turned on, but it cannot swing normally: no swing, the swing amplitude is small, and it will stop when swinging
- Check method:
1. Check whether the locking pin is locked, please (refer to the manual) to open the pin.
 2. If there is no heavy object on the seat, the rocking chair may not be able to swing normally. You can place a weight of about 3-10 kg to test the rocking function. You cannot place a test object that is too large beyond the seat range.
 3. Do not cover too much quilt beyond the seat range during use, if it exceeds, the rocking chair will not be able to swing normally
 4. No obstacles should be encountered outside the seat. Any items such as quilts and mosquito nets on the seat should not touch the ground or other objects. Even small objects or small external forces will prevent the rocking chair from swinging.
- Fault 3: The remote control does not work or the response is not sensitive
- Check method:
1. When using the remote control for the first time, you need to remove the battery insulation film (refer to the manual).
 2. In some areas due to logistics restrictions, if the remote control does not have batteries installed, please purchase a 2025 button battery for installation
 3. If the power of the remote control is insufficient, you need to replace the 2025 button battery
 4. The remote control signal will be weak when the remote control is used in an open or strong light place. At this time, the remote control will be better when it is close to and aimed at the rocking chair for remote control.

3

3. Control panel instructions

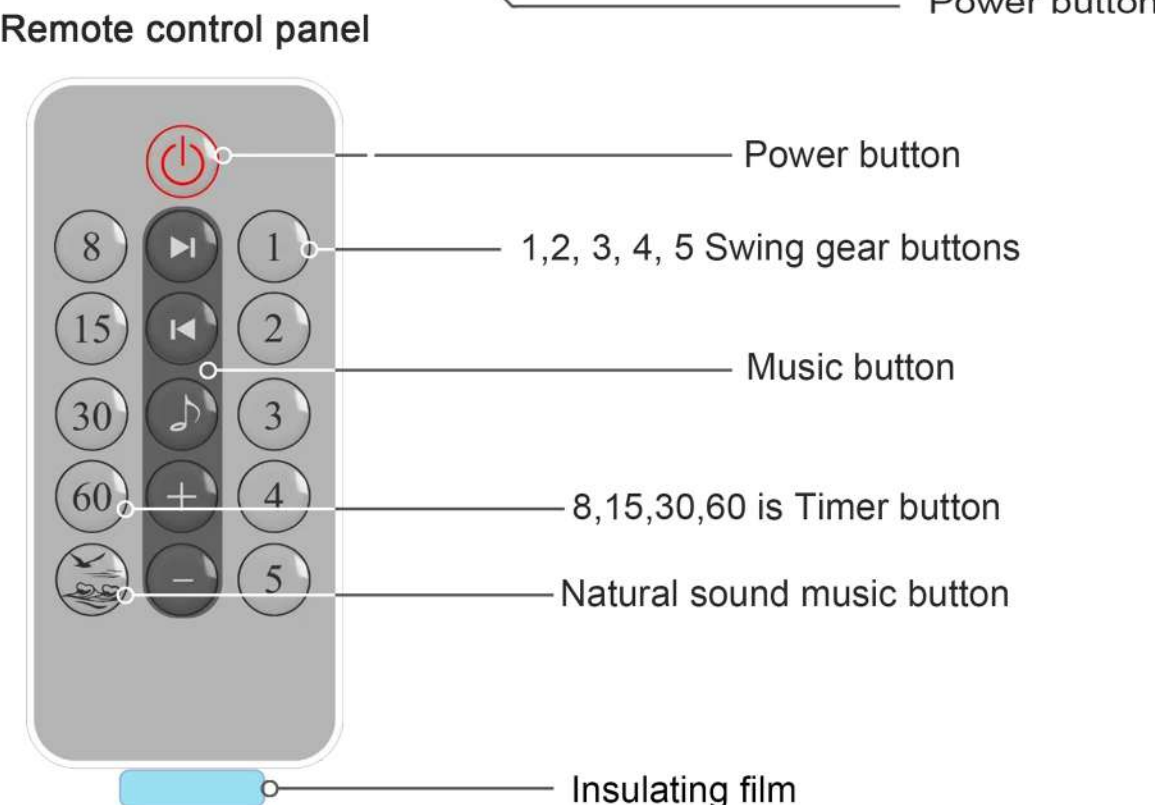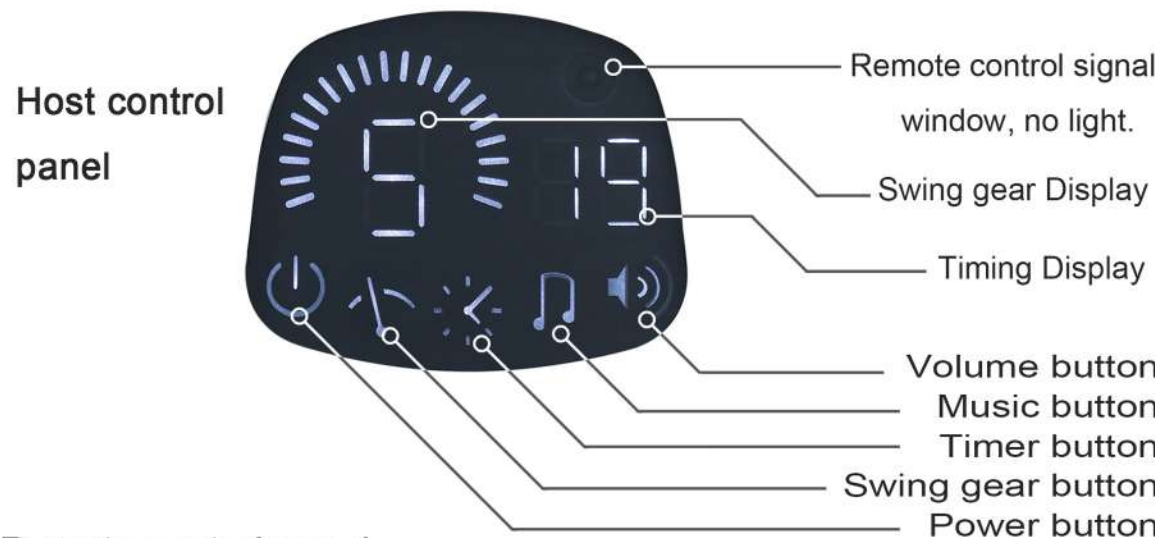

4. Motion sensing automatically activates swing

- Power button on the button panel
- Power button on the remote control
- The buttons on the music page of the app
- After the timer ends



Press one of the four buttons above, and the gear number on the button panel will display "0", indicating that the device has entered the motion sensing function. In this state, if the baby moves on the seat, it will trigger the device to start swinging.

4

FCC Caution.

(1) § 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning for WPT device:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15cm surrounding the device and 20 cm above the top surface of the device must be respected.