

售后服务
After-sales service

保修卡:
Warranty Card:

产品型号:
Product Model:

用户姓名:
User name:

联系电话:
Contacts number:

售机时间:
Sales period:

用户通讯地址:
User's mailing address:

产品名称 Product name	时间 Date	故障原因 Cause of the fault	处理结果 Processing results	维修人 Repairman



微信扫码关注了解更多产品相关信息

Scan the QR code to follow us on WeChat

Learn more about our products

服务热线：400-048-1996
Hotline:400-048-1996

英爵音响（深圳）有限公司
EOGO Sound (Shenzhen) Co.,Ltd

使用故障排除
TROUBLESHOOTING

1. 点击开机键，LED灯不亮。

①. 检查排插是否有通电。②. 产品可能电量不足，需要及时充电。

1. Press the power button The LED light is not working.

① Check if the power strip is powered on.

② The product may have insufficient battery power. It needs to be charged promptly.
2. 手机找不到产品。

请查看手机上蓝牙是否已经打开，如果有打开请关闭蓝牙后，重新打开蓝牙进行搜索。

2. The phone cannot find the product.

Please check if Bluetooth is turned on on your phone. If Bluetooth is enabled, please turn it off .

Re-enable Bluetooth to search.

注意事项

PRECAUTIONS

1. 电源插头应安置在方便插拔的位置。

1.The power plug should be placed in a location that allows for easy plugging and unplugging.
2. 如长时间不使用本产品，请将电源插头从电源插座拔出。

2. If this product is not used for an extended period of time.Please unplug the power cord from the power outlet.
3. 请勿划伤，折弯，扭曲，拉伸或加热电源线，否则会导致电源线损伤，进而导致火灾或触电；若电源线损坏，请与供应商联系。

3. Please do not scratch. Bending ,distortion Stretching or heating the power cord Otherwise , it may damage the power cord. This could lead to a fire or electrishock; if the power cord is damaged. Please contact the supplier.
4. 请勿擅自拆解，改造本产品结构，否则可能导致火灾或触电，如需要维修请与供应商联系。

4. Do not disassemble without authorization. Modify the structure of this product Otherwise, it may cause a fire or electric shock. If repairs are needed, please contact the supplier.
5. 产品上不要放置裸露的火焰源，如点燃的蜡烛。

5. Do not place exposed flame sources on the product. Like a lit candle.

FCC警告语
FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

 


使用说明
USER MANUAL

X1 MINI

产品清单

PRODUCT LIST



X系列- X1 MINI

X-SERIES-X1 MINI



支架

Support



硅胶脚垫 x 2

Silicone feet pads x 2

 


产品说明册

Product brochure


安装示意

INSTALLATION DIAGRAM

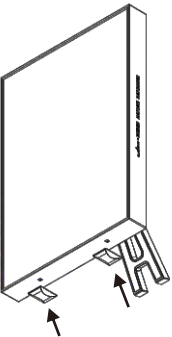

脚垫安装于底部

 Foot pads are installed at the bottom

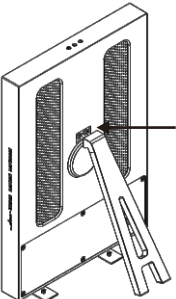

支架安装于背面

support is installed of the back

操作说明

OPERATING INSTRUCTIONS



顶部按键功能

Top button functions

① 音量+：（音量调节与手机同步）按一次音量加一个档位（等待一秒后再按下一次），长按音量持续加大到最大停止；双击下一曲（TF卡与蓝牙）。

 
① Volume + : (Volume adjustment synchronized with the phone) Press once to increase the volume by one level (wait one second and press again), long press to continuously increase the volume until it stops at the maximum; double-tap to skip to the next track (TF card and Bluetooth).

② 音量-：（音量调节与手机同步）按一次音量减一个档位（等待一秒后再按下一次），长按音量持续减少到最小停止；双击上一曲（TF卡与蓝牙）。

② Volume- : (Volume adjustment is synchronized with the phone) Press once to decrease the volume by one level (wait one second before pressing again). Press and hold to continuously reduce the volume until it reaches the minimum; double-tap to skip to the previous track (TF card and Bluetooth).


③ 开关机按键：长按2秒开机，长按2秒关机；短按单击TF卡播放（TF卡与蓝牙），短按单击TF卡暂停（TF卡与蓝牙）。

③ Power on/off button Press and hold for 2 seconds to turn on. Press and hold for 2 seconds to power off; short press to play from TF card (TF card and Bluetooth). Short press and click the TF card to pause (TF card and Bluetooth).

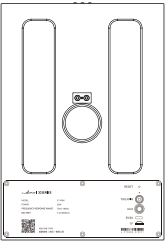

背面

 Product back

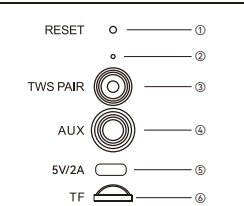

背面功能

Product back features

① RESET：功放复位。

① RESET：Power amplifier reset.

② LED状态灯：开机蓝光常亮，关机灯全灭；电量不足红灯闪（不插电有提示音）；蓝牙连接后手机上面显示电量状态（跟手机配置有关，非每个手机都会显示）；TWS连接中指示灯快速闪，连接成功蓝光常亮。

② LED status light: Blue light stays on when the power is on. All lights go out when the device is turned off; Low battery indicator flashes red (beeps when not plugged in); After Bluetooth connection, the phone displays the battery status (depending on phone configuration, Not every phone will display this). The indicator light flashes rapidly during TWS connection, and remains solid blue when the connection is successful.

③ TWS配对键：TWS配对，在音响均未配对的情况下，双击其中一台音响作为主机使用，搜索从机；退出TWS配对，在两台音响已配对的情况下，双击TWS配对键，可以退出当前配对（下次开机仍然会自动配对）；单击TWS配对键，可完全退出配对（下次开机将不会自动配对）。

③ TWS Pairing Key: TWS Pairing Without the speakers being paired Double-click one of the speakers to use as the host, then search for slave speakers; exit TWS pairing . With the two speakers already paired Double-click the TWS pairing button You can exit the current pairing (it will automatically pair again the next time you turn it on). Click the TWS pairing button You can completely exit pairing (it will not automatically pair the next time you turn it on).

④ AUX：音频立体声输入。

④ AUX : Stereo audio input.

⑤ 电源输入：Type-C 充电（支持充电器20-60W）。

⑤ Power input Type - C charging (supports chargers from 20-60W).

⑥ TF：TF卡音频立体声输入。

⑥ TF Stereo audio input from TF card.

备注：

1. TWS配对时，从机直接开机不需要操作，主机会自动搜索配对。
2. 开机10秒内会自动会连接前面连过的手机，未搜索到之前的手机进入蓝牙搜索状态，5分钟后停止搜索。
3. 音源输入：AUX、TF、蓝牙三选一。
4. 充电器支持20-60W，TYPE C数据线需要和充电器匹配使用。

Remark:

1. During TWS pairing, the slave device can be powered on directly without any operation. The host will automatically search for and pair with the device.
2. It will automatically connect to previously connected phones within 10 seconds of powering on. If no phone is found, it will enter Bluetooth search mode. The search will stop after 5 minutes .
3. Audio Input: AUX/TF Choose one of Bluetooth or Bluetooth.
4. The charger supports 20-60W. TYPE C data cable needs to be used with a compatible charger .

规格参数

SPECIFICATION

功率： power:	20W 20W
输入TYPE C： Enter TYPE C：	5V/2A（支持20-60W充电器） 5V/2A(Supports 20-60W chargers)
频响范围： Frequency response:	73Hz-18KHz 73Hz-18KHz1 Khz
失真度： Distortion:	1Khz≤5% ≤5%
蓝牙版本： Bluetooth version:	5.3 5.3
蓝牙接收距离： Bluetooth reception distance:	≤15M ≤15 M
电池容量规格： Battery capacity specifications:	7.4V/2500mA 7.4V/2500mA
充电时间： Charging time:	3H 3H
续航时间： Battery life:	默认音量下持续播放大于12小时，最大音量下大于6小时 (实际播放时长取决于音频音量及内容) Playing continuously for more than 12 hours at default volume Playback time exceeds 6 hours at maximum volume. (actual playback time depends on audio volume and content).
尺寸： size:	32.05*22.1*3cm 32.05*22. 1*3cm
重量： weight:	1.28kg 1.28kg

开箱安装/蓝牙连接/TWS连接/支架安装

Unboxing and installation / Bluetooth connection /
TWS connection / Stand installation

请扫描右侧二维码

Please scan the QR code on the right

