

A line drawing of a mobile phone, likely a PDA or early smartphone. It features a large rectangular screen in the center, a small circular camera lens above it, and a speaker grille at the bottom. A small antenna is visible on the left side, and a small circular button or sensor is on the right side. The phone has a rounded rectangular shape with a thin bezel.

Before using this product, please read the instruction manual carefully.
The manual is for reference only; actual operation should follow the physical product.

A diagram of a mobile phone with its components labeled with numbers 1 through 9. The labels are as follows:

- 1) Earpiece
- 2) Call button
- 3) Power button
- 4) Camera
- 5) Headset jack
- 6) Earpiece
- 7) Loudspeaker
- 8) Call button
- 9) Power button

- 1) Volume up button 2) Volume down button 3) Power switch
4) Confirm/Back key 5) Antenna 6) Lens
7) Speaker 8) Intercom/Change key 9) Charging interface

Turn on the 'power switch': turn it up to turn on, turn it down to turn off.

- 1) WeChat
- 2) Camera
- 3) Album
- 4) Settings

- 1) WeChat
- 2) Camera
- 3) Album
- 4) Settings

- 1) Press the 'volume+/- key' to move left and right;
- 2) Press the 'Confirm/Back key' to enter the function

- 1) Long press the 'Intercom' button to video chat, then dial and wait for the other party to connect. Click the 'Confirm/Back key' to connect. Long press the 'Confirm/Back key' to turn down;
- 2) Click the 'Intercom' button to switch tone changes;
- 3) Click the 'Volume+' button to increase or decrease the volume, long press the 'Volume+' button to switch the video window display, Click the 'Confirm/Back key' to switch stickers and filters;
- 4) Long press the 'intercom button' for voice communication;
- 5) Long press the 'Confirm/Back key' to end the video chat.

Click the "Volume+/-" button to move to and click the "Confirm/Change Sound" button to enter WeChat mode;

- 
- 1) Video chat
2) Voice
3) Facial expressions
4) Picture
5) Take photos

- 1) Click the 'volume+/- key' to move left and right to select the bottom function, and click the 'confirm/change tone key' to enter;
- 2) Long press the 'Confirm/Back key' to exit WeChat.

- 1) Click the 'Confirm/Back key' to select video chat, then dial and wait for the other party to connect. Click the 'Confirm/Back key' to connect. Long press the 'Confirm/Back key' to turn down;
- 2) Click the 'Intercom' button to switch tone changes;
- 3) Click the 'Volume+' button to increase or decrease the volume, long press the 'Volume+' button to switch the video window display; Click the 'Confirm/Back key' to switch stickers and filters;
- 4) Long press the 'Intercom button' for voice communication;
- 5) Long press the 'Confirm/Back key' to end the video chat.

Long press for voice intercom, long press to speak, release to end and send.

Click the 'volume+/- key' to move left and right to select the emoji, and click the 'confirm/change tone key' to send.

- 1) Click the 'volume+/-' button to move left and right to select the image, and click the 'intercom button' to send;
- 2) Long press the 'volume-key' on the image interface to bring up the delete menu;
- 3) Long press the 'Confirm/Back key' to return to the WeChat interface.

- 1) Click the 'Confirm/Back key' to take a photo and send it;
- 2) Click the 'intercom button' to switch stickers and filters;
- 3) Long press the 'Confirm/Back key' to return to the WeChat interface.

Click the 'Volume/-' button to move to and click the 'Confirm/Change Sound' button to enter the photo mode;

- 1) Click the '**Confirm/Back key**' to take a photo and save it;
- 2) Click the 'intercom button' to switch stickers and filters;
- 3) Long press the '**Confirm/Back key**' to return to the main interface;

Click the 'Volume+/' button to move to and click the 'Confirm/Back key' to enter audio mode;

- 1) Click the 'Volume+/' button to move left and right to select the image, click the 'Confirm/Back key' to view, and click again to return to the preview interface;
- 2) Long press the 'volume-key' on the image interface to bring up the delete menu;
- 3) Long press the 'Confirm/Back key' to return to the main interface.

Click the 'Volume+/-' button to move to and click the 'Confirm/Back key' to enter the setting mode;

- 1) Click the 'Volume+/-' button to move up and down to select settings click the 'Confirm/Back key' to confirm changes and save;
- 2) Long press the 'Confirm/Back key' to return to the main interface.

language	English, Simplified Chinese, Français, Deutsch, Español, Português, Nederlands, Italiano, Polski, Ελληνικά, Magyar, Svenska, Norsk, Dansk, Suomi, Română, русский язык, Japanese language, Korean
brightness	1-5
Screen saver mode	1 minute, 3 minutes, 5 minutes, 10 minutes, off
sound	Silent, low, medium, high
Restore factory settings	Yes, No
version	DJ-05 2025-11-17 Demo-STA

⚠ Warning: This product is only suitable for children aged 3 and above. Adult supervision is required during use to prevent choking from swallowing small parts.

⚠ **Warning:** Do not put the product or accessories into your mouth. Contains small parts and is not a toy, children must use it under parental supervision.

⚠ **Warning:** Use the product's standard charger when charging. Keep away from water and high temperatures (such as direct sunlight or stovetops) to prevent short circuits, fires, or electric shocks.

⚠ **Warning:** Do not drop or disassemble the product to avoid battery leakage, explosion, or circuit damage. If the battery is damaged, stop using immediately and contact after-sales service.

⚠ **Note:** Avoid scratching the screen with sharp objects. Prolonged direct viewing may damage eyesight. It is recommended that children use the product for no more than 30 minutes at a time and maintain a viewing distance of at least 12in.

⚠ **Warning:** Do not use in damp environments such as bathrooms or swimming pools to avoid moisture entering the device, which could cause short circuits or electric shock.

⚠ **Warning:** Do not use outdoors during thunderstorms to avoid the risk of lightning strikes; avoid prolonged storage or use in high-temperature (>60°C) or low-temperature (<-10°C) environments.

⚠ **Warning:** Do not use this product while driving or cycling to avoid distraction and potential accidents.

⚠ **WARNING:** The lanyard is for hanging only. Do not wrap it around or strangle a child's neck. Adult supervision is required during use to avoid the risk of suffocation!

70mm

90mm

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.