

WiFi Camera Quick Usage Guide

1 Download and install the app

1. Download the "AJCloud" APP in the APP Store or scan the QR code below to download the "AJCloud" APP..



Scan and download the APP

2. Open the "AJCloud" APP, select (mobile phone number / email / WeChat / Apple ID) to create and register an account.

2 Camera startup

Power on the camera, it will make a regular "di-di" sound in about 40 seconds.

3 Add camera to the APP


First-time use Instructions:

1. Please check whether the WiFi signal is available
2. After the camera has powered on , make sure you have heard the "di-di" sound, it indicates that now it is ready for adding to the APP.

Flow the steps below to add the camera to the APP:



1. Click on "Add Device" or "+"

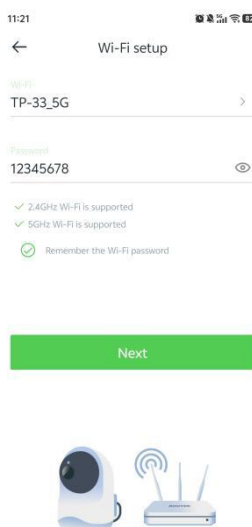

4. Choose WiFi or manually enter WiFi information




2. Choose a network camera



5. Aim the QR code on your phone at the camera until you hear the beep and click 'Next'



3. Choose to configure wireless network through QR code

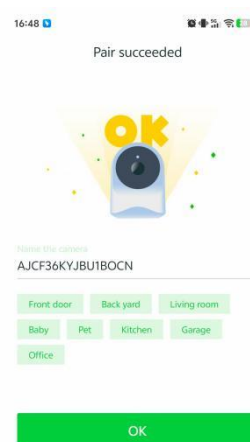

6. After successful pairing, you can customize the name

Notice:

If the network connection has failed, please follow the instructions of the APP to reconfigure the network, or click the bottom menu of the APP: My - Diagnosis.

4 FAQs

1、 Add the camera failed

- 1) Check if the camera has completed startup
- 2) Check if the WiFi name and password of the router are incorrectly
- 3) Check if the router has set up a firewall, preventing the camera from accessing the external network
- 4) Restart the router and try adding the device again
- 5) Use the App for diagnosis
- 6) long press the reset button for 5 seconds to reset the camera

2、 Screen lagging, delay or freezing

- 1) Check the network of your mobile and camera
- 2) Switch to the second stream to watch the live video

3、 Disconnection Issue

- 1) Use the diagnostic function of the mobile app to check if the network is normal
- 2) Confirm whether the camera is too far from the router or if there is a wall causing unstable WiFi connection. Try placing the camera close to the router and check if it still disconnected
- 3) Restart the router, or restart the camera

4、 How to reset the camera

long press the reset button for 5 seconds to reset the camera

5 Attentions

- 1.Using an unauthorized or incompatible power supply may cause fires, explosions or other dangers.
- 2.Please place this product and its accessories out of the reach of children. Prevent children from accidentally damaging the product and accessories. Or swallowing small parts causing suffocation or other dangers.
- 3.This product is not a toy. Children should use this product under the supervision of adults.
- 4.Please use this product within the temperature range of -10°C to 50°C . When the environmental temperature is too high or too low, it may cause product failure.
- 5.When using this product, please stay away from electrical appliances with strong magnetic fields and strong electric fields, such as microwave ovens and refrigerators.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

To maintain compliance with FCC'S RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm between the radiator and your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.