


➤ EUT Antenna Location

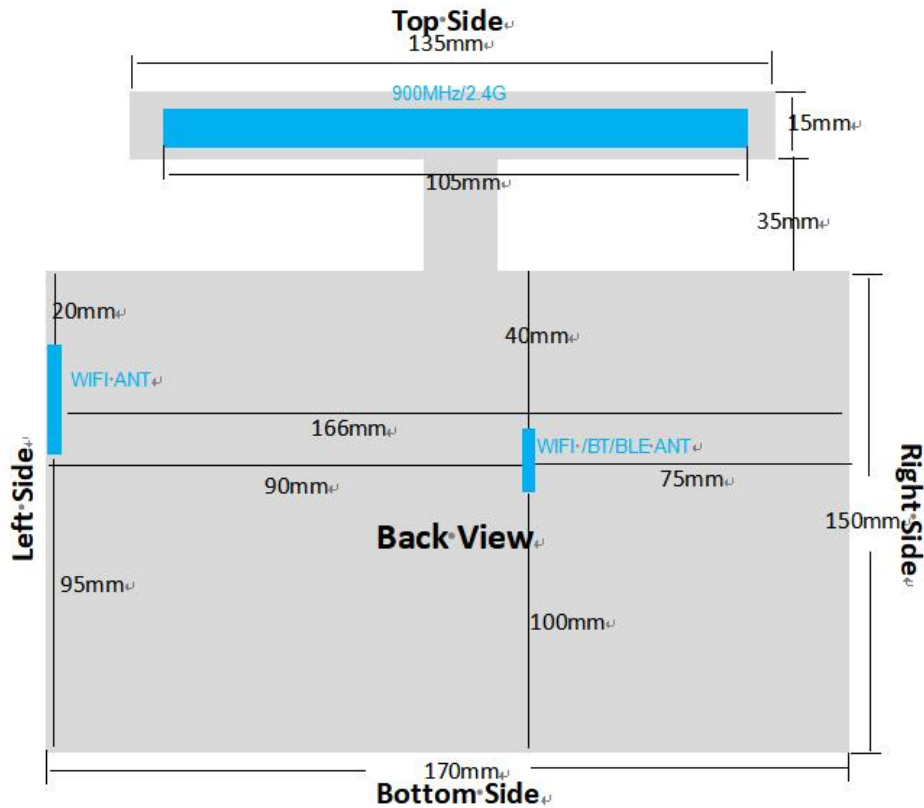

➤ Test Setup



Front Side (Test distance: 0 mm)



Back Side (Test distance: 0 mm)



Right Side (Test distance: 0 mm)



Left Side (Test distance: 0 mm)



Top Side (Test distance: 0 mm)



Bottom Side (Test distance: 0 mm)