 





At a Glance

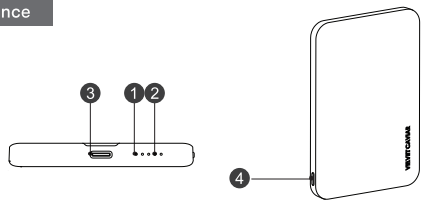

1. Wireless Charging Indicator	2. Battery Level Indicator
3. USB-C Port	4. Power Button

 
Charging Your Phone or Earbuds Using a Charging Cable

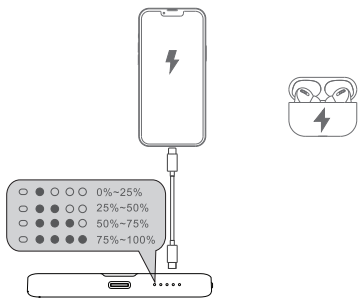

Status	Wireless Charging Indicator	Battery Level Indicator
Charging	On	Showing the current battery level
Fully Charged	Off	Off


Charging the iPhone 12/13 Series or Later

 To activate wireless charging, press the power button or place your device on the charger as illustrated below and it will be held in place magnetically.

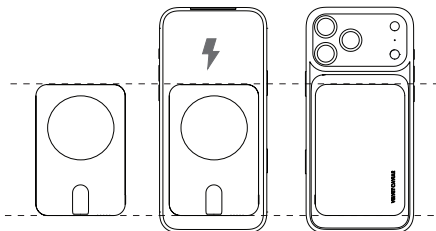

Recharging Your Portable Charger

Status	Wireless Charging Indicator	Battery Level Indicator
Charging	Off	Showing the current battery level
Fully Charged	Off	Showing the current battery level

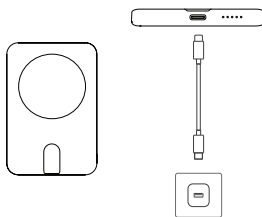 

Specifications

Cell Capacity	5000mAh 3.85V/19.25Wh
USB-C Input	5V/3A 9V/2A
USB-C Output	5V/3A 9V/2.2A 12V/1.67A
Wireless Output	5W/7.5W/10W/15W
Total Output	20W
Product Size	104 x 71 x 9.2mm



1. This wireless charger is not compatible with non-MagSafe phone cases.
2. Do not use an adapter with an output of 5V/1A (5W) or less.
3. Wireless chargers make charging more convenient than wired chargers, but confined by current wireless technology, their charging speed is slower than that of wired chargers.
4. High temperatures will reduce charging speed and restrict power, which is something that happens to all wireless chargers. It is recommended that you charge your device in environments with temperatures below 26°C/77°F.
5. Both the protective phone case and the position of your device on the wireless charger will affect the charging speed. The farther it is placed from the center of the wireless charger, the slower the charging speed will be.

IMPORTANT SAFETY INSTRUCTIONS

When using this product, basic precautions should always be followed, including the following:

1. Store the product in a cool, dry place.
2. Do not store the product in a hot or humid environment.
3. Operating temperature should be between 0°C to 40°C/32°F to 104°F.
4. Do not disassemble the product. Take it to a qualified service person where service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
5. If the product is not used for long periods of time, you should charge and discharge it once every three months.
6. When charging a device, the product may feel warm. This is a normal operating condition and should not be a cause for concern.
7. In normal conditions, the battery performance will decline over several years.
8. Do not dispose of the product in heat or fire.
9. Do not clean the product with harmful chemicals or detergents.
10. Misuse, dropping, or excessive force may cause product damage.
11. When disposing of secondary cells or batteries, keep cells or batteries of different electrochemical systems separate from each other.
12. Be aware that a discharged battery may cause fire or smoke. Tape the terminals to insulate them.