 


Multifunctional Fan

USER MANUAL

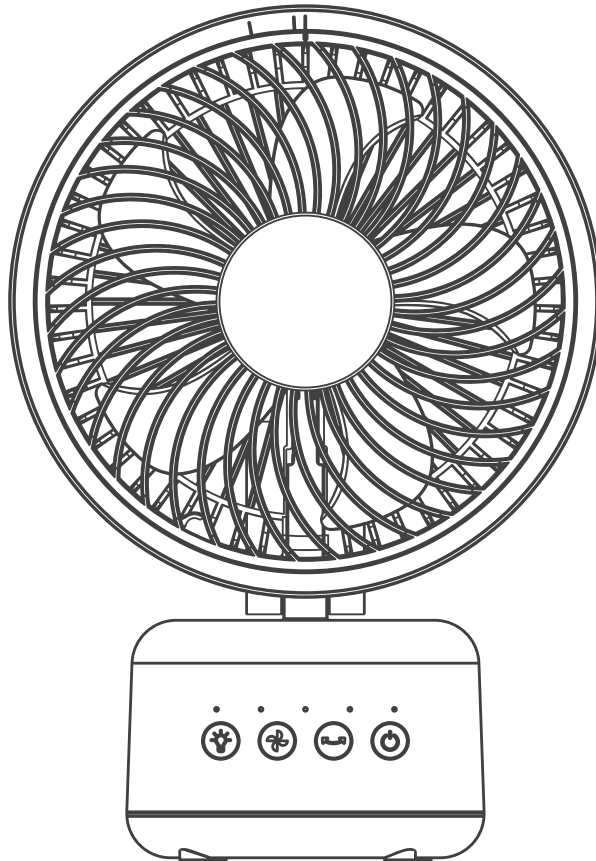

Model No.: FS-7-2A

Item No.: MN2007-BLACK

MN2007-WHITE

MN2007-PINK

Read this booklet thoroughly before using and save it for future reference

If you have any questions, please contact our customer service:



Web: www.electacticshop.com



Email: service@electacticshop.com



CONTENTS

Safety Precautions	1
Knowing Your Unit	2
Operating Instructions	3
Cleaning and Maintenance	10
Troubleshooting	11
Product Specifications	12
FCC Statement	13

Safety Precautions

1. To ensure correct and safe use of this product, please read these Safety Precautions carefully before use.
2. These precautions contain important safety information and must be strictly observed. Please keep this manual properly after reading for future reference.
3. Before use, check whether the power supply voltage matches the voltage specified on the product rating label.
4. Before use, check whether the adapter cord and plug are damaged.
5. Do not bend, pull, or twist the cord to avoid poor contact.
6. Always switch off the power before unplugging the power plug.
7. Do not unplug the power plug with wet hands to avoid the risk of electric shock.
8. Do not insert fingers or sharp objects into the fan grille during operation to prevent accidents.
9. Special attention should be paid when children are present.
10. Do not repair, disassemble, or modify this product by yourself. Repairs must only be carried out by authorized service personnel.
11. Do not use the fan near curtains or fabrics that may be drawn into the fan, as this may cause motor malfunction.
12. Do not operate the fan unless it is fully assembled and placed on a stable, level surface.
13. Infants, elderly people, and patients should not be exposed to direct airflow for long periods.
14. Do not rinse or wash the fan directly with water.
15. Do not hang clothes or other items on the fan grille.
16. Do not use the fan in places with obstacles or on unstable surfaces.
17. Do not spray volatile substances or insecticides onto the fan, as this may cause deterioration, damage, or discoloration of the housing.
18. Do not use the fan in environments with high temperature (above 113 °F), high humidity (such as bathrooms), heavy dust, or in areas with acidic, alkaline, or oily substances.
19. When the fan will not be used for a long period, unplug the power plug from the power outlet.

  Knowing Your Unit

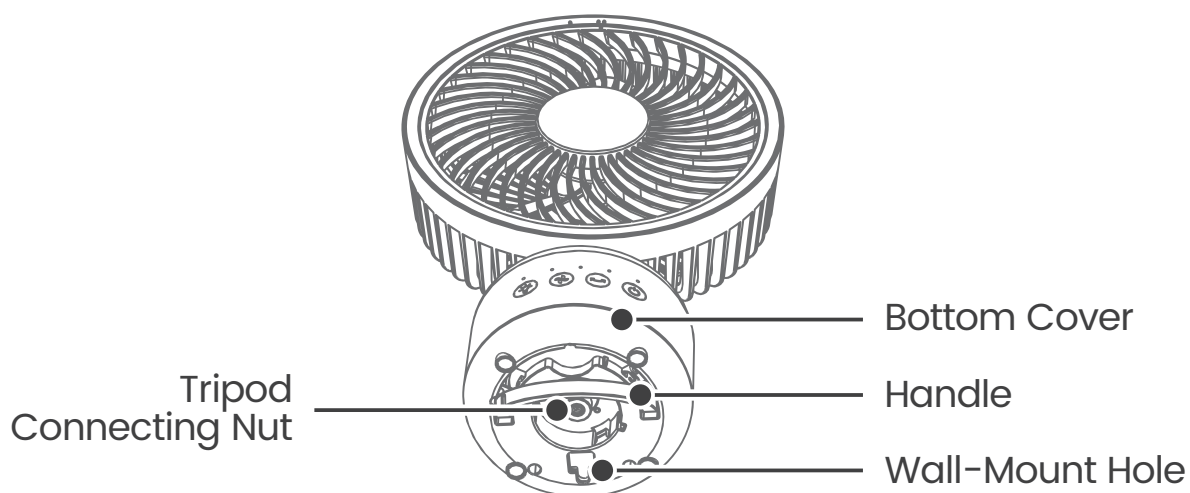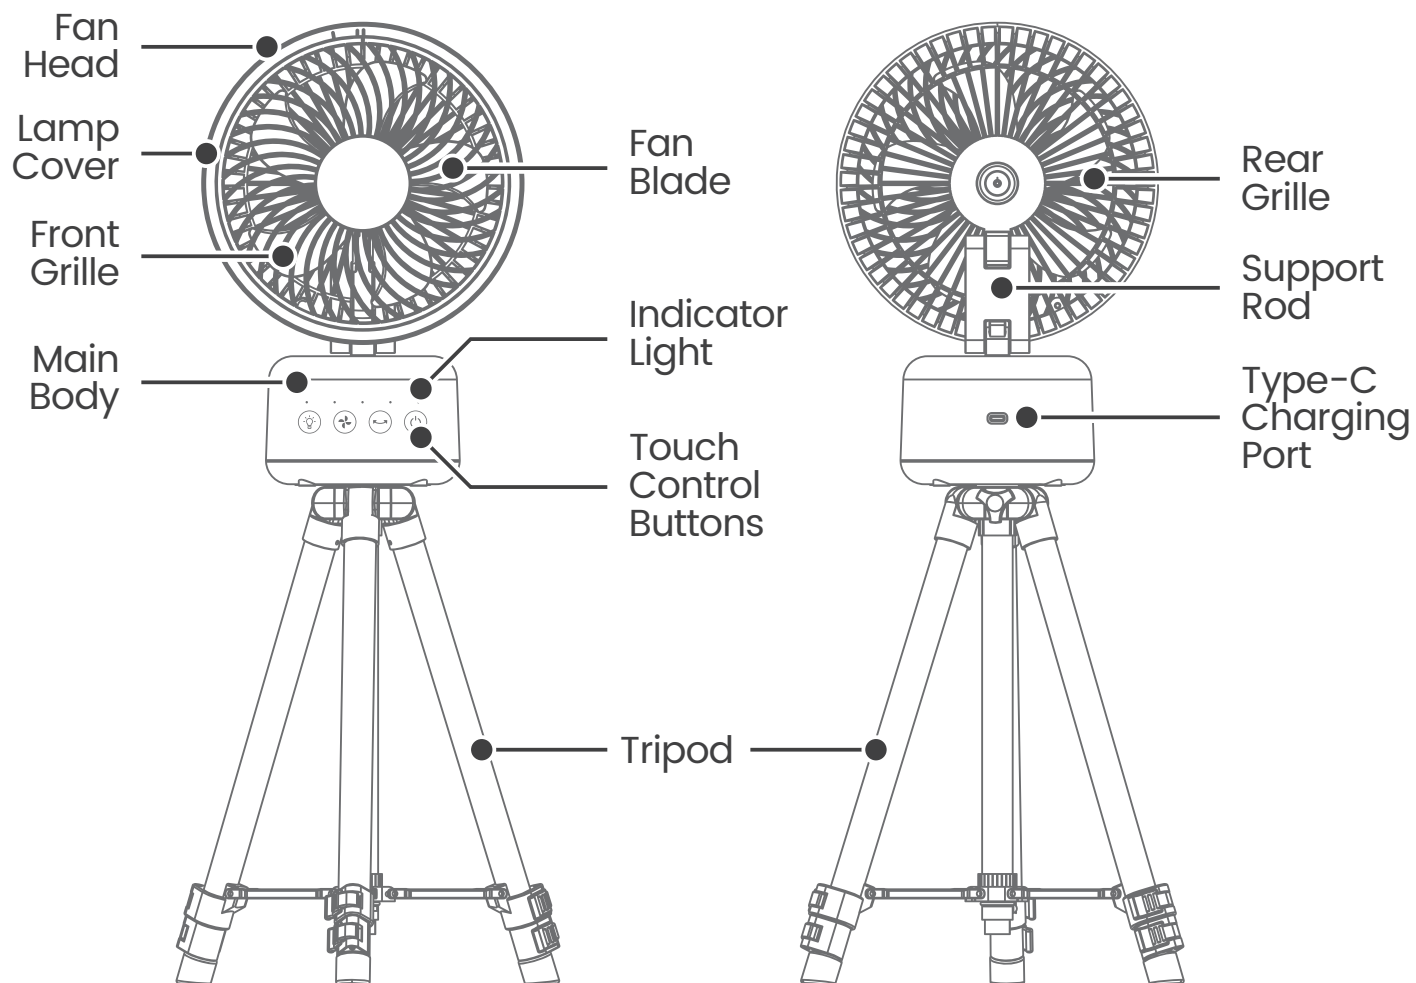


Operating Instructions

Fan Usage Methods

The fan can be used in the following four common ways according to your needs:

 
1

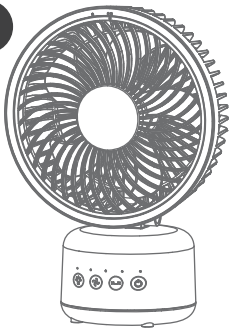

Desktop Use

Suitable for office, school, and home environments.

 
2

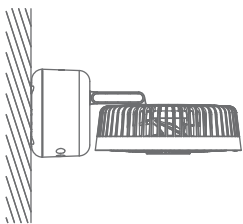

Wall-Mounted Use

Suitable for kitchens, bedrooms, and bathrooms.

 
3

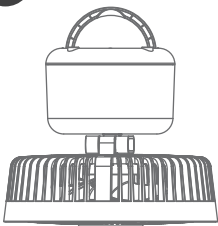

Hanging Use

Suitable for use in RVs, tents, and similar environments.

 4

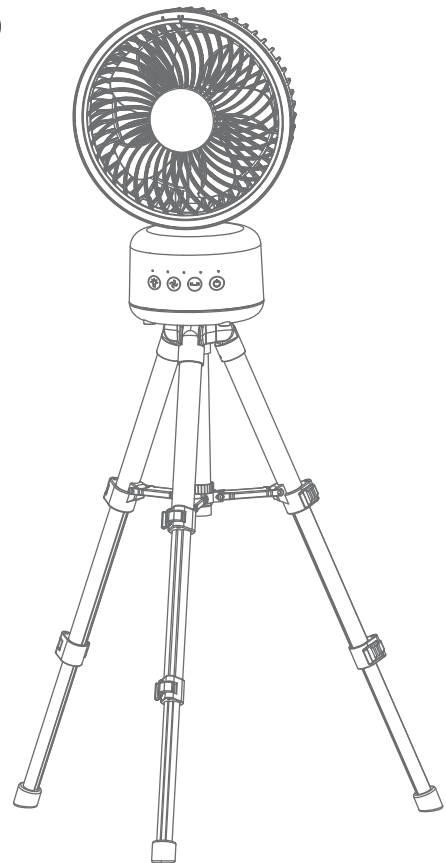

Tripod Use

 
Suitable for outdoor use, camping, and picnics.

Important notes:

1. Before wall mounting, securely fix a suitable nail or screw into the wall. Align the wall-mount hole on the bottom of the fan with the nail or screw and hang the fan properly. Loose nails or screws may cause the fan to fall and result in injury.
2. Before installing the tripod, lower the center telescopic rod to its lowest position and lock it securely. Align the fan head bolt with the tripod connecting nut and tighten it clockwise.


Operating Instructions

Wall-Mounted Use

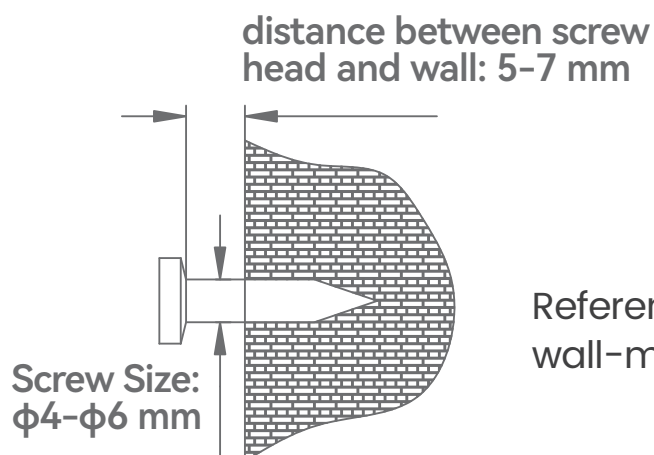


Reference for the recommended wall-mount screw size.

 
Tripod Installation

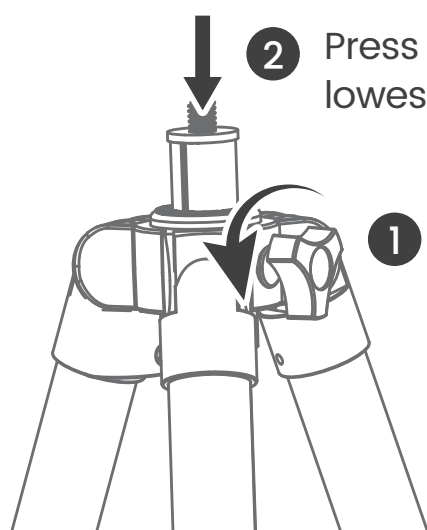

2 Press down to the lowest position

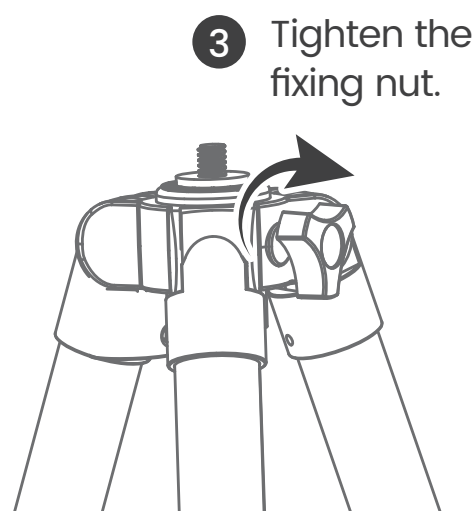 

4 Align the bolt with the nut.

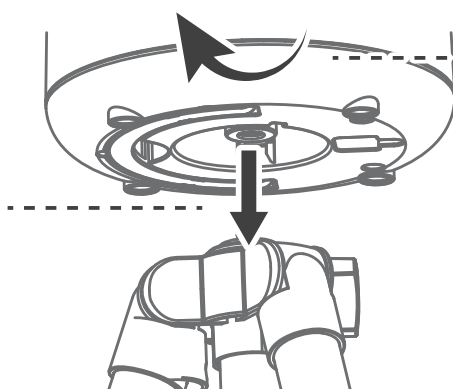 


Operating Instructions

Fan Operation

The fan can be operated using either the control buttons on the unit or the remote control.

 A. Control Panel Operation

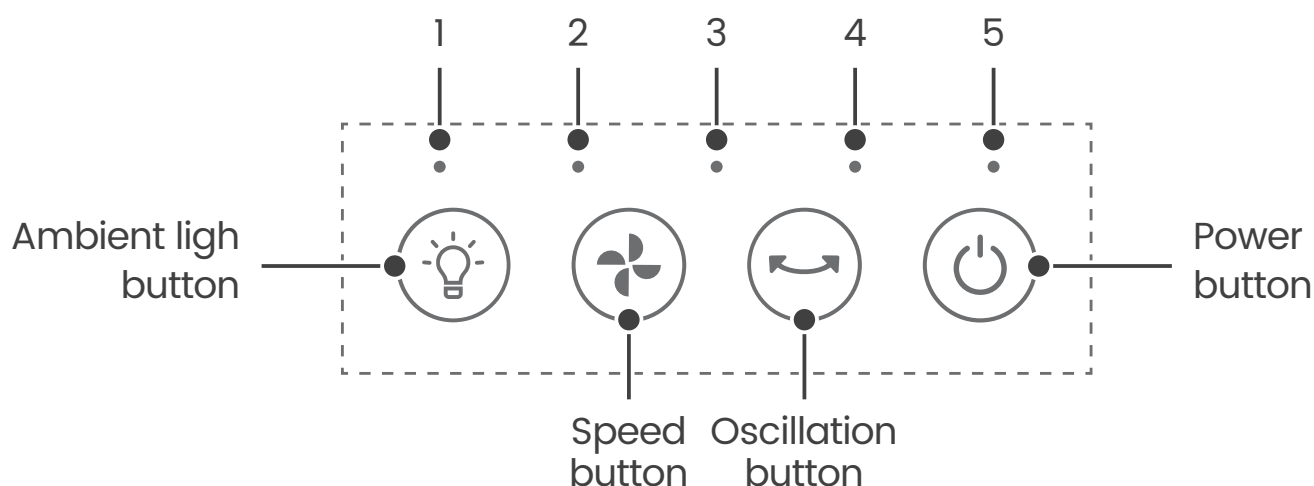

1. Charging

Before first use, charge the fan using a 5V charger with a current rating of 2A or higher.

During charging, Indicator No.5 lights up red.

When fully charged, Indicator No.5 turns green.

2. Power On/Off

Lightly touch the power button.

A beep indicates that the fan has started and will operate according to the last used settings (fan speed and oscillation).

3. Fan Speed Adjustment

Lightly touch the speed button to adjust the fan speed in the following cycle:

Level 1 → Level 2 → Level 3 → Level 4 → Natural Wind → Level 1 ...

Indicator lights:

Level 1	Blue light No.1
Level 2	Blue light No.2
Level 3	Blue light No.3

Level 4	Blue light No.4
Natural Wind	Green light No.5

Operating Instructions

4. Oscillation

Lightly touch the oscillation button to select the oscillation angle:

90°	Indicator No.3 on
180°	Indicators No.2, No.3, and No.4 on
330°	All five indicators on

5. Ambient Light

Lightly touch the ambient light button to cycle through:

Warm light → White light → Off


6. Timer Function

In power-on mode, press and hold the ambient light button for 3 seconds, or press the timer button on the remote control to enter timer setting mode.

Press repeatedly to select the desired operating time as shown below:

Timer Duration	2h	4h	6h	8h	10h	OFF
Indicator No.	1	2	3	4	5	-
Light Color	Blue	Blue	Blue	Blue	Green	-

 B. Remote Control Operation

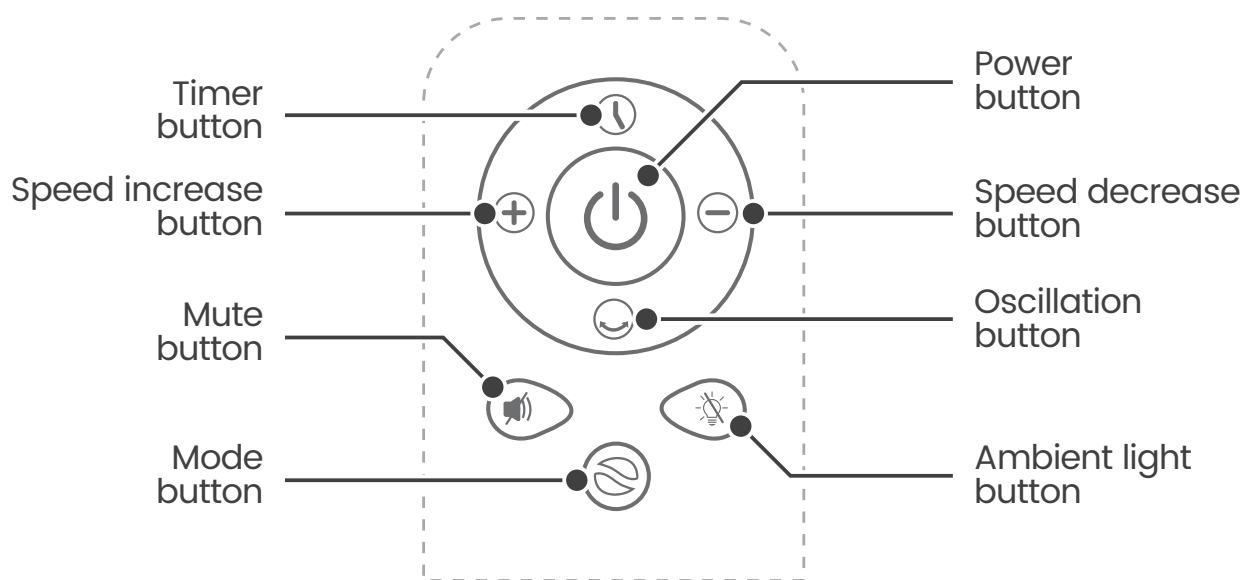

Operating Instructions

1. Timer button

Press to set the scheduled shut-off time.

The operating duration corresponds to the illuminated indicator number, as shown in the table above.

2. Oscillation button

Press repeatedly to select the oscillation angle in the following sequence:

90° → 180° → 330° → Oscillation off → 90°...

3. Mute button

The fan has audible prompts by default.

Press this button to turn off the beep sound.

4. Ambient light button

Press to turn ambient light ON/OFF.

5. Mode button

Press to switch between Natural Wind and standard speed modes.

6. Speed increase button

Press repeatedly to increase the fan speed in the following sequence:

Level 1 → Level 2 → Level 3 → Level 4 → Natural Wind

7. Speed decrease button

Press repeatedly to decrease the fan speed in the following sequence:

Natural Wind → Level 4 → Level 3 → Level 2 → Level 1

8. Power button

Press this button to turn the fan on or off.

Operating Instructions

Remote Control Re-Pairing

If the remote control does not respond, follow the steps below:

- Press and hold the Oscillation button and the Ambient light button on the fan at the same time until all indicators flash.
- Within 10 seconds, press any button on the remote control.
- When the indicators turn off, test the functions using the remote control. If all functions work properly, the re-pairing is successful.

Note:

- If the fan is not operated for 72 hours or automatically shuts down due to a low battery, the remote control receiving function will be automatically disabled.
- Press the power button on the fan or connect it to a power source to reactivate the remote control function.

Battery Indicator Description

- When the battery is low, Indicator No.5 flashes red.
- During charging, Indicators No.1 to No.4 flash in sequence. When fully charged, Indicator No.5 lights green.

During operation, if no buttons are pressed for 10 seconds, the indicators display the remaining battery level:

5 lights on	100%
4 lights on	80%
3 lights on	60%


2 lights on	40%
1 light on	20%
Below 20%	Indicator No.5 flashes red

Operating Instructions

Fan Head Angle and Height Adjustment

- The fan head rotates along Axis A.
- The support rod rotates along Axis B.

 Different tilt angles of the fan can be adjusted.

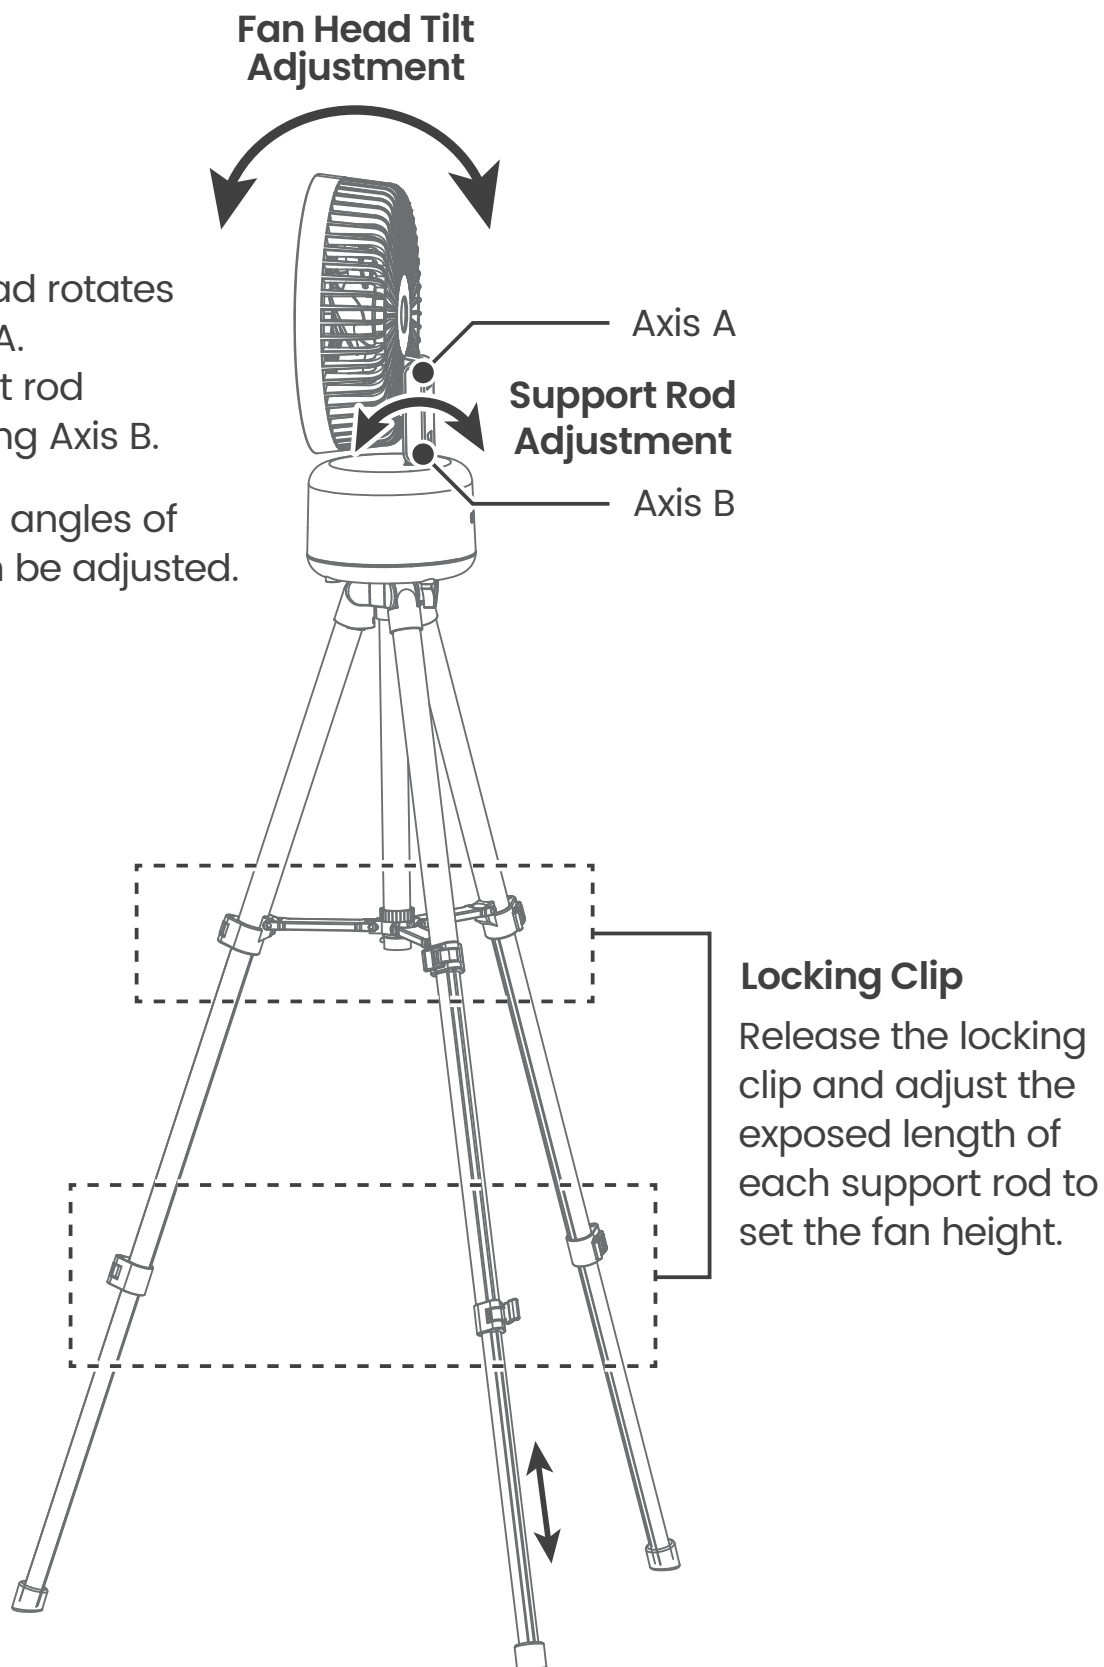


Cleaning and Maintenance


1. Before cleaning, turn off the fan and unplug the charging cable.

2. Remove the grille fixing screws.

 
Grille fixing
screw

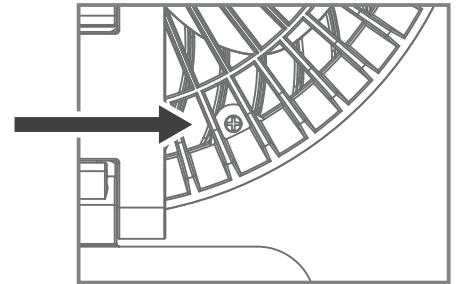

 3. Rotate the front grille counterclockwise until the alignment marks match.

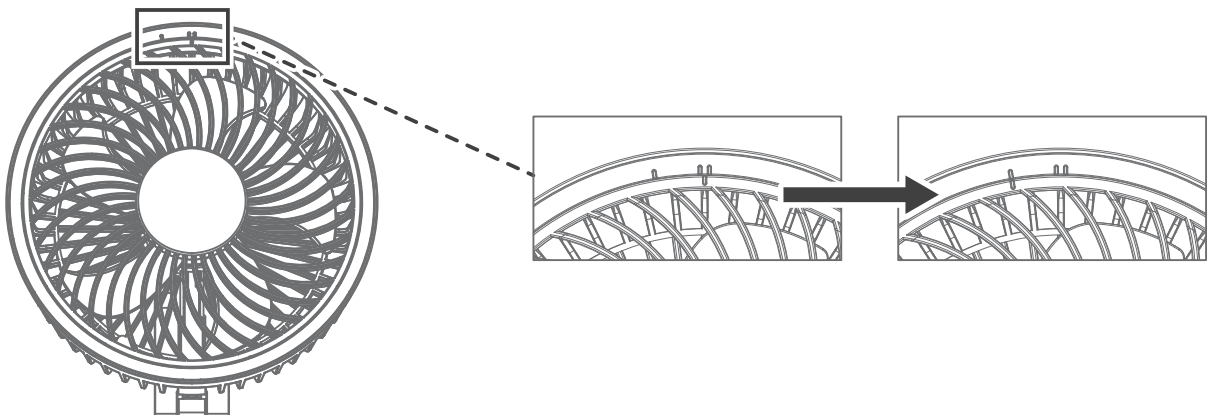

 4. Slide the front grille out along the arrow direction.

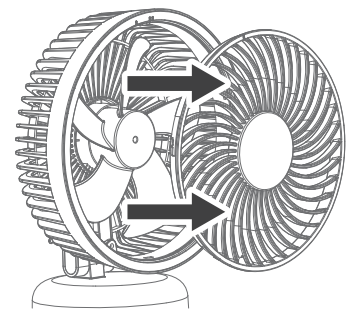

5. Clean the front and rear grilles and fan blades with a soft cotton cloth and non-solvent cleaner. Do not immerse the fan in water.

6. If the fan will not be used for a long period, clean it thoroughly, repack it in its original packaging, and store it in a dry place.

Troubleshooting

Before requesting service, please check the following items. Do not disassemble or repair the product by yourself.

Problem	Possible Cause	Solution
Fan does not turn on	Battery is depleted and no external power is connected	Charge the fan using a 5V charger with a current rating of 2A or higher
Buttons work but remote control does not respond	Remote control is out of operating range	Move the remote control closer to the fan
	Remote control battery is depleted or installed incorrectly	Replace or reinstall the remote control battery
	The fan is not operated for 72 hours or automatically shuts down due to a low battery, so the remote control receiving function is disabled.	Press the fan power button or plug in the charger to activate the remote control function
	Pairing data is lost	Re-pair the remote control
Fan stops suddenly	Timer has reached the preset time	Press the power button to restart the fan

If the above solutions do not resolve the problem, please contact your local distributor or service center.

Product Specifications

Power Supply	Type-C, 5V, 10W
Input	5V, 2A
Battery	3.7V, 6000 mAh
Control Method	Buttons + Remote Control
Operating Modes	Standard Wind / Natural Wind
Max. Timer Setting	10 hours

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ROWAN ELECTRIC APPLIANCE LLC

**8:30am–5:30pm P.S.T.
Monday to Friday**