



**PRODUCTS
INSTRUCTIONS**

Contents

SAFETY PRECAUTIONS	2
BEFORE INSTALLATION	8
Water pressure	8
Installation Space	8
Installation Drawing Plan	8
INSTALLATION	9
Installation steps	9
Battery Installation	10
Seal the bowl unit	11
Connect power cord	11
Checklist and trial run	12
NAMES OF PARTS	13
WHAT'S IN THE BOX	14
FUNCTIONS OVERVIEW	14
SIDE BUTTON OPERATION	15
When user is sitting on the unit	15
When user is not sitting on the unit	15
REMOTE CONTROL OPERATION	16
MAINTENANCE	20
SPECIFICATIONS	21

SAFETY PRECAUTIONS

IMPORTANT

Read all instructions and warnings before using

Symbols and meanings



WARNING

May cause death or serious injury



CAUTION

May result in injury or property damage

The following symbols are used to indicate important safety instructions for the use of the product

Symbol	Meaning
	This symbol indicates a prohibited use of the product
	This symbol indicates a required step in the use of this product

- This product is classified as Class 1 Equipment and must be grounded.
- Install this equipment where a GFI (Ground Fault Circuit Interrupter) electrical outlet is accessible
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play or tamper with the appliance



WARNING



DO NOT IMMERSE

Risk of Electric Shock. Connect Only to a Grounding Type Receptacle Protected by a Ground-Fault Circuit-Interrupter (GFCI)"

This product is not to be used with extension cords. Doing so may cause fire, electric shock, burns, or short circuiting

Do not plug or unplug the power plug with wet hands.

Doing so may cause electrical shock

Do not get any water or cleaning solution on the top of unit or power plug

Doing so may cause fire, electric shock, burns, or short circuiting

Doing so may cause the product to crack resulting in injury or water damage

Never disassemble, repair or alter the unit

Doing so may cause fire, electric shock, burns, or short circuiting and may void product warranty

Do not install the product on moving vehicles such as trailers or boats

Doing so may cause fire, electric shock, burns, short circuiting or malfunction
Moving parts of the unit may come loose and fall off, resulting in injury

WARNING



Do not use the unit if a malfunction occurs.

Always unplug the power plug from the outlet.

Close the water shutoff valve to stop water supply

Possible malfunctions:

Water is leaking from a pipe or the tank

The product is cracked or broken

The product makes a strange noise or emits a strange odor

The product emits smoke

The product is abnormally hot

The bowl unit is clogged

The toilet seat is not in its original place.

Continued use after malfunction could cause a fire, electric shock, burn, short circuiting, injury or water damage

Only use tap water or potable well water/underground water. Do not use seawater

Doing so may cause irritation to the skin and malfunction

Do not touch the power plug during thunderstorms.

Doing so may cause fire or electric shock

Do not allow the water supply hose to touch the power plug or outlet.

Doing so may cause condensation resulting in a fire, electrical shock, burn or short circuiting.

Do not do anything that may damage the power cord, power plug.

Do not strike, yank, twist, excessively bend, damage, alter, or heat the power cords. Also, do not place anything heavy on, bind or pinch the power cords.

Using a damaged power cord may result in a fire, electrical shock, burn or short circuiting

Do not use a loose or faulty electrical outlet.

Doing so may cause fire or short circuit.

Do not use any outlet or wiring equipment beyond its specified rating.

Plugging too many plugs into the same outlet, for example using outlet splitters, can cause fire due to over-heating

Do not use any power supply other than the one specified. AC 120V, 60Hz.

Doing so may cause fire, malfunction or over-heating.

Do not stick a finger or anything else into the warm air outlet.

Do not place anything on the warm air outlet or drape clothes over it.

Doing so may cause burns, electrical shock or malfunction.

Keep cigarettes and other open flames away from the product.

Failure to do so may cause fire.

WARNING



Beware of irritation or burn

Improper use of the toilet seat may cause irritation or burn.

When sitting for a long time on the toilet seat, switch the toilet seat temperature adjustment to "OFF". When any of the following persons use a heated seat or warm air drying, someone should switch the toilet seat temperature adjustment to "OFF" and switch the drying air temperature to "Low".

Young children, the elderly, and other users unable to set the temperature appropriately themselves including; the ill, physically disabled and others who do not have freedom of movement; those using any medicines that cause drowsiness (sleeping or cold medicine), those who have been drinking heavily, anyone severely fatigued and anyone else liable to fall asleep are at risk.

This is an electrical product. Do not install it anywhere water is likely to get on the product or anywhere with humidity high enough that water is likely to form on the surface of this product.

When using the product in a bathroom, install a fan or ventilation port and ensure good air flow through the bathroom.

Failure to do so may cause fire or electrical shock.

Always connect this product to the cold-water supply.

Connecting to hot water supply may result in burns and equipment damage.

Make sure that a properly grounded (3 prong) outlet has been installed.

Failure to install a grounded outlet could cause electrical shock in the event of a malfunction or short circuit.

Insert the power plug securely into the outlet.

Failure to do so may cause fire, over-heating, or short circuiting.

To unplug, hold the power plug, not the power cord.

Do not unplug by pulling the power cord. Pulling on the power cord may cause damage and result in fire or over-heating.

If the power cord is damaged, avoid danger by having the manufacturer's repair department or equivalent specialist replace it.

Always disconnect the power plug from the outlet before cleaning, maintenance or inspection.

Failure to do so may cause electrical shock or malfunction.

Except when using "Nozzle cleaning".

WARNING

Periodically remove dust and dirt from the power plug and make sure it is securely plugged into the wall outlet.

Failure to do so may cause fire, over-heating or short circuiting

Pull the plug out from the outlet and wipe clean with a dry cloth.

Always unplug the power plug from the outlet before removing the top unit.

Failure to do so may cause fire or electrical shock.

Preliminary studies in females suggest that overuse of continuous spraying can increase the possibility of vaginal mucosa drying and potential reduction in desirable microbial organisms.

Although these studies have not been validated, please consult your healthcare provider for concerns regarding whether these circumstances may apply to you.

More importantly, if you are an individual suffering from any immune deficiency as a result of disease, chemotherapy, or other medical condition compromising the immune system you should consult your healthcare provider before use of this product.

CAUTION



Do not use the product if the top unit is unstable.

- Doing so may cause the top unit to come loose and fall, resulting in injury.

If the product is damaged, do not touch the damaged section.

- Doing so may cause electrical shock or injury. Replace it immediately.

Do not apply strong force, mechanical shock, step on or stand on the toilet seat, toilet lid or top unit. Also do not place any heavy object on the toilet seat, toilet lid or top unit.

- Doing so may cause cracking or cause the top unit to come loose and fall, resulting in injury.
- Doing so may damage the product and cause injury or water damage.

Do not lift up this product by the toilet seat or lid.

Do not raise the toilet seat or lid while objects are resting on top of the toilet.

- Doing so may cause the top unit to come loose and fall, resulting in injury.

When cleaning or maintaining the plastic parts (top unit etc.) or the water supply hose, use a kitchen cleaner diluted with water. Do not use any of the following.

Toilet cleaner, household cleaner, benzene, paint thinner, powdered cleanser, or nylon scrubbing pads.

- These items may damage or crack the plastic and cause injury or malfunction.
- These items could damage the water supply hose and cause a water leak.

To prevent a sudden water leak, do not remove the water filter drain valve when the shutoff valve is open.

- Doing so will cause water to spurt out.
(Refer to Page 34 for instructions on cleaning the water filter drain valve.)

Do not fold or crush the water supply hose; do not damage by cutting with a sharp object.

Doing so may cause water leaks.

Do not pour hot water into the toilet.

- Doing so may result in damage to the toilet, injury or water damage.

Do not flush anything other than bodily waste and toilet paper. Also, do not flush too much toilet paper.

- Doing so may clog the toilet, causing waste water overflow and water damage.



If a water leak should occur, always close the shutoff valve.

When the ambient temperature is likely to drop to 0°C (32°F) or lower, prevent damage to the pipes and hoses due to freezing.

- Frozen water pipes could cause the top unit and the pipes to break, resulting in a water leak.
- Regulate the room temperature to prevent the pipes and hoses from freezing during cold months.

When not using the unit over an extended period of time, drain the water out of the top unit and the water supply hose after closing the water shutoff valve, and pull the power plug from the outlet.

When using the product again, allow the product to refill with water first.

- Otherwise, the water in the tank might become contaminated and cause skin inflammation or other problems.
- Leaving the power on may cause fire or over-heating.

When installing the water filter drain valve, make sure that it is securely tightened in its proper position.

- Failure to securely tighten it may cause a water leak.

If the bowl unit is clogged, disconnect the power plug and remove the clog.

- If the auto flush is functioning, it could make the wastewater in the bowl unit overflow and may result in water damage.
- Use commercially available tools that are made for unclogging the bowl unit to remove the clogging.

Always flush, even after just urinating.

- Failure to do so may cause inadequate flushing or clogging of the bowl unit, resulting in wastewater overflow and water damage.

Wipe condensation on the bowl unit, tank, water supply pipe and shutoff valve with a dry cloth.

- Condensation may cause staining and corrosion of the floor.
- Ventilate the restroom to prevent condensation.

Wipe any urine, condensation, cleaner, water, etc. that has gotten on the floor with a well-wrung mop or cloth.

Failure to do so may cause staining and corrosion of the floor.



DANGER To reduce the risk of electrocution

1. Do not use while bathing.
2. Do not place or store the product where it can fall or be pulled into a tub or sink.
3. Do not place in or drop into water or other liquid.
4. Do not reach for the product when it has fallen into water. Unplug it immediately.


Please read the instructions carefully before installing. Our company will not be held responsible for problems caused by not following original instructions.

NOTICE BEFORE INSTALLATION

WATER PRESSURE

■ Water pressure standard

Water pressure standard rate: 0.15MPa-0.55MPa Open the valve and let water run into a bucket with volume measure for 15 seconds. If water in the bucket is more than 4 L, minimum water pressure is met. Please adjust the angle to fit in using when if the water pressure is too high.

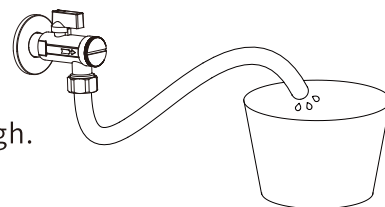


■ Drainage operation


Turn on the angle valve and drain off water over 2 minutes before installing inlet tube onto angle valve.

INSTALLATION SPACE

- Ensure there is enough space around the unit, confirm the bathroom door or shower door will not hit the unit when they open.
- Ensure the minimum distance from the wall to the center of the floor drain is 305mm or 12" long.
- A GFI plug is required close to the unit.

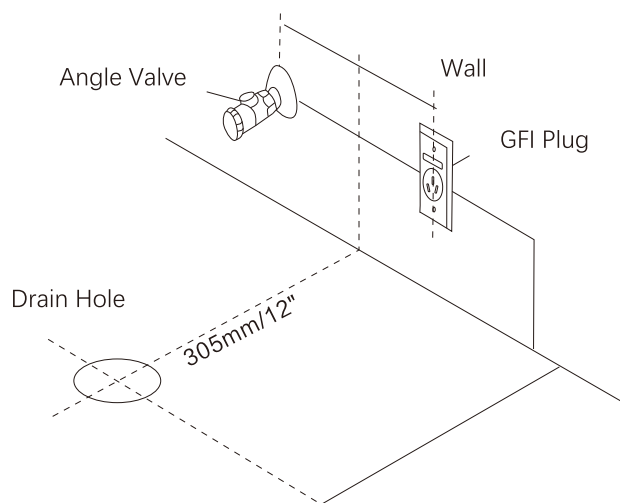

INSTALLATION DRAWING PLAN

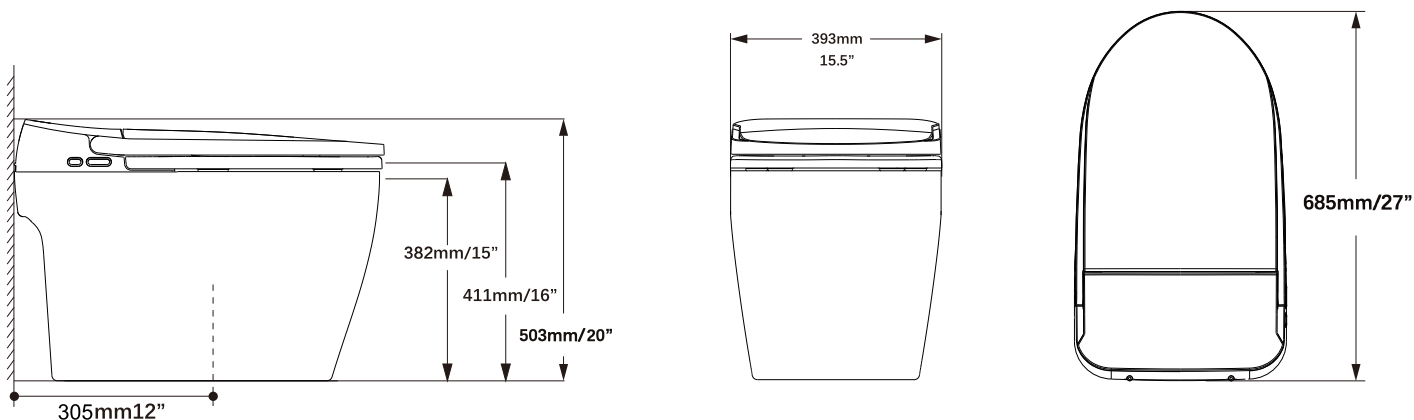



CAUTION

- The drawing plan is not the actual scale of the unit.
- When doing the installation in cold weather, leave the unit in room temperature for at least four hours before installing.

INSTALLATION STEPS


1. For the bathroom newly installing a toilet , a flange with bolt shall be added.

Note: You need to install flange according to the size and position of the two bolt holes at the bottom of the ceramic.
See Figure 1

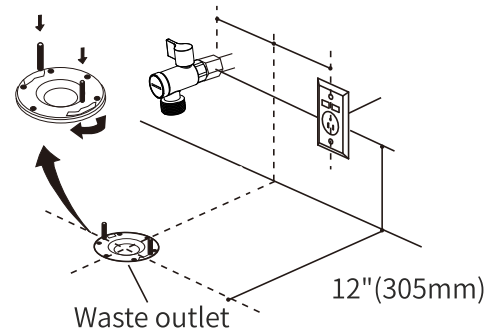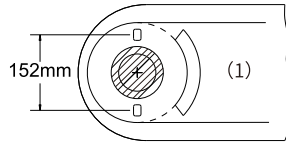


2. Lift the flip lid assembly from the toilet, up from the inside.


Note: Do not pull the lid roughly when lifting the toilet flip lid

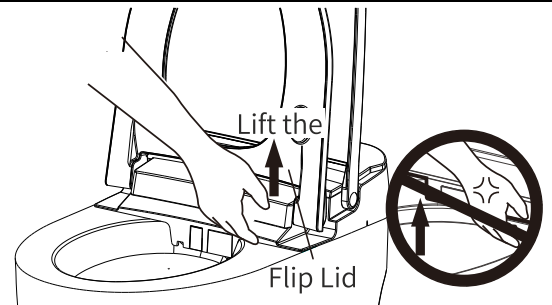


3. Install a flange under the toilet.

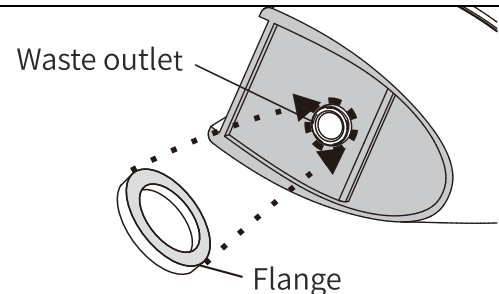

4. Put toilet on the flange, making sure the bolts line up with the holes in the toilet.
(from the top)

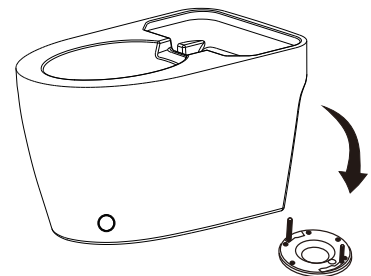


5. Use a spanner to lock the nut and other accessories to the retaining bolts.
(from the top)

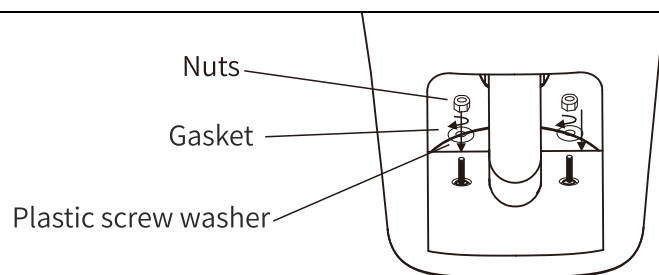


6. To install seat cover and ceramic bowl: the seat cover shall be aligned with the ceramic bowl.

Then press down with hands

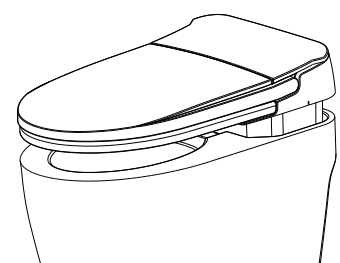

7. Install the water inlet angle valve and connect the dedicated hose (before connect the dedicated hose, please drainage for 3-5 minutes, ensuring the pipe it is clean and won't be blocked)

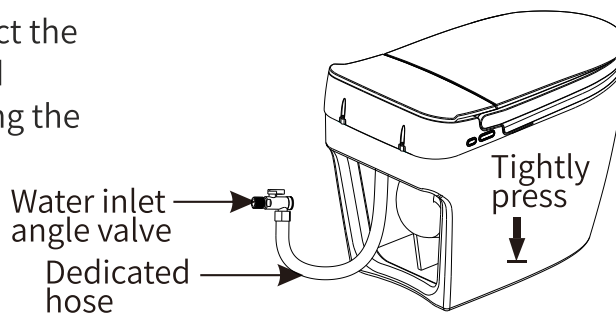

Filter screen should be cleaned with clear water every three months


Steps to clean filter screen: Turn off the valve, unscrew filter screen, carefully rinse with clean water.

Pipe and valve could be different from above graphic, due to production batches, please refer to actual product

BATTERY INSTALLATION

Steps

1. Find Figure 2 to install the battery into the battery box.
2. Insert a new battery in the direction of the arrow and tighten the waterproof cap lockwise.
3. Press the flush button to make sure it flushes properly

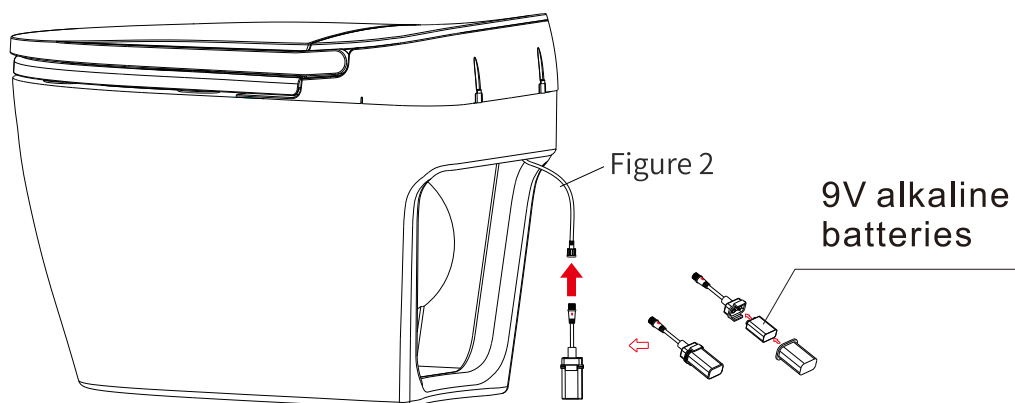

Note

1. The intelligent toilet accessories have been debugged and are strictly prohibited for personal disassembly.
2. Please use the fittings and hoses provided by our company. Old fittings and hoses cannot be reused.

SEAL THE BOWL UNIT

Seal the gap between toilet and the ground, to further prevent water and odor leakage. Evenly apply a layer of general-purpose sealant (not included with the unit) around bottom of toilet, smooth the sealant with finger. Allow the sealant to dry for at least 24 hours. (Follow instructions of specific sealant used for installation.)


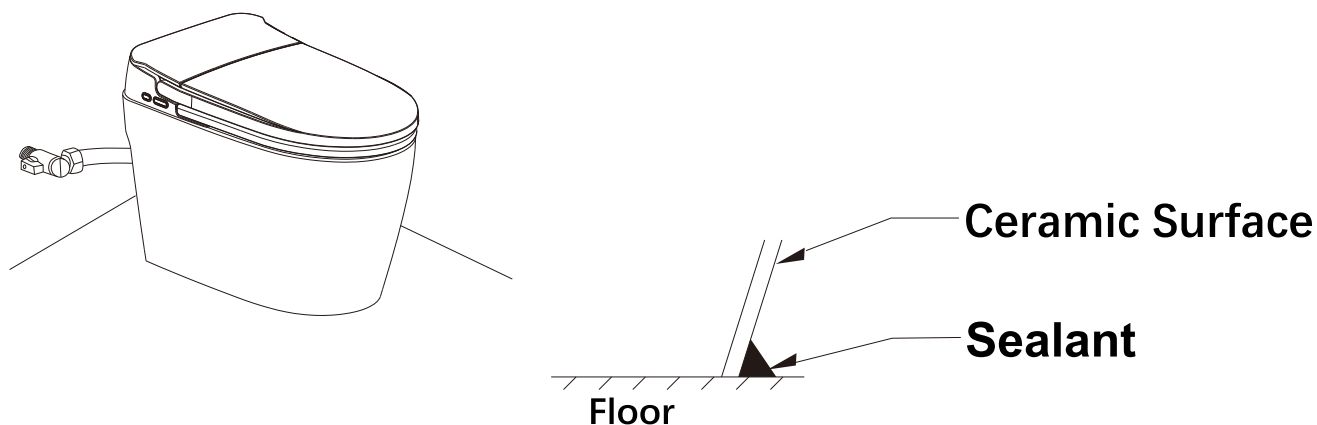


Figure 5

CONNECT POWER CORD

1. Power cord must be connected to a AC110-120V,50/60Hz , 16A+, grounded GFI (Ground Fault Circuit Interrupter) power socket.
2. Wait for the unit to finish self-inspection after connected. It is normal that user see side button flash blue light, nozzle stretch out, machine engage on and flash sound.
3. User should do a trial run after self-inspection is done.

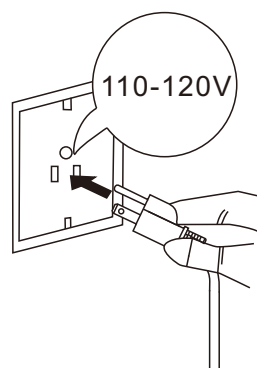

CHECKLIST AND TRIAL RUN

Power plug is securely connected to a grounded AC 110-120V, 16A, 50/60Hz GFI power source

Water valve is turned on

All connection points are securely fastened

No water leakage


Power indicator on the unit is on

Perform all functions with remote control and side buttons (place one hand on the sensor area on the seat to activate certain cleansing functions, place a plastic sheet between the seat and toilet bowl to avoid water spraying out of the bowl)

- Front and rear wash
- Massage
- Water temperature
- Water pressure
- Nozzle position
- Nozzle self-cleansing
- Air dryer
- Air temperature
- Seat temperature
- Flushing

A trial run is mandatory for safety purposes, if any malfunction has occurred, contact your dealer .

NAMES OF PARTS

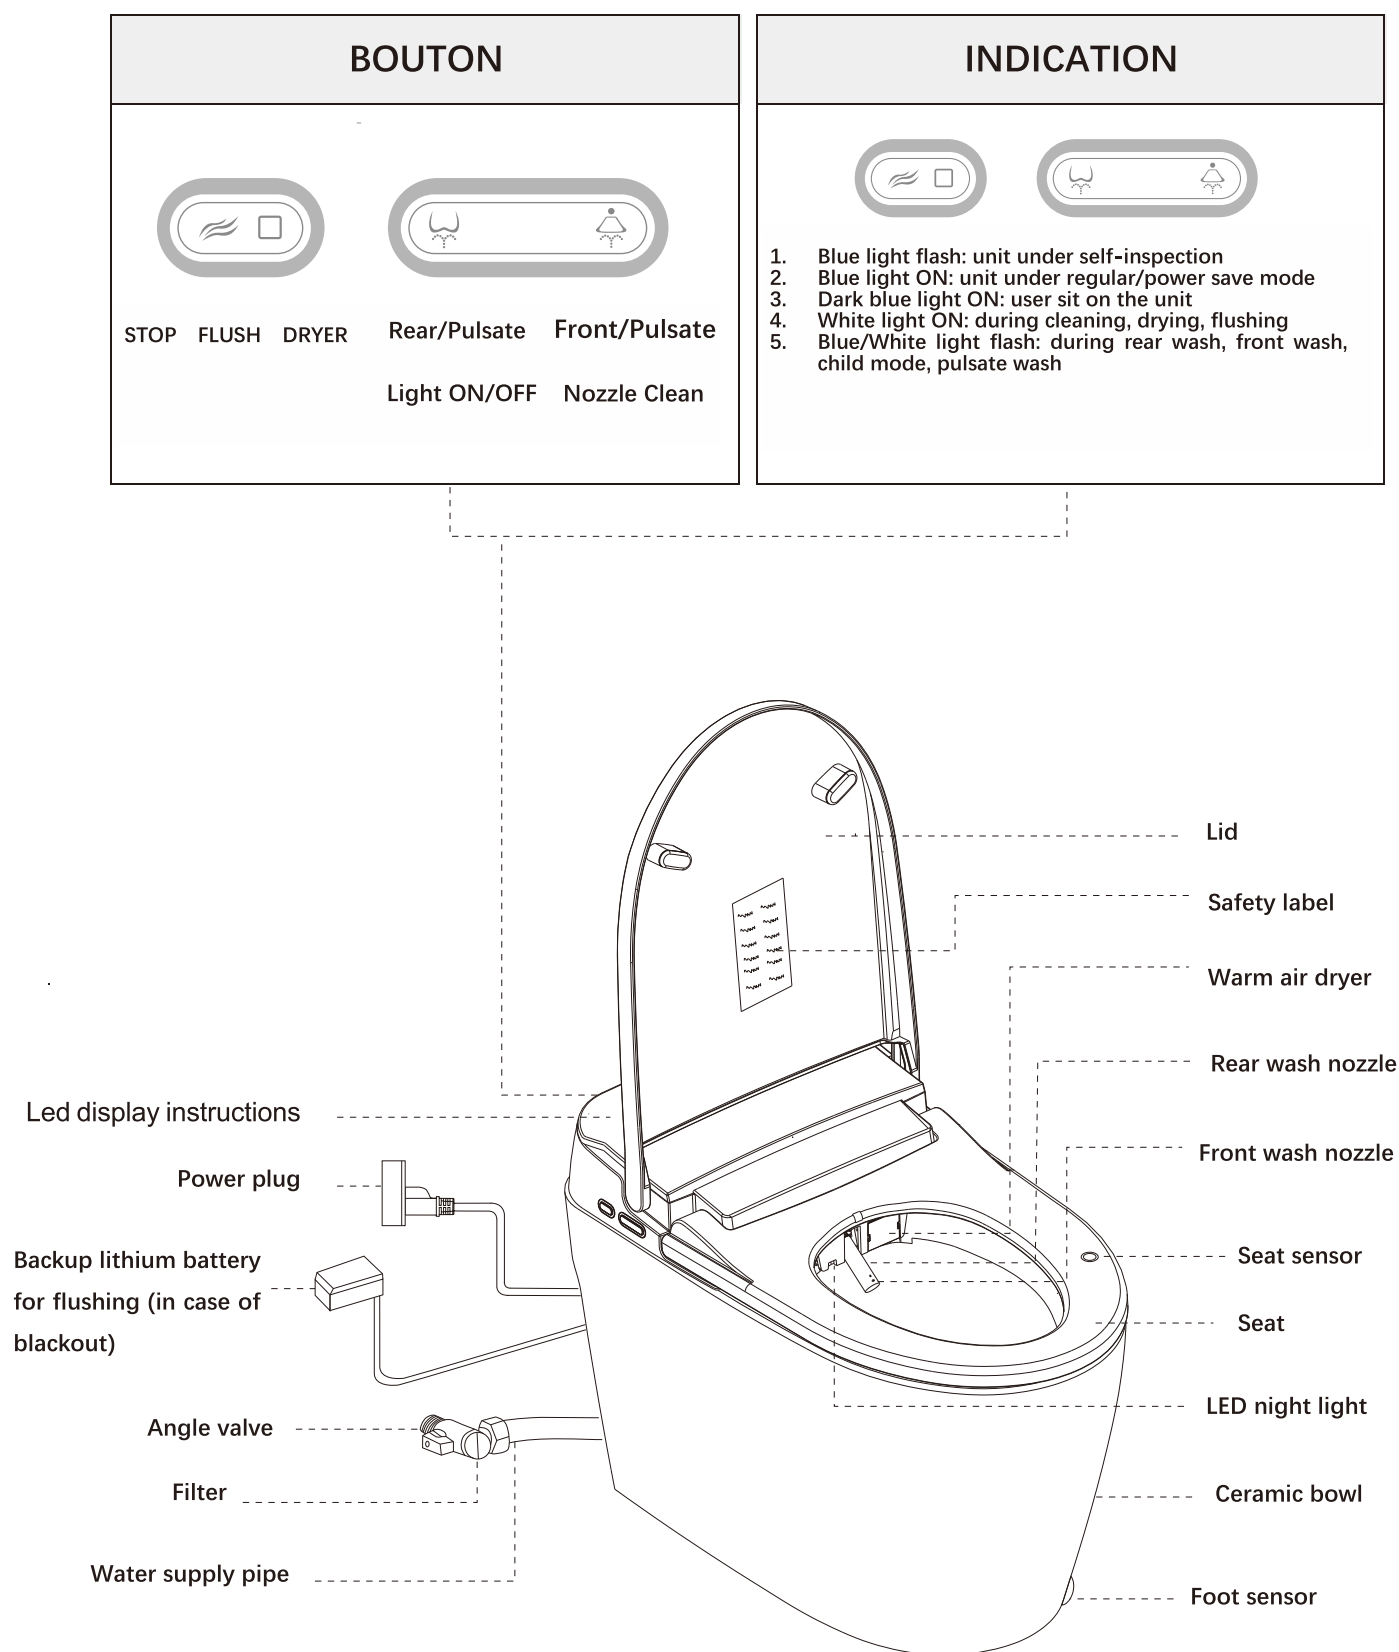

There could be minor difference between actual product and above graphic, due to production batches.

WHAT'S IN THE BOX

Main unit	1	Remote control	1
Angle valve (Filter screen inside)	1	Wax Ring	1
Connection pipe	1	Power back up battery	1
Printing materials: User manual, Warranty card			


FUNCTIONS OVERVIEW

FEATURED FUNCTIONS:

HYGIENE	SAFETY	COMFORT
Rear wash Front wash Stainless steel nozzle Self-cleansing nozzle Pre-rinse before use	Overheat protection Low temperature burn protection Silent self-closing seat and cover Fire retardant seat Pressure resistance seat Power saving mode IPX 4 resistance Power-outage flush Power-outage memory	Warm air drying Heated seat Adjustable water temperature Adjustable water pressure Adjustable air temperature Adjustable nozzle position Night light Remote/foot sensor flush Auto flush

LED DISPLAY INSTRUCTIONS

(optional function, subject to model)

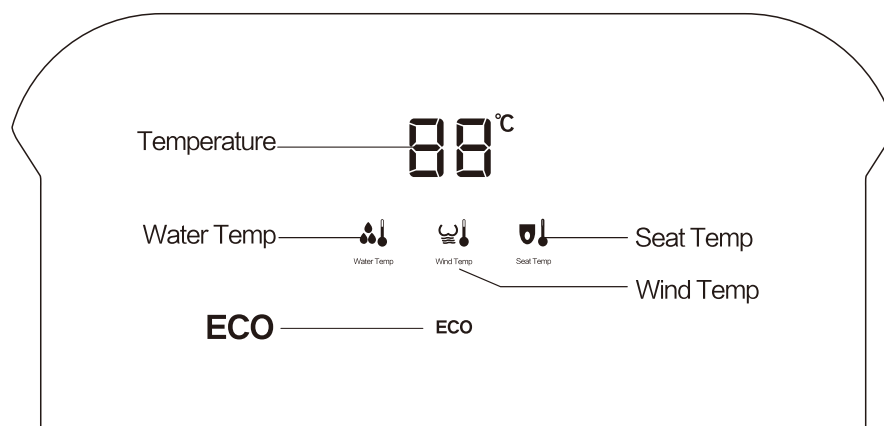

SIDE BUTTON OPERATION

WHEN USER IS SITTING ON THE UNIT	
	Press once to start rear cleansing, regular cleansing time is 90 seconds, press again within 90 seconds to activate pulsate cleansing, again to stop pulsate cleansing. When rear cleansing finishes, unit will start warm air-drying for 240 seconds by default
	Press once to start front cleansing, regular cleansing time is 90 seconds, press again with 90 seconds to activate pulsate cleansing, again to stop pulsate cleansing. When front cleansing finishes, unit will start warm air-drying for 240 seconds by default.
	When user is seated on the unit, press once to start warm air-drying for 240 seconds. When other functions are in process, press once to stop on-going function. When the unit connected to power supply, press and hold button to begin manual flushing. Note: if the unit is not connected to the power supply, press and hold button to begin manual flushing by Lithium battery. (Lithium battery life is approximately 500 uses. If user has trouble changing the battery, please contact technician support for more help).
Foot sensor	Tap the foot sensor to activate flushing.
WHEN USER IS NOT SITTING ON THE UNIT	
	Press once to turn ON/OFF color light which is on the side button
	Press once to stretch nozzle out, the nozzle starts self-cleaning for 90 seconds. Press again to stop self-cleansing.