

Chinese-English Dictionary Operation Guide
ENGLISH-CHINESE DICTIONARY USER'S GUIDE

Step 1. Power On

Press the power button for 3 seconds and hear the Welcome sound to turn on the device.

Step 1



Step 2. Pattern

Use with the dictionary keyboard on the back. Click **Dictionary ON** on the dictionary keyboard to switch to dictionary mode.

Step 2



Step 3. Query

Select the query with the pen tip Letter, click after completion Enter, and the pen will read the result

Step 3



Look up the English pronunciation and meaning of the word Meaning of the text

For example, to search for the word "APPLE", click sequentially on "A", "P", "P", "L", and "E", then press Enter. At this point, the sound of "APPLE, Apple" will be emitted. If you want to hear it again without re-entering, just press Enter again to emit the sound of "APPLE, Apple".

Step 4. Clear

If the input letters are sent The location is incorrect. You can click here **Clear** will clear what you just added Re-import and restart

Step 4



Enter to proceed. To query another

Group words and follow the **Step 3** steps.

Step 5. Close

After using the dictionary feature, you can Select **Dictionary OFF** Turn off dictionary feature. After turning it off Back to the general point reading mode.

Step 5



Network warranty login

1. Scan the QR Code to enter the login area
2. Or go to LiveABC website <https://store.liveabc.com> to "Read Point / Online Warranty Card Filling" and enter the login area



Use instructional videos

Scan the QR code to LiveABC website to learn More reading pen usage introductions

The e-reading pen comes preloaded with audio files of popular books, allowing users to add or remove files as needed.

Reading Publishing Consultation Services

Hiburn Co., Ltd.
(02)2528-0958

Technical Maintenance Consultation Services

MicroPuda Technology Co., Ltd.
(03)656-0056



The power indicator light turns off when the device is fully powered, eyB-eyB to hear, press the power button for three seconds

Read the opening points immediately, oG eWereH to listen, famous books or diagram points to read the surface seal points

To lower the pitch, press the key »«; to raise the pitch, press the key +«. The pentatonic scale pattern is constructed within the pentatonic system.

The engine started up after the test, and the green light was on. The light indicates the power source. Press the power button for three seconds to emO leW to listen.

Agency. *dâis* Book Selection. *ε dâis* Measurement. *dâis* Machine Open. *l dâis* Quick Step Operation

) Stomatodelectric disconnection: downward ↓ / Stomatodelectric connection: upward ↑

(Lock source power) > Tooth blue advance/ retreat / Sound transmission <: Switch

cycle ↓ Short press (Key tooth blue Hole plug ear mm5.ε

Bright Green

Full charge

Long Chang-Flame Red

medium range overcharge

Bright Constant-Flame Blue

connected(audio broadcast Molotobalania

Slanty - Flame Blue

Unconnected(voice broadcast Molotobalania

Flash-Flame Green

static reading point

Slowly - Flame green,

near machine waiting

Slanty-Flame Green

The engine started up after the test, and the green light was on.

orange

Hua Shi Chu Ji Kai

1. Built-in speaker

2. Type-C USB (Charging / Data Download) port

3. Power button (Short press for 3 seconds to turn on, press again for 3 seconds to turn off)

4. Volume increase button (Volume increases from Lv1 to Lv5, Lv5 is maximum volume)

5. Volume decrease button (Volume decreases from Lv5 to Lv1, Lv1 is minimum volume)

6. CMOS touch sensor lens

7. Hanging hole

8. LED status indicator



Ming Shuo Key Press

Product Specifications

Size	14 x 25.6 x 23.3 cm
Net weight	Approximately 45 g
Lamp	Φ17Φ12mm 801.2W (85~90 dB max)
Range	3 hours in normal mode;2 hours in Bluetooth mode
Charge	Recommended DC 5V 500mA charger, which can be fully charged in about 2.5 hours * Does not support voltage above DC 5V or current above 2A
Power	Built-in polymer explosion-proof lithium battery 500mAh
Power saving	Auto-shutdown (approximately 3 minutes)
Indication light	LED indicator light(red light / green light / blue light / orange light)
Memory	Built-in 16GB Micro SD card(not replaceable or removable by users)
Earphones	Stereo Φ3.5mm(Only supports sound output / does not support MIC)
Format	Read the file format *.bnl
USB	TypeC USB 2.0 standard(Supports data updates and charging)
Play	MP3 Mode File format support: *.mp3(requires MP3 playback card)
Recording	Supports voice recording(requires a recording control card)
Bluetooth	Bluetooth 4.0 LE
Button	Power Lock Switch / Power On / Volume Up / Volume Down / Bluetooth Key

Sound Card & Sound Card Operation Instructions



1. Use the recording function with a recording card
 2. Dot **RECORD & PLAY** Start Recording Mode(Recording Mode)
 3. Dot Upon hearing Start Recording,start recording
 4. Dot When you hear Stop Recording,stop recording
 5. Delete the latest recording. Click
 6. Folder location for recording files on memory card:\\ recording\\record
1. Use a music card to listen to the audio file
 2. Dot **MUSIC PLAYER** Start MP3 Mode(MP3 Mode)
 3. Click the play button to start playing the MP3 file
 4. Upload the MP3 to memory card \\music
 5. If you don't have a music card, press the pen's power button to switch to MP3 Mode and listen to the file.

About Batteries

1. It is recommended that you charge the device for 2-3 hours before using the pen for the first time. The device indicator light will be red until the device is fully charged, and the green light will remain on to indicate that the charging is complete.
2. When charging, we recommend using the included charging cable provided by our company.
3. When the battery is nearly depleted, the device emits a 'beep beep' sound before shutting down.
4. Charging once a month (about 2.5 hours) is necessary to prolong battery life and prevent battery swelling and damage when charging again after a long period of inactivity.
5. When charging, do not use a fast charging cable or plug, as it may damage the charging components. *Note: The power supply range is acceptable (below 5V1A)

About Point Reading

1. Please touch the book page with the tip of the pen and keep the pen at an angle of about 70 degrees to the page for the best reading effect.
2. Place touch-sensitive markers on the pages. Avoid scratching, dirt, or coloring the pages with colored pens to prevent interference with the optical pen's sensing.
3. Do not delete files in the built-in folder without permission, as this may affect the normal operation of various functions.

About Saving

1. Store it properly to prevent drops from heights or violent impacts.
2. Avoid placing it in high-temperature and humid environments, and do not spray or pour liquids on the e-ink pen.
3. The optical tip of the reading pen is a high-tech precision component. Do not insert foreign objects or use sharp objects to pierce the tip, as this may cause damage to the lens.

This product is a low-power RF device certified by the National Communications Commission under its technical specifications. Without official approval, no company, brand, or user may modify the frequency, increase power output, or alter the original design features and functions.

The use of low-power RF equipment must not compromise flight safety or interfere with lawful communications. Any detected interference must be immediately deactivated until interference-free conditions are restored. The term 'lawful communications' refers to radio communications conducted in compliance with the Telecommunications Administration Act. Such equipment must be capable of withstanding interference from lawful communications or industrial, scientific, and medical radio-emitting electrical devices.

Warranty

This product does not cover the following damages:

1. Damage caused by human-induced drops, water immersion, corrosion, or foreign object intrusion, resulting in scratches on the product surface, nib wear, or cracks in the casing.
2. Failure to comply with usage precautions may result in damages due to misuse, negligence, improper installation, or improper testing.
3. Damage caused by unauthorized modification or repair of the product, or by exceeding its intended use.
4. Damage caused by natural disasters such as fires, floods, earthquakes, or other force majeure events.
5. Damage to the shipment occurred due to improper packaging during mail delivery.
6. Consumable parts and accessories, including lithium batteries,USB cables,SD memory cards, etc., are not covered by this warranty.
7. Do not remove the serial number label from the pen to ensure proper warranty service.

Q1 How to read the book content?

A1.Click the dot reading pen icon on the cover to start the dot reading function, then turn to the inside page to read.
All other e-books in our company can be launched in the same way.

Q2 Why can't I turn it on? Is my pen broken?

A2.Please follow these steps to test:

- ① Check if the e-ink pen is fully charged before use.
- ② Power button confirmation: Make sure the power button you press to turn on the device is the one closest to the speaker. If you press the wrong volume button, the device won't turn on. Also, make sure you hold down the power button for 3 seconds to turn on the device. A one-second press won't turn it on.
- ③ Check the indicator: Check the LED light. If it is on, the device is powered on. Alternatively, press the volume or mode button. If you hear a sound, the device is powered on and ready for use. If the device still won't turn on after completing the above steps, please call us.

(02) 2528-0958, which will be served by a Dedicated Person.

Q3 Does it have an automatic power-saving function? Will it turn off automatically?

A3: To save power, it will automatically turn off if there is no reading or any button operation for 3 minutes. If you need to use it again, simply press the button to reactivate it.

Q4 Why do I keep hearing the "ding ding" sound?

A4.If you hear the "ding ding" sound, it means the e-reading pen does not have the audio file for this book stored and is playing the activation code. Please visit our official website (<https://store.liveabc.com/smartPen/download>) and download the dedicated section. Click My Voice bnl to download the e-reading audio file. If the downloaded file is compressed, decompress it first and then save it to the BOOK folder to start e-reading.

Q5 Why do I keep hearing the sound of "Wow"?

A5.Hearing the Wow sound indicates that the corresponding mode function has not been switched to. For example, if you select the dictionary card in the E-book Mode function, the Wow prompt sound will be emitted. The e-reading pen has three built-in modes: e-reading, recording, and MP3. If the current mode does not match the function being used, press and hold the power button after powering on to switch to the correct mode. For example, to use the e-reading function, press the power button above the pen after powering on to switch to E-book Mode. If you want to use the recording function, press the power button above the pen after powering on to switch to Recording Mode.

Q6 What is the file format for listening to music using MP3 Mode? Is it necessary to use a music card?

A6.The music file format is limited to *.mp3 format can be played, only with music cards.

Can all books published by LiveABC Group be read by touch?

A7.The e-reader is suitable for publications with e-reading support from our company. After purchasing the series, please visit our official website. Click My Voice bnl in the download section of the website (<https://store.liveabc.com/smartPen/download>) to download the audio file. If the file is compressed, decompress it first and save it to the BOOK folder before you can start reading it.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.