

After-Sales Service

Thank you for purchasing the company's products,for your due rights and interests,
please take good care of the warranty card,if there are product quality problems,
please contact the dealer.

Note:

- 1.From the date of purchase,normal users,circuit board components enjoy one year free maintenance service,the whole machine enjoys one year free maintenance service,
the product shellplastic is not within the scope of warranty;
- 2.Other consumables are not covered by warranty;
- 3.Please show the warranty card and purchase proof or invoice to be valid.

Non-warranty coverage:

- 1.Damage caused by careless or wrong use and human caused;
- 2.The warranty card is lost or damaged;
- 3.Damage caused by irresistible forces such as natural disasters,

 
This warranty card is only one copy,please keep it properly to prevent loss

Warranty Card(Customer storage)

Product model		Customer name	
Product name		Contact information	
Date of purchase		Fault description	
Customer address			

BABY ELECTRIC ROCKING CHAIR

Instruction manual

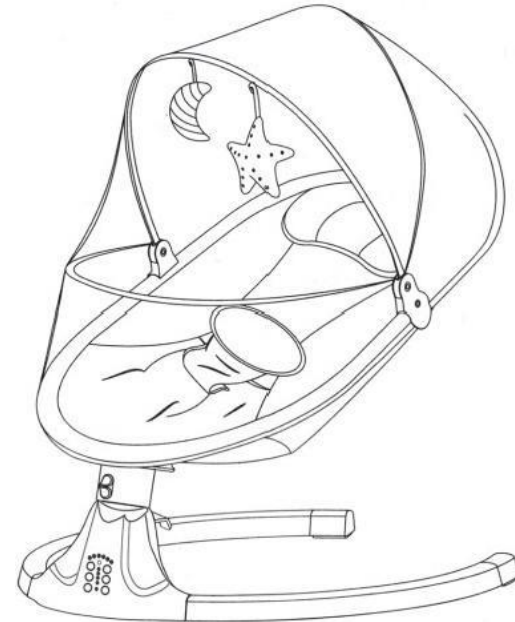


Please read the instructions carefully before using this product and keep it properly.
If you do not follow this instruction manual,it may affect the safety of your baby

Product Information

Product list

①Toy ×2,②pillow×1,③mosquito net x1,④seat cloth x1,⑤remote control x1,
⑥adapter x1,USB cablex1,⑦Mount x1,⑧Base x1(USB cable:DC round hole inserted
into the host,USB end inserted into the adapter).

 Note:Please check whether the parts are complete before use.

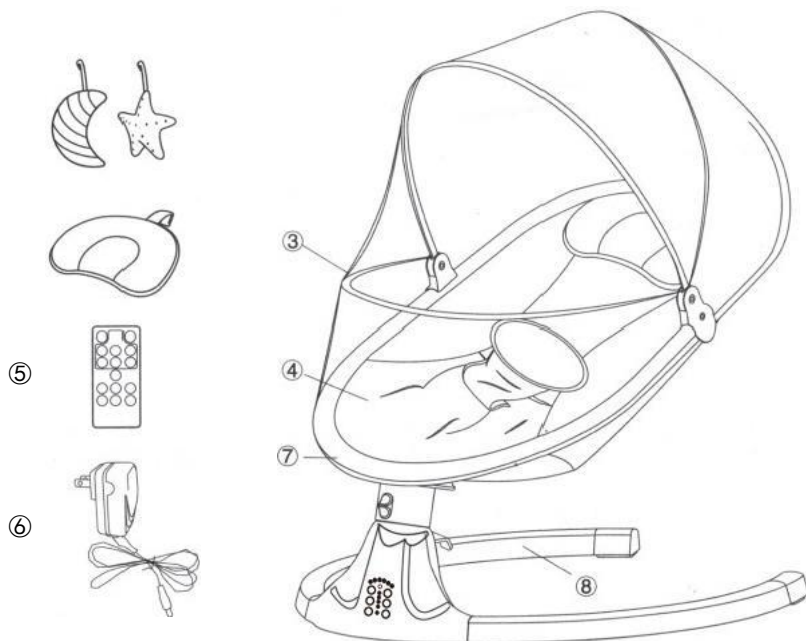


Swing lock key

Swing lock:

1.Push down to lock,rocking chair can not swing(slight swing, is a normal phenomenon).

 2.Dial up to restore the swing.

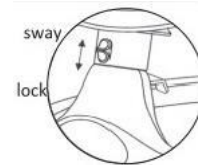

Remote control unit



Switch key

Play/pause

Timing keying

Previous song

MUSICIANS

Next song

Volume increase

aL Volume reduction

⑤

Swing, five gears

Sleep mode:Press to enter sleep mode,adjust the swing to the second gear and time for 15 minutes.

Stop rocking:Press stop rocking and press any gear key to resume rocking.

 


Power supply mode

1.DC plug can be inserted into 100-240V-50/60Hz AC power supply.

2.The DC port can be connected to the power supply of the charging bank (the output of the charging bank is 5V/1A)

3.Adapter output parameters:voltage is 5V,current is 1A.

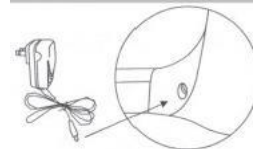


Matters needing attention

- Power terminal shall not short circuit.
- It is forbidden to use adapters other than those provided with this product to power the product.
- When using the adapter,keep the adapter and dataline away from children,and prohibit children from playing.
- The adapter used by the rocking chair should be regularly checked the data cable jack, accessories and other parts.
- Stop using if there is any damage.

HOW to Use

 Key description

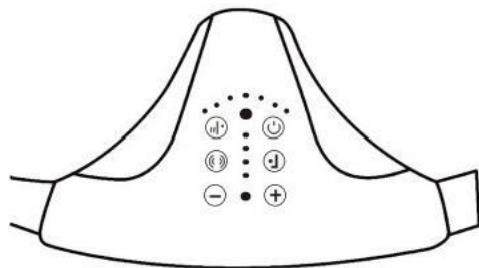

play button

Click to play music, then click to turn off music.
Open the mobile phone Bluetooth, connect "BT-BABY", after successful connection, you can play mobile phone music.

The priority level is Bluetooth > Built-in music.

Power button: Aerpoerom te nacao entsa no te oe sunedon

Press it, all the indicators are off, and the power is off.



Turn on the induction swing, the child will automatically swing when he wakes up and turns.



Timing button: Press the first indicator to show 08 minutes

Press the second light for 15 minutes

Press the third light for 30 minutes



+Swing ncrease pes tesun toioces thewatn



 
— swing reduction: Press down to reduce the swing,

Installation Instructions

Install/remove the mount

Installation: Insert the bottom pipe fitting "O" into the base connector "o".

Remove: Pull out the metal plate at the rear end of the connection between the seat and the base, and pull out the seat upward.

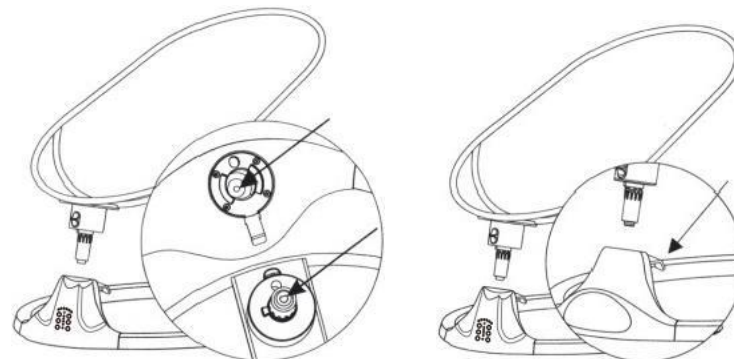


Install/remove seat cloth and pillow

Installation: 1. Cover the seat cloth from the top of the seat frame, and fit the back button


2. Put the pillow Velcro through the fixing ring on the top of the seat rack and stick the Velcro onto it.

 Disassembly: 1. Open the buckle and pull out the seat cloth. 2. Tear the Velcro and pull out the pillow

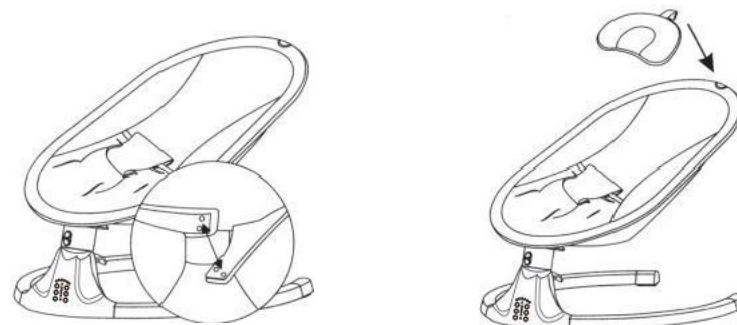


1 Install/remove the mount

 - 1.Insert the left and right foot pipes into the host,and ensure that the foot pipes are aligned with the screw holes on the host
- 2.Secure the four foot screws.

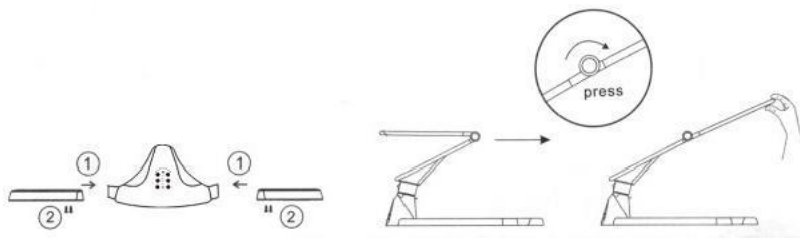


Warning: Please take care of your children
Do not allow children to play with accessor
to avoid injury or ingestion!

 Adjust the backrest:
Hold the top of the iron pipe with both
hands and adjust it upward.

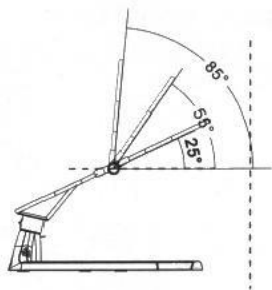

 Disassembly adjustment:
press the selection buttons at both ends
and push down to disassemble.

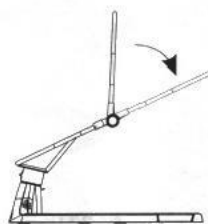


Note:Infants and children are not allowed during the above operation.The picture is for
installation illustration only,the product is subject to the actual object

Install/remove mosquito nets and toys

Installaion:1.Insert the toy Velcro into the middle fixing ring of the mosquito net and stick
the Velcro onto it

2.After the toy is installed,buckle the mosquito net on both sides of the bed into the pipe fittings on
both sides of the seat frame,and put the mosquito net into the bottom of the seat frame.

 
Disassembly: Pull out the top buckle.

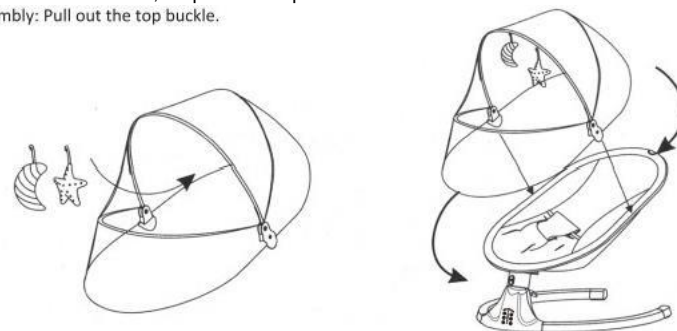

Seat belt use

Put the baby's legs on both sides of the triangle seat belt,and then turn the triangle seat
belt over,adjust the tightness of the seat belt on both sides,and then close the safety buckle.

 Tips:To ensure the safety of your child,be sure to use the seat belt properly
when the baby is lying in the rocking chair.

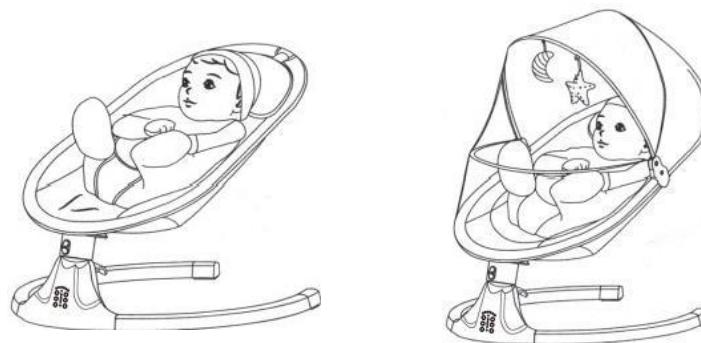

warning

- ※When using this product,always use a seat belt!
- ※Do not leave unattended children in the product!
- ※Do not use toy sticks and canopy to lift or move the swing!
- ※Do not lift or move the product when the child is in it!
- ※ It is strictly forbidden to put anything on the toy stick and the roof except for supporting toys!
- ※ This product is strictly forbidden to be used at high places (such as: countertops,tables,stairs or other positions higher than the ground)to prevent falling!
- ※When using this product,please put this product on a flat surface,do not allow to use on a non-flat surface!
- ※Pay attention to choking danger:Please do not use on soft objects to prevent suffocation when overturned (such as beds,sofas,etc.)!
- ※ Please do not use it on babies who can sit up alone,to prevent potential accidents such as choking or strangling by the seat belt!
- ※Do not let children use this product as a toy!
- ※Make sure the child leaves the product before opening or folding it!
- ※When this product is connected to a music player,make sure that the volume of the player is set to the bass position!
- ※Do not use this product if any part is damaged or missing,except for replacement parts that have been approved by the manufacturer.
- ※Stay away from the fire!

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product Information

Product information

Product Name:	Baby Swing
Product model:	Harhoers Electric baby swing for Babies
Input voltage:	100-240V
Input voltage:	5V=
Scope of use:	Children who cannot sit alone (up to 9kg)
Main material:	100%polyester fiber,aluminum tube
Implementation standards:	GB/T 42804-2023
Production Date:	Marked on the certificate of conformity

Product characteristics

- 1.Strict selection of material,soft fabric,comfortable and safe.
- 2.Ergonomic chair,fit baby neck and spine,stable and comfortable,
- 3.Intelligent touch,equipped with remote control,a variety of control modes,more simple and convenient.
- 4.Built-in soothing music to create a peaceful sleep environment for the baby.
- 5.Widen the base,removable seat cloth,equipped with mosquito net,to provide a cleaner and safer sleeping space for the baby