


Mobile Evaporative Air Cooler

Operation User Manual

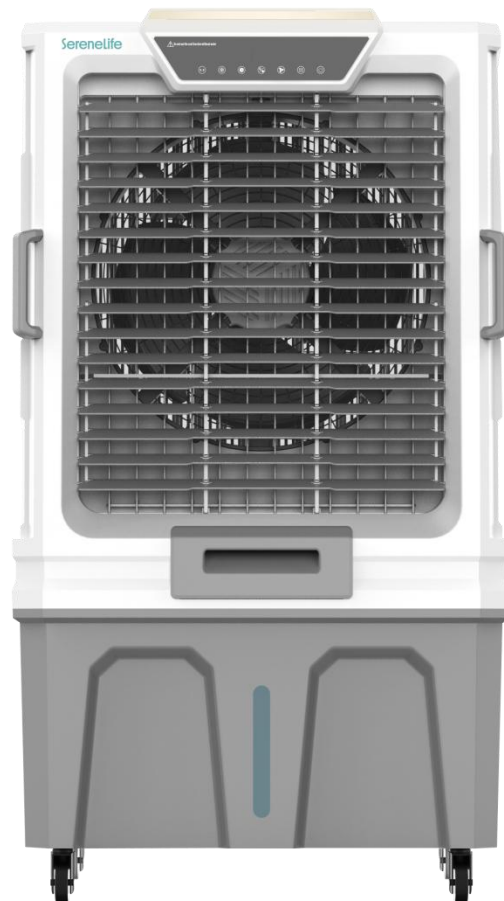

INTRODUCTION

Thank you for purchasing our air cooler.

Each unit has been manufactured to ensure safety and reliability.

Before first use, read the instructions carefully and keep it for further reference.

To users

Dear users:

First of all, thank you for choosing and using our air cooler. Before using our products, please read this manual carefully. For the safety of you and your family, be sure to follow the instructions in this manual.

Working principle

The draught fan does a suction to make a subpressure, at the same time the pump carries the water to the distribution instrument to make the wet curtain moist. The hot air passes through the wet curtain, and the heat is absorbed by the evaporating water, then the temperature comes down. The cool air is blown out by the fan. The unevaporated water would drop to the water tank and form a circulation.

Please open the window and the door when you are using this machine. To keep fresh air circulating smoothly, the best way is to place it in front of the ventilation corridors.

Safety rules

- Before any maintenance, make sure the machine is in the “off” state, and the power is switched off. In order to avoid the electric shock, please connect the grounding socket correctly, and guarantee the connection of the grounding device with the function of automatic protection from faults.
- This machine cannot be used by children and people who lack relevant knowledge or experience, or the people with impaired sensory or mental disorders. Children should not be allowed to play with this machine.
- Please stop using the machine immediately if the power cord aged or the plug damaged, it should be repaired by professional staffs.
- Do not use any corrosive or solvent detergent for cleaning. It is recommended to use wet cloth to wipe the machine instead of flushing the machine. Please avoid the machine exposed to direct sunlight.
- It is strictly prohibited to use this machine in a circumstance with inflammable or explosive gas.

Operation instructions

- Filling water: as shown in Figure 1, the 1st way to open the drawer, filling slowly with clean water.



Figure 1

- Automatic filling in water: this machine is equipped with an automatic injection device (shown in Figure 2), the appropriate pipe (13 mm diameter) is connected to the pipe mouth, internal floating ball would automatically close or open water injection according to the water level.



Figure 2

- The drain plug is on the bottom, as shown in Figure 3. Loose the drain plug and tilt the machine body, the water tank can be completely emptied. The machine should be regularly drained and cleaned. If it will not be used for a long time, please empty the water tank.


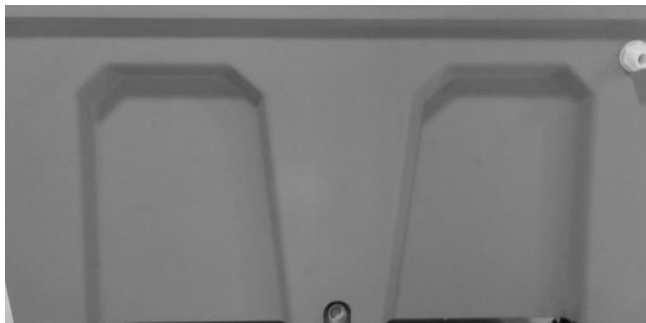


Figure 3

Control panel

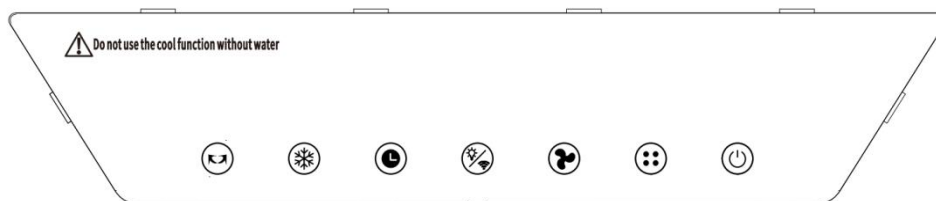

- **ON/OFF:** press this button to open the air cooler; press this button at any state to stop the operation.
- **Cool:** press to open or close the cooling system.
- **Swing:** control the left-right swing, press again to stop swinging.
- **WiFi:** When the product is powered on, the WiFi indicator light flashes rapidly. If the phone does not connect within 3 minutes, the WiFi light turns off and stops flashing. If the phone still fails to connect after the WiFi indicator turns off (after 3 minutes), press and hold the WiFi buttons simultaneously for 3 seconds to activate the WiFi function. The WiFi indicator will then flash rapidly again, allowing the phone to reconnect. Once connected, the WiFi light will remain steadily lit. To reset the WiFi or restart the WiFi connection function, press and hold the WiFi buttons together for 3 seconds.
- **Light:** press to turn the light on or off.
- **Timer:** press to set timing system. The timer range is from 1h-12h.
- **Speed:** set wind speed.
- **Mode:** press to change the wind type. natural wind or normal wind.

Notice: do not open the cooling system when the water tank is empty.

Cleaning and maintenance

Warm prompt: After long-time operation, dust accumulation on the

pre-filters and the wet curtain would affect the airflow and air purify. Please clean the machine regularly.

- **Clean wet curtain**

Turn off the power, loose the screws in the back-cover plate, take out the back-cover plate.

Loose the plastic nuts on the wet curtain, the side of wet pad can be removed. clean it with soft brush and mild detergent, rinse by water and dry under the sunshine, then install back to the machine.

If the dirt is hard to remove after long-term usage, please change a new wet curtain.

- **Clean the surface**

Turn off the power, clean it with mild detergent and soft cloth.

Notice: control panel shall not be touched by water.

Fault and maintenance

"Failure" phenomenon	Possible results	Solutions
Water pump doesn't work	1. Water-pipe blockage. 2. Without long-term water cooling. 3. Poor water quality to produce scale make central shaft stuck.	1. Use a small brush to clean the pipe and keep smooth water flow. 2. Long time for cooling without water cause pump damaged, need to replace a new water-pump. 3.Remove the shaft, clean the dirt on the surface, add proper lubricating oil insert it, and debug the shaft.

No wind or wind speed is too slow	1. The fan blades are stuck. 2. The filter is blocked. 3. Fan blade is not fixed. 4. Main control panel error	1. Check the fan blade. 2. Clean or replace filter. 3. Replace fan blade. 4. Replace main control panel.
Motor is out of control	1. Main control panel button is broken. 2. The wiring of the motor and control panel falls off	1. Replace main control panel. 2. Replace a new wire to connect the motor and control panel.
Drain valve is leaking	1. Drain valve is broken.	1. Replace the drain valve.

For your safety concerns, please make sure to follow the instructions above.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Ensure that the fan is switched off from the supply mains before removing the guard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Unplug the appliance during filling and cleaning.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

***RF warning for Mobile device:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.