 


F1 Pro
OWS EARBUDS



Quick Guide

Product Overview:

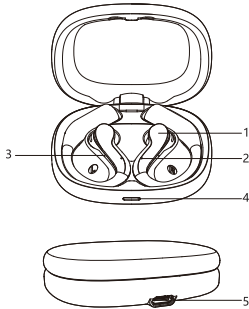

1.Multi-fuction key 2.Earphone indicator light 3.Microphone
4.Charging case indicator light 5.Type-C charging port

 
Functional Operation:

- Power on: open the upper cover, take out the earphones, earphone automatically starts. Or when shuts down, long press 3s left/right multifunction button with "power on" tone.
- Power off: put back to charging case and automatically turn off. Or when start up, long press 5s left/right multifunction button with "power off" tone.
- Pause/Play: click left/right earphone
- PREV music: double click left earphone
- Next music: double click right earphone
- Increase volume: triple click right earphone


- Decrease volume: triple click left earphone
- Answer/hang up the call: click left/right earphone
- Reject call: double click left/right earphone
- Launch voice assistant: long press left/right earphone 2s
- Reset: in the disconnected state, penta click left/right earphone
- Earphone low battery alert: when the headset battery is low, indicated every 60s with "please charge" tone

Bluetooth Pairing:

1.Open charging case, take out the earphone will start automatically; the left and right earphones are automatically connected, please keep the distance between the bluetooth earphone and the mobile phone (or other connected devices) within 50cm, the closer is better.

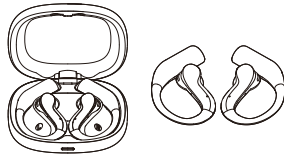

 2.Open the mobile phone bluetooth interface to search "F1 Pro", click pairing, and the phone is successfully connected with "connect" tone

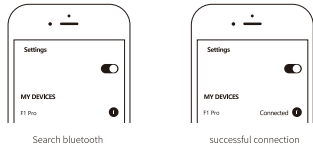

Voice Prompt:

- Power on voice prompt: power on
- Power off voice prompt: power off
- The left and right earphone are connected successfully voice prompt: dong
- The phone is connected successfully voice prompt: connected
- Bluetooth disconnected voice prompt: disconnected
- The battery is low voice prompt: please charge

Announcements:

- The bluetooth will shut down automatically after 3 mins without connection.
- Do not use corrosive cleaner to clean the product.
- Do not allow product to heat or be near fire sources, such as cooking stoves
- Do not expose product to direct sunlight for a long time.
- Do not dispose of product in fire to avoid explosion.
- Do not attempt to disassemble product for any modification, as it does not contain any repair components.
- Do not use product in the rain.
- If you do not intend to use product for a long time, please store it in a dry environment and charge the headset at least once a month to extend its life and avoid extreme temperatures and dust.

Specification Parameter:

- Model: F1 Pro
- Bluetooth version: V6.0
- Bluetooth distance: ≥10m
- Talking time: 3-4h
- Earphone charging time: about 1.5h
- Earphone battery capacity: 25mAh
- Charging compartment battery capacity: 230mAh
- Charging input voltage: DC 5V ± 0.25V

F1 Pro OWS Earbuds
Artificial Intelligence
Translation
Quick Guide

DOWNLOAD AND INSTALL

A Download EarDance App.



▶ Play Store 🍏 App Store 🤖 Android

 
B Click the icon in the upper right corner to view the tutorial.



ACTIVATION TUTORIAL

Scan the QR code in the EarDance AI Translation App to activate.


A Turn on Bluetooth and connect the device.



B Open the Ear Dance app, Click [My] - [Bind Device]



 C [Scan the QR code] and tap [OK] to activate all features.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the

limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.