

HAHA Vending Instruction Manual

Customer Service: +1(980)403-8992

Regarding the hardware:

1. Upon delivery, carefully inspect the device in person to ensure its condition matches expectations before signing off on receipt. Please note, any damage identified to the cabinet after the departure of the logistics personnel must be reported by the customer.
2. Before initial use, allow the equipment to sit idle for 2 hours. Ensure a 110V three-pin power socket with a grounded connection is available. Maintain a minimum of 8 inches of clearance above and behind the unit to prevent potential compressor issues.
3. Avoid exposing this product to rain or direct sunlight. If intended for outdoor use, it's recommended to include a canopy for protection.
4. During rainy weather or in high humidity conditions, it's normal to observe condensation on the glass and cabinet surface. Utilize the glass door electric heating switch as needed to address this issue.

Regarding the switches:

Temperature switch: Located below the freezer door, it can adjust the temperature.

Glass door electric heating switch: In high-temperature and high-humidity conditions, the glass may fog or condense. Turning on the glass door electric heating switch (located at the back of the cabinet) heats the glass door to eliminate fog and condensation. When the environment is normal, turn off the switch to save electricity.

Regarding the Network, Application, and POS Merchant Account:

1. After unboxing, take out the antenna from the upper left side of the cabinet and place it on the top of the cabinet.
2. Go to the App Store/Google Play to download the 'Haha Vending' App and register an account.
3. Follow the app's instructions to activate the device.
4. Follow the app's instructions to initiate and activate your POS machine payment account.
5. If encountering any difficulties regarding set up, please contact via email: support@hahabianli.com or In-app Chat Box(Coming soon).



DANGER - RISK OF FIRE OR EXPLOSION.
FLAMMABLE REFRIGERANT USED. TO BE REPAIRED ONLY
BY TRAINED SERVICE PERSONNEL. DO NOT PUNCTURE
REFRIGERANT TUBING.

DANGER - RISQUE DE FEU OU D'EXPLOSION, LE
FRIGORIGÈNE EST INFLAMMABLE. CONFIER LES
RÉPARATIONS À UN TECHNICIEN SPÉCIALISÉ. NE PAS
PERFORER LA TUBULURE CONTENANT LE FRIGORIGÈNE.

CAUTION - RISK OF FIRE OR EXPLOSION, FLAMMABLE
REFRIGERANT USED.

CONSULT REPAIR MANUAL/OWNER'S GUIDE BEFORE
ATTEMPTING TO SERVICE THIS PRODUCT. ALL SAFETY
PRECAUTIONS MUST BE FOLLOWED.

ATTENTION - RISQUE DE FEU OU D'EXPLOSION, LE
FRIGORIGÈNE EST INFLAMMABLE. CONSULTEZ LE MANUEL
DU PROPRIÉTAIRE/GUIDE DE RÉPARATION
AVANT DE TENTER UNE RÉPARATION, TOUTES LES
MESURES DE SÉCURITÉ DOIVENT ÊTRE RESPECTÉES.

*Note: Above caution marking should be located near the
compressor compartment

CAUTION - RISK OF FIRE OR EXPLOSION. DISPOSE OF
PROPERLY IN ACCORDANCE WITH FEDERAL OR LOCAL
REGULATIONS. FLAMMABLE REFRIGERANT USED.

ATTENTION - RISQUE DE FEU OU D'EXPLOSION, ÉLIMINER
CONFORMÉMENT AUX RÈGLEMENTS FÉDÉRAUX OU
LOCAUX, LE FRIGORIGÈNE EST INFLAMMABLE

*Note : Above caution marking should be provided on the exterior
of the venter.



- a) DANGER - RISK OF FIRE OR EXPLOSION. FLAMMABLE REFRIGERANT USED. DO NOT USE MECHANICAL DEVICES TO DEFROST REFRIGERATOR, DO NOT PUNCTURE REFRIGERANT TUBING.
- b) DANGER - RISK OF FIRE OR EXPLOSION, FLAMMABLE REFRIGERANT USED. TO BE REPAIRED ONLY BY TRAINED SERVICE PERSONNEL. DO NOT PUNCTURE REFRIGERANT TUBING.
- c) CAUTION - RISK OF FIRE OR EXPLOSION, FLAMMABLE REFRIGERANT USED. CONSULT REPAIR MANUAL OWNER'S GUIDE BEFORE ATTEMPTING TO SERVICE THIS PRODUCT. ALL SAFETY PRECAUTIONS MUST BE FOLLOWED.
- d) CAUTION - RISK OF FIRE OR EXPLOSION, DISPOSE OF PROPERLY IN ACCORDANCE WITH FEDERAL OR LOCAL REGULATIONS. FLAMMABLE REFRIGERANT USED.
- e) CAUTION - RISK OF FIRE OR EXPLOSION DUE TO PUNCTURE OF REFRIGERANT TUBING: FOLLOW HANDLING INSTRUCTIONS CAREFULLY FLAMMABLE REFRIGERANT USED.
- f) CAUTION - RISK OF FIRE OR EXPLOSION DUE TO FLAMMABLE REFRIGERANT USED. FOLLOW HANDLING INSTRUCTIONS CAREFULLY IN COMPLIANCE WITH LOCAL GOVERNMENT REGULATIONS.

- a) DANGER - RISQUE DE FEU OU D'EXPLOSION. LE FRIGORIGÈNE EST INFLAMMABLE. NE PAS UTILISER D'APPAREILS MÉCANIQUES POUR DÉGIVRER LE RÉFRIGÉRATEUR. NE PAS PERFORER LA TUBULURE CONTENANT LE FRIGORIGÈNE
- b) DANGER - RISQUE DE FEU OU D'EXPLOSION. LE FRIGORIGÈNE EST INFLAMMABLE, CONFIER LES RÉPARATIONS UN TECHNICIEN SPÉCIALISÉ, NE PAS PERFORER LA TUBULURE CONTENANT LE FRIGORIGÈNE
- c) ATTENTION - RISQUE DE FEU OU D'EXPLOSION. LE FRIGORIGÈNE EST INFLAMMABLE. CONSULTER LE MANUEL DU PROPRIÉTAIRE/GUIDE DE RÉPARATION AVANT DE TENTER UNE RÉPARATION, TOUTES LES MESURES DE SÉCURITÉ

DOIVENT ETRE RESPECTÉES.

d) ATTENTION - RISQUE DE FEU OU D'EXPLOSION. ÉLIMINER CONFORMÉMENT AUX RÈGLEMENTS FÉDÉRAUX OU LOCAUX, LE FRIGORIGÈNE EST INFLAMMABLE.

e) ATTENTION - RISQUE DE FEU OU D'EXPLOSION SI LA TUBULURE CONTENANT LE FRIGORIGÈNE EST PERFORÉE : SUIVRE LES INSTRUCTIONS DE MANUTENTION AVEC SOIN. LE FRIGORIGÈNE EST INFLAMMABLE.

f) ATTENTION-RISQUE DE FEU OU D'EXPLOSION SI LE FRIGORIGÈNE EST INFLAMMABLE, SUIVRE LES INSTRUCTIONS DE MANUTENTION AVEC SOIN CONFORMÉMENT AUX RÉGLEMENTATIONS GOUVERNEMENTALES LOCAUX

IMPORTANT SAFETY INSTRUCTIONS

Read these instructions for use carefully before using the device. Observe all safety instructions, so as to avoid damage through improper use.

1. Keep this instruction manual for future use. Should this appliance be passed on to a third party, this instruction manual must be handed over.
2. This appliance is heavy. To prevent injury or damage to it, unpack and set up by two people.
3. Never use a damaged appliance! Disconnect the appliance from the mains outlet and contact your supplier, if it is damaged.
4. Connect and install this appliance in strict compliance with the relevant instructions in this manual.
5. Only use the appliance for its intended use. The appliance is intended for commercial use.
6. No responsibility is accepted for damage resulting from improper use or non-compliance with the instructions.
7. Only use the appliance indoors. Not use in lobbies or locations of egress, such as a hallway or public corridor.
8. **Danger of electric shock!** Never try to repair the appliance yourself. Refer to qualified customer service outlet for maintenance and repairs.
9. Regularly check the power plug and power cord for damage. A damaged power cord has to be replaced by the manufacturer,

his customer service or a similar qualified person in order to avoid danger of injury.

10. Before inserting the power plug into the mains outlet, check that the power supply voltage and current rating corresponds with the power supply details shown on the appliance rating label.

11. Avoid damage to the power cord. Do not squeeze, bend or scour on sharp edges. Keep away from hot surfaces and naked flames.

12. Please connect the earthing wire to the terminal of equipotentiality by qualified technician.

13. For your safety, only connect the appliance with a properly earthed mains outlet. Unplug the appliance immediately if you get an electric shock when touching the appliance.

14. Do not pull on the power cord. Only pull on the plug. Do not wrap the power cord around the appliance.

15. This appliance must be earthed!

16. Securely route the power cord that no unintentional pulling or tripping over it is possible.

17. Connect the power plug with an easy reachable mains outlet that in case of an emergency the appliance can be unplugged immediately.

18. Never use accessories, which are not recommended by the manufacturer. They could pose a danger to the user and might damage the appliance. Only use original accessories.

19. The appliance is powered when connected to the power supply.

20. **Warning!** Do not insert any objects into the casing of the appliance.

21. Do not open the casing.

22. Do not obstruct or cover the ventilation openings. Keep the appliance well ventilated all time.

23. Should the cover of the lights fall off or break, unplug the appliance immediately and contact qualified personnel for repairs.

24. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

25. Do not keep the key of the appliance lock near or within reach of children. Please double check and confirm there is no person inside the appliance before locking the door.
26. Do not touch the appliance with wet or damp hands. Do not operate the appliance with wet hands or standing on a wet floor.
27. **Warning!** During cleaning or operation do not immerse the appliance in water or other liquids. Do not clean the appliance with a garden hose.
28. Should water flow into the appliance, immediately unplug the appliance and let it be inspected by qualified personnel before using again.
29. Unplug from the mains outlet when not in use and before cleaning.
30. Do not place combustible, explosive or volatile articles, corrosive acids or alkali in the appliance. Store high-proof spirits only in upright position and close them properly. Containers with flammable gases and liquids can leak at low temperatures and catch fire from electrical appliances sparking. **Danger of explosion!**
31. Make sure that no chemical substances get into the interior of the appliance.
32. **Warning!** This product is for food storage with containers. Do not place food without container.
33. Leaking oil can damage the rubber gaskets of the appliance. Make sure that products with oil are wrapped properly and cannot leak.
34. Keep the appliance away from any hot surfaces and naked flames.
35. Always operate the appliance on a level, stable, clean, heat resistant and dry surface.
36. Do not use the appliance in the proximity of explosive and inflammable vapors.
37. The minimal distance specification to the surrounding roadblock when fixing outside is 1 meter.
38. Do not damage any parts of the appliance which carry refrigerant by piercing, perforating, crushing, twisting or scraping.
39. **Danger of fire!** In event of refrigerant leakage, unplug the appliance, remove any ignition sources nearby, ventilate the room and contact your supplier. Avoid contact with the eyes as the refrigerant may cause serious eye injury. You can find details on the refrigerant on the rating label.
40. In case of fire unplug from the mains outlet or disconnect from the power supply in other way before taking firefighting

measures. Warning! Do not spill water on the appliance when connected to the power supply. **Risk of electric shock!**

41. Do not accelerate the defrosting process by using mechanical devices, heating sources (candles or heaters) or other means. The emerging steam can cause short circuit and too high temperatures can damage the synthetic covering of the appliance.
42. Do not use electrical appliances in the inner compartment.
43. Take protective measures by prolonged skin contact with cold surfaces of inner compartment or with chilled products, e.g. wear gloves.
44. Never put warm or hot foods directly into the appliance.
45. Cover food to prevent smell and to keep fresh. Do not consume products which have been stored for too long to avoid food poisoning.
46. The maximum load for a shelf is 88 lbs.
47. That component parts shall be replaced with like components.
48. That servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

INTENDED USE

Only use this appliance for cooling and storage of food and beverage for commercial purposes.

FCC CAUTION:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

the device for operation in the band 5 150-5 250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

ISED WARNING:

This device complies with Innovation, Science and Economic Development Canada

licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Les communications effectuées au moyen de cet appareil ne sont pas nécessairement protégées des indiscretions.


The equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Déclaration d'exposition aux radiations: Cet équipement doit être installé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.

the device for operation in the band 5 150-5 250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

les dispositifs fonctionnant dans la bande 5 150-5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.


Introduction to the Product Section

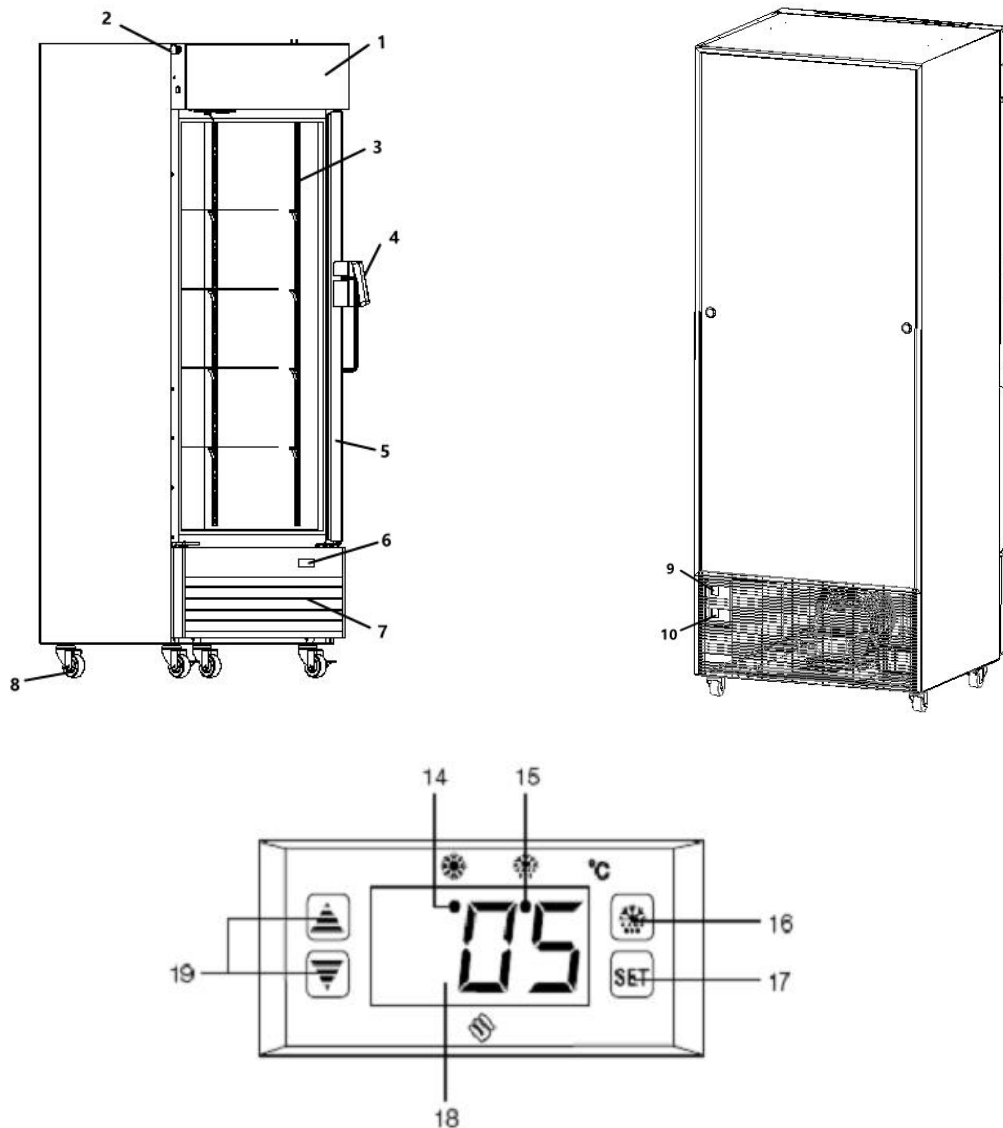

- | | |
|------------------------------|--|
| 1. Light Box Cover | 14. Cooling indicator |
| 2. Antenna | 15. Defrosting indicator |
| 3. Shelves | 16. <small>ste</small> <small>SE</small> button (Note: The appliance has automatically defrost function. No need to set deforest manually) |
| 4. POS | 17. SET button |
| 5. Door | 18. LED display |
| 6. Temperature Control panel | 19. <small>D-Anzeige</small> <small>sten</small> buttons |
| 7. Ventilation openings | |
| 8. Castors | |
| 9. Cooling Switch | |
| 10. Heating Switch | |

BEFORE FIRST USE

- Remove all packaging (→ Disposal instructions).
- Check for completeness and transport damage. In case of damage or incomplete delivery please contact your dealer (→ Guarantee).
- Clean the appliance (→ Cleaning).
- Place the appliance on a horizontal and stable surface with a maximum incline of 5%. If any incline please install the incline fixing bracket. For the installation, refer the picture on the right.
 - First, take out the screw at mark 1 and fix the fixing bracket with the screw at mark 1.
 - Drill a hole on the wall at mark 2 and fix the fixing bracket with M8 expansion bolt.
 - Note: screws are not included.

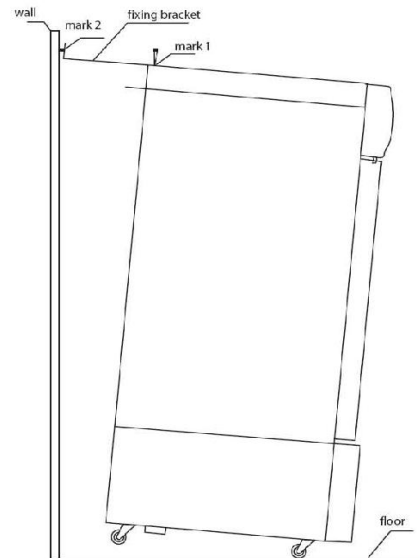

- all packaging (Disposal instructions).
- Check for completeness and transport damage. In case of damage or incomplete delivery please contact your dealer (Guarantee).
- Clean the appliance (Cleaning).
- Place the appliance on a horizontal and stable surface
- Try to position the appliance close to a wall, but leave enough space for ventilation to ensure good circulation and efficiency of the appliance.
- Please keep the appliance away from substance, which can cause ignition
- Do not position the appliance in direct sunlight or near any heat sources.
- Protect the appliance from moisture, extreme heat or cold.
- Climate class for the appliance: 4
- Climate class and matched temperature range for reference:

Test room climate class	Dry bulb temperature	Relative humidity
	°C	%
1	16	80
2	22	65
3	25	60
4	30	55
5	40	40

- Never use an extension cord – risk of overheating! If the power cord (6) does not reach the nearest mains outlet, either

rearrange your store layout or ask qualified personnel to fit a new outlet.

- The appliance is fitted with castors (8), so that you can easily move it from one place to another. Warning! Do not move the appliance across uneven floors or steps.
- If power is cut off, wait for at least 5 minutes before plugging the appliance in again to avoid damaging the compressor.
- Warning! Do not move the appliance across uneven floors or steps.
- Important! Allow the appliance to stand upright for 8 hours before connecting to a mains outlet for the first time, in order to allow the refrigerant to settle.

OPERATION

Operations means setting up the fridge for vending by defining the products you will sell and specifying which products will be on which shelves - this is called the planogram. Operations also includes stocking and restocking the shelves, getting sales reports, issuing refunds to customers and performing other tasks from time to time.

The 'Haha Vending' App is the control center for all of these activities. In this application you define products, including price, the planogram, generate pick lists for restocking, get sales reports by product and location, and deal with customer issues, if necessary.

- Connect the power plug with the mains outlet.
- The showcase starts to work.
- The thermostat (digital temperature controller) is located at bottom of the appliance.
- After a few seconds the LED display shows the actual inner compartment temperature. The cooling indicator lights up. The showcase automatically begins to cool down to the preset temperature.
- After the inner compartment temperature reaches the preset value, the cooling indicator turns off as long as the inner compartment temperature is constant.
- The factory pre-set temperature range is between 0°-10°C, dependent upon model. **Do not adjust this within the first 24 hours!** After 24 hours adjust the temperature in gradual stages, if necessary.

Temperature adjustment:




- Press **SET**. The LED display flashes. Select the desired temperature by pressing ^{D-Anzeige} _{sten} buttons and press **SET** again to save the settings.
- The LED display shows the actual inner compartment temperature. The cooling indicator lights up. The showcase begins to cool down to the preset value.

Defrosting:

- The appliance is provided with an automatic defrost function. The defrosting automatically starts every 6 hours and lasts 20 minutes (factory setting).
- **Please do not change any factory settings!** These determine how your appliance works. Changing these settings makes your warranty void. Contact our service if you have any questions.

HOW TO BUY

- The consumer clicks on [START] to enter the card-swiping page;
- They can use a bank card, swipe it to complete the pre-authorization, and then wait for the device to unlock;
- The user opens the door, takes out the goods, and closes the door;
- They scan the QR code on the door page with their phone's camera, enter their email, and receive the bill.

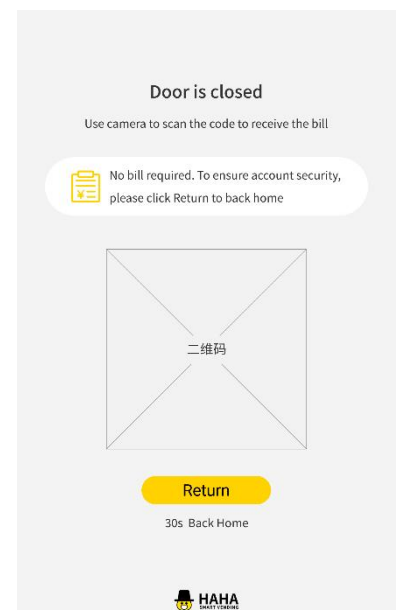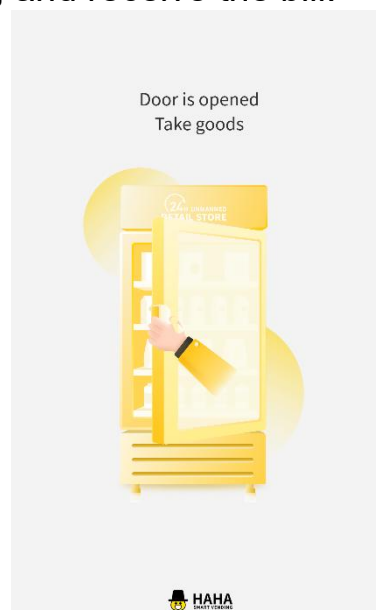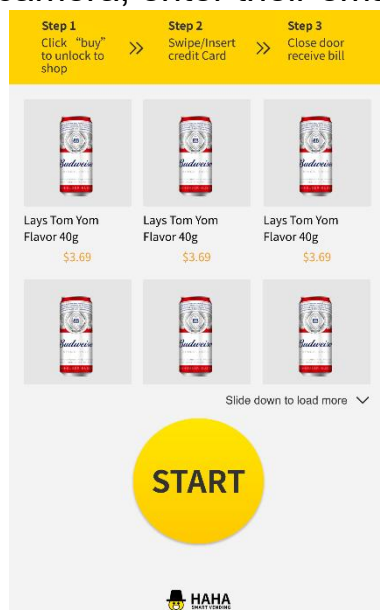

Technical specification information:

1、 802.11b,802.11g,802.11n20:2412MHz~2472MHz802.11n40:2422MHz~2462MHz

max EIRP Power : 19.51dbm

2、 5150MHz~5350MHz, 5470MHz~5725MHz

max EIRP Power : 22.36dbm

3、 FOR LTE Band 1

Tx: 1920MHz ~ 1980MHz, Rx: 2110MHz ~ 2170MHz

MAXIMUM EIRP : 25.70dbm

FOR LTE Band 3

Tx: 1710MHz ~ 1785MHz, Rx: 1805MHz ~ 1880MHz

MAXIMUM EIRP : 25.70dbm

FOR LTE Band 5

Tx:824MHz ~849MHz, Rx:869MHz ~894MHz

MAXIMUM EIRP : 26.50dbm

FOR LTE Band 7

Tx: 2500MHz ~ 2570MHz, Rx: 2620MHz ~ 2690MHz

MAXIMUM EIRP : 26.00dbm

FOR LTE Band 8

Tx: 880MHz ~ 915MHz, Rx: 925MHz ~ 960MHz

MAXIMUM EIRP : 26.50dbm

FOR LTE Band 20

Tx: 832MHz ~ 862MHz, Rx: 791MHz ~ 821MHz

MAXIMUM EIRP : 26.50dbm

FOR LTE Band 38

Tx: 2570MHz ~ 2620MHz, Rx: 2570MHz ~ 2620MHz

MAXIMUM EIRP : 26.00dbm

FOR LTE Band 40

Tx: 2300MHz ~ 2400MHz, Rx: 2300MHz ~ 2400MHz

MAXIMUM EIRP : 26.00dbm

FOR LTE Band 41

Tx:2555MHz ~2655MHz, Rx: 2555MHz ~2655MHz


MAXIMUM EIRP : 26.00dbm

Restrictions							
Operation in the 5150-5350 MHz band is restricted to indoor use only.							
	BE	BG	CZ	DK	DE	EE	IE
	EL	ES	FR	HR	IT	CY	LV
	LT	LU	HU	MT	NL	AT	PL
	PT	RO	SI	SK	FI	SE	NO
	IS	LI	CH	TR	UK(NI)		

HOW TO USE 'Haha Vending' App

Home Page

- You can view today's and this month's sales and order volume;
- Quick operation entrance, can quickly jump to unpaid orders, online/offline devices;
- Contact email address
- Daily operation tools, including: Device activation, device configuration, device replenishment, financial management, new product application, commodity management, order management, replenishment staff management

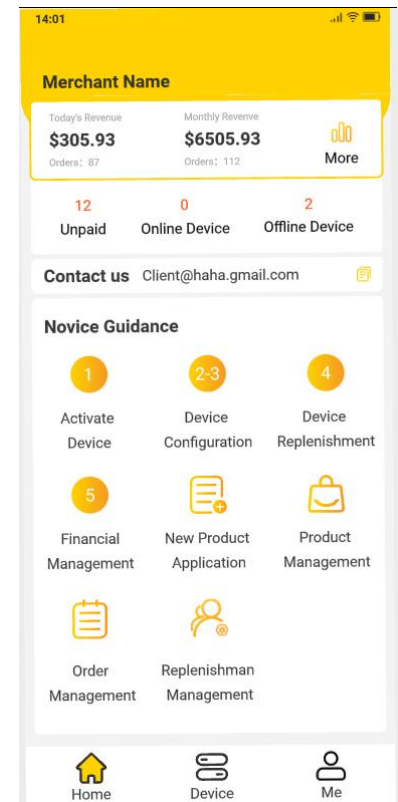


Device Activation

- After the device arrives, the merchant can click on the "Device Activation" entry on the home page, scan the device's QR code to activate the device;
- After activation, the device status changes to "In Operation", and you can configure and put online goods normally, and operate replenishment.




Device

- The device list displays two types of device network statuses: online and offline. You can click on the list quick entry to configure the device with products or replenishment staff;
- Entering the device details page, besides setting the template and replenishment staff, you can also view the device's product inventory, quickly view orders, and manage the device's basic information;
- At the bottom of the details page, you can also adjust the device's volume, restart the device, and manage the device's operational status (operational/disabled).

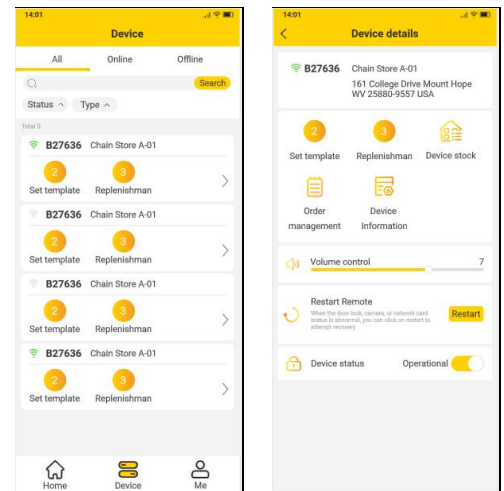



Product Management

- Merchants can select products from the product library and add them to their own product library. After adding, they can quickly adjust the selling price of the products in the list or details (uniform selling price).
- If no salable products are found in the library, you can click [New Product Application] to quickly apply

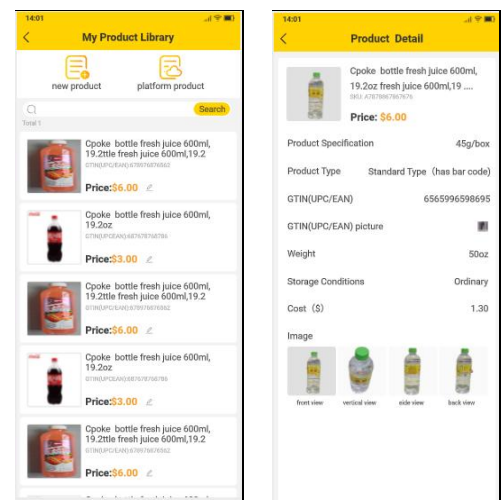



New Product Application

- Products can initiate two types of new product applications: standard products and non-standard products. Non-standard products do not require uploading a GTIN for the product.
- Complete the product information according to the form prompts, and upload product images in 4 directions; After submission, the system will complete the review within 2 working days;
- After the review is passed, the product will automatically enter the merchant's product library, and the merchant can operate normally to configure and put it on the shelves.

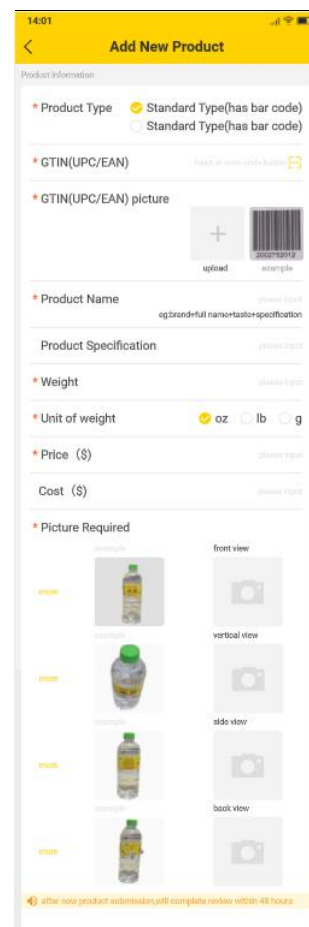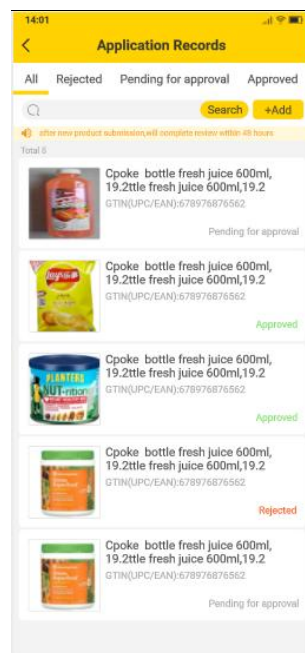

Configure Available Product Templates


- Merchants need to configure a list of available products for each device, set the selling products for each layer of the device, and select products from the merchant's product library and set the selling price of the product in the device. The default is the uniform selling price of the product;
- Each layer of the device can place up to 10 products, and multiple layers can place the same product, but the selling price of the product in the device needs to be consistent, so the selling price needs to be set uniformly at the first occurrence of the product;

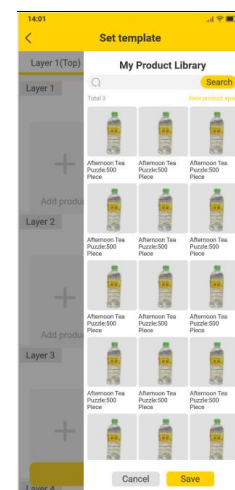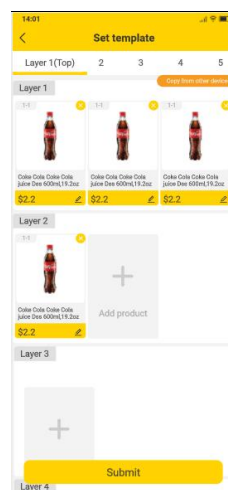

- Support selecting from devices that have already set up product templates for quick configuration.


Replenishment Staff Management

- Support adding replenishment staff, enter the replenishment staff's name, login account, and password;
- On the device list/details page, you can click [Configure Replenishment Staff] to select the replenishment staff and assign them the replenishment permission for the designated device.

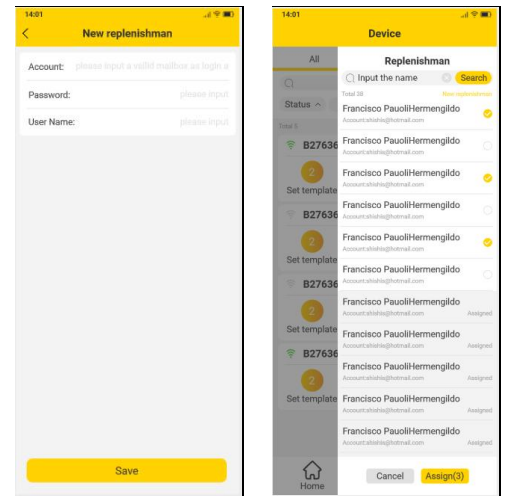


Device Replenishment

- Click on the replenishment button to enter the scanning page, scan the device's replenishment QR code to open the door for replenishment;
- After the device door is opened, enter the replenishment page, enter the quantity of replenished goods for this time, and submit to update the device inventory.

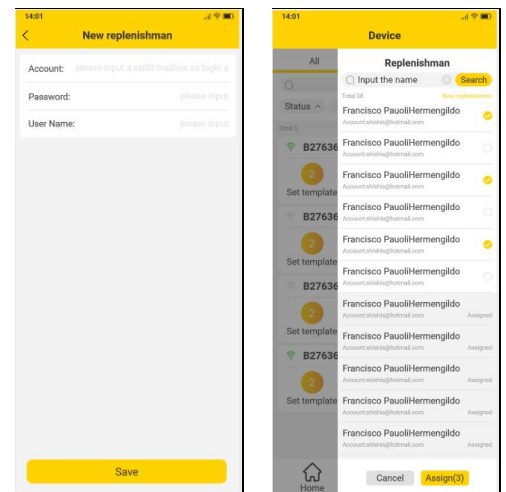


Order Management

- The list displays the order details of all devices owned by the merchant;
- Order status includes paid and unpaid;
- You can click on the list to enter the details page to view the consumption details; If a refund occurs for a paid order, it will be specially marked on the list.

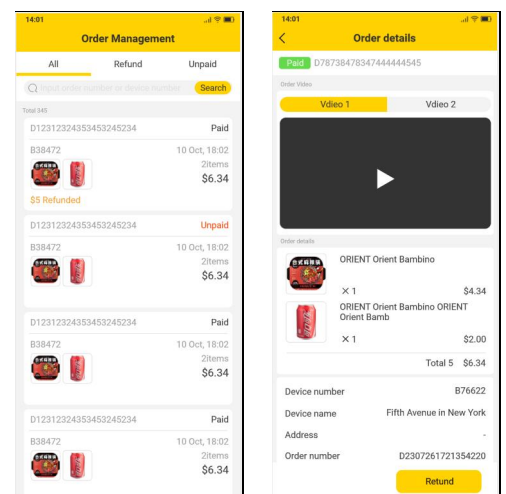


Order Refund

- Merchants can operate refunds on the details page of paid orders. After submitting the refund, a refund record will be generated;
- For this period's order refund, the merchant needs to synchronize the deduction processing on the merchant-side APP and the merchant number background;
- After the order is successfully refunded, a special mark will be made on the order list for the merchant to view.

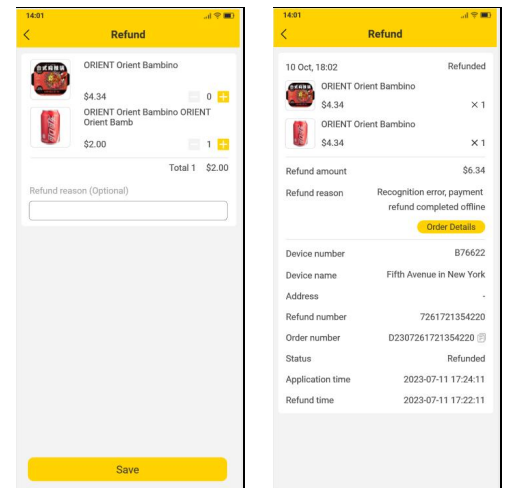

Financial Management

The financial management module displays the merchant's registered merchant number and the device information associated with it.

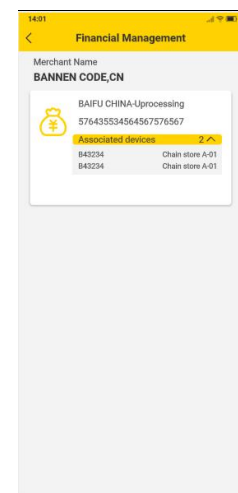

CLEANING AND TROUBLESHOOT

- Disconnect the power supply before cleaning and maintenance, and remove any products to a suitable back-up showcase before cleaning.
- Take out all removable parts before cleaning.
- Clean the inner compartment, equipment parts and casing with dry cloth. Do not allow the control panel, power cord with plug, ventilation openings, lamps or other electrical components become wet.
- Never use corrosive detergents, wire brushes, or abrasive scourers to clean your appliance.
- Never use metal or sharp implements to remove debris.
- Dry all surfaces thoroughly.
- Use dry cloth to clean the gaskets and seals. Check them for debris to ensure the doors always closes properly.

- Do not remove or damage the rating label as it contains important data.

Replacing the lamps

- Be sure to disconnect power plug before changing the interior lamp .
- Please do not replace the interior lamps by yourself. Contact qualified personnel for this purpose.
- **Note:** the specification of replacement lamp should be the same as the original one.

DISPOSAL INSTRUCTIONS

0

Disposal of old appliances

- Disable discarded appliances by removing the plug and cutting through the power cord.
- Break any locks in order to avoid children and other persons becoming trapped. Remove the door before you dispose your product.
- **Warning - hazardous chemicals!** Do not allow children to play with the old appliance.
- Do not damage the refrigerant circuit during storage and transportation of old appliances! Make sure that the evaporator pipes, refrigerant circuit and surface coverings are not damaged. Avoid contact with the eyes as the refrigerant may cause serious eye injury.
- Do not store old appliance near heat and ignition sources. In event of leakage the refrigerant of this appliance is highly inflammable.
- Please note: the refrigeration system contains gases and refrigerants which require specialist waste disposal.

Disposal of packaging

All packaging materials should be disposed of in an environmentally friendly way. The cardboard may be used as scrap paper. The protective foil and the foam cushions are CFC – free. Do not allow children to play with the packaging and destroy plastic bags safely. You can break or cut the cardboard into smaller pieces and give to a waste paper disposal service.

Environmental protection

Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centers (if available).

Note:

1. In case this product does not function correctly, please firstly check if there are other reasons, e.g. interruption of the power supply, or incorrect handling are the cause.
2. Please note that, where possible, the following documents or rather information should be provided together with your faulty product:

- Purchase receipt
- Model description/Type/Brand
- Describe the fault and problem as detailed as possible



In the case of a claim for guarantee or defects, please contact the seller.

**UK
CA**

A vending machine having a flammable refrigerant shall not be intended for use

in lobbies or Locations of egress, such as a hallway or public corridor.

component parts shall be replaced with like components and that servicing shall

be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

Customer Service: +1(980)403-8992

Email:

service@hahavending.com