

J U K E S T A R Z



User Manual

Thank you for purchasing this product. Please carefully read this manual prior to using this device.

Warnings & Product Care

- **High Voltage Risk:** This unit contains high-voltage components. **Do not open or disassemble.** There are no user-serviceable parts inside.
- **Water Hazard:** Do not use the jukebox in or near water. Do not operate with wet hands. **Indoor use only.**
- **Heat Exposure:** Keep away from heat sources such as radiators, stoves, or amplifiers that produce heat.
- **Children:** This product is **not a toy**. Keep out of reach of children.
- **Ventilation:** Do not block ventilation openings. Do not cover the speaker while in use or charging.
- **Interference:** Electronic devices nearby may cause static or distortion in USB, FM, TF card, LINE-IN, or Bluetooth modes.
- **Surface Heat:** After extended use, surfaces around the control panel may become warm. Avoid prolonged direct contact.
- **Volume Warning:** Prolonged exposure to loud sound may cause hearing damage. Avoid continuous use at maximum volume.
- **Electrical Safety:**
 - Use only the supplied power cord and accessories.
 - Protect the cord from being pinched, tripped over, or damaged.
 - Do not bypass safety features of the polarized or grounded plug.
- **Damage:** If the unit is visibly damaged or malfunctioning, unplug it and contact a qualified technician. **Do not attempt self-repair.**

Care & Maintenance Instructions

1. **Cleaning:** Clean with a dry, soft cloth only. Do not use chemicals, sprays, or water.
2. **Transportation:** Secure the speaker when transporting. Protect from dust, moisture, and extreme heat or cold.
3. **Storage:** Store in a cool, dry place. Avoid high humidity and temperatures above 30°C.
4. **Orientation:** Use the speaker in its upright, intended position. Do not place it on its side or unstable surfaces.
5. **Accessories:** Only use attachments, accessories, or stands specified by the manufacturer. Always separate the speaker from its stand before moving.
6. **Service:** Refer all service and repairs to qualified personnel only.

Specifications:

Model	Jukestarz-M001
Driver	2x 3" full range+ 1x6.5" Woofer
RMS power	50 Watts
Power supply	18V AC 100-240V 50/60Hz
Power adapter	AC power adapter
Cabinet material	PLASTIC, WOOD
Product Weight	32 KGS
Product Size	H136cm x W66.4 cm x D37.5 cm


Package Contents:

- Jukebox Speaker--- 1 piece
- Power Cable Adapter--- 1 piece
- Manual--- 1 piece
- Remote control---1 piece

Key Features

- **Multi-Function Input Modes:** Supports Tuner (FM Radio), CD playback (including MP3 CDs), Bluetooth streaming, AUX input, and Phono (turntable) operation.
- **Power & Volume Control:** Easy power on/off with front panel and remote control; volume adjustable via remote or front knob.
- **Remote Control:** Full-function remote for convenient operation of all main features including playback, volume, input selection, and lighting modes.
- **CD Player:** Supports standard audio CDs and MP3 CDs with folder navigation, track programming (up to 20 tracks), repeat options, and auto-read functionality.
- **Bluetooth Connectivity:** Wireless music streaming with easy pairing and playback controls.
- **FM Radio:** Auto and manual station scanning with preset memory capability.
- **Phono Turntable:** Plays vinyl records with adjustable speed, tonearm control, and auto-stop feature for 33 RPM records.
- **Speaker Options:** Built-in internal speakers with settings for internal, external, or mixed speaker output via rear panel switch.
- **Lighting Effects:** Multiple external lighting patterns controllable via front panel or remote.
- **RCA Output:** Line-level analog output for connection to powered speakers or stereo systems.
- **User-Friendly Design:** Clear display, easy-to-use buttons, and protective features such as stylus guard and tonearm lock.

Product Interface:

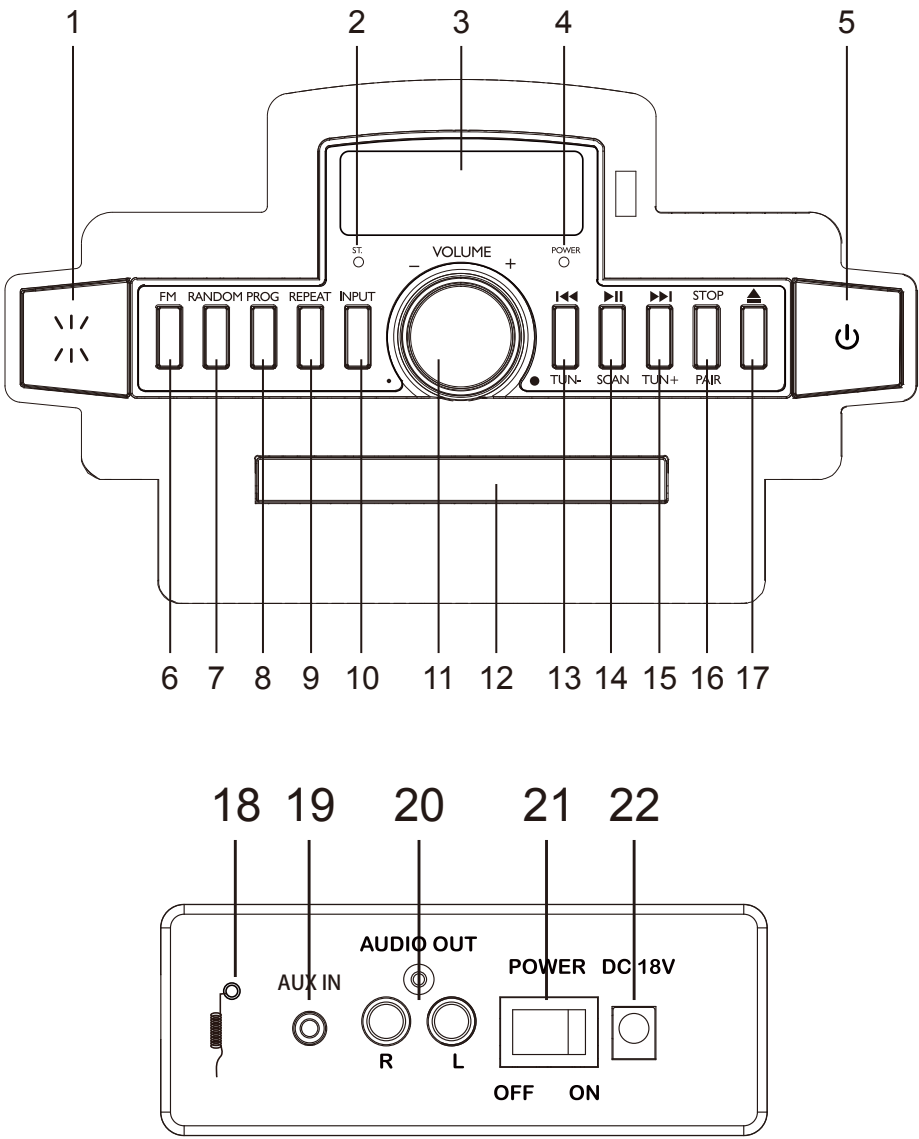

1. LIGHTS: Switch the lights on or off
2. Stereo — Displays stereo FM reception
3. LCD display
4. Power: Standby indicator, RED when in standby
5.  Standby: Switch music centre into/out of standby
6. FM function button
7. Random button
8. Program Button
9. Repeat: Cycle repeat mode (Off, Single, All)
10. Input: Cycle through function modes
11. Volume knob
12. CD tray
13. PREV/TUN+: Skip back
14. Play or pause playback/ FM scan DC IN Port — Connects to the power adapter.
15. NEXT/TUN-: Skip forward
16. STOP/PAIR: Stop playback or recording/Bluetooth Pairing
17. CD Open/Close: Press to open and close CD tray
18. FM Antenna
19. AUX IN jack
20. AUDIO OUT: Line audio output (RCA Left & Right)
21. Power: Switch music centre on and off
22. DC 18V: Power input (only use supplied power adaptor)

Jukebox Unpacking and Set-Up

Remove and retain all packing materials for warranty purposes.

Power Source and Initial Set-Up

1. Remove the AC power adapter and cord from the packaging.
2. Connect the AC power cord to the AC adapter.
3. Plug the small end of the adapter into the DC jack located on the back of the jukebox.
4. Plug the AC adapter into a wall socket.
5. Push the toggle switch on the rear of the jukebox to the “ON” position. This switch can remain in the “ON” position once the jukebox is in its final location.
6. Ensure the **SPEAKER** switch is set to **INT (Internal)** unless you plan to use your own external speakers.

Refer to the "External Speaker Option" section in this manual for more details

FM Antenna Installation

1. Unwind the supplied FM antenna and connect it to the **FM Antenna jack** on the rear of the jukebox.
2. Position the antenna to achieve the best possible FM reception.

Note: If you're having difficulty tuning into an FM station, try repositioning the antenna until reception is clear and free of interference.


Remote Control Operation

Nearly all functions of the jukebox can be operated using the remote control. For best performance, point the remote directly at the jukebox, ensuring there is a clear path for the signal to travel.

Make sure the remote control is equipped with two fresh AAA batteries. Batteries are included with the jukebox but must be installed prior to initial use.

Remote Control Functions

1. **Power Button** – Turns the jukebox on or off
2. **CH-/Fold- Button** – Channel down / Folder down
3. **Volume Up Button** – Increases the volume
4. **Backward Skip Button** – Skips to the previous track
5. **Volume Down Button** – Decreases the volume
6. **Program Button** – Used to program track order (where applicable)
7. **Stop Button** – Stops playback
8. **Random Button** – Plays tracks in random order
9. **FM Button** – Switches to FM radio mode
10. **Open/Close Button** – Opens or closes the disc tray
11. **CH+/Fold+ Button** – Channel up / Folder up
12. **Play/Pause Button** – Starts or pauses playback
13. **Forward Skip Button** – Skips to the next track
14. **Scan/Pair Button** – Scans stations / Pairs Bluetooth devices
15. **Repeat Button** – Repeats the current track or playlist
16. **Light Mode Button** – Changes the LED light mode
17. **Input Button** – Switches between input sources

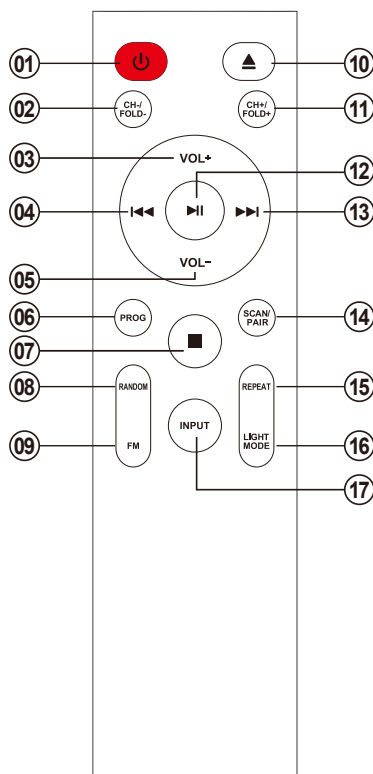

GETTING STARTED

Connect the mains power adaptor to a suitable power outlet and then to the **DC 18V** input on the rear of the Music Centre.

Switch the **POWER** [21] on.

Press **[6]** to switch your Music Centre out of standby mode.

Volume Control: Press **VOL + (UP)** or **VOL – (DOWN)** on the remote or rotate the **VOLUME** dial [11] on the front panel to adjust the volume.

Function Modes: Press **INPUT** [10] to switch between the following function modes:

TUNER > CD > Bluetooth > AUX > PHONO

The **INPUT** button on the remote control will also cycle through the audio functions.

Lighting Effects: Press the **LIGHT MODE** button on the front panel or the remote control to change the external lighting pattern. There are 4 lighting sequences to choose from.

CD PLAYBACK OPERATION

Playing a CD

1. Press the **INPUT** button on the remote or front panel to select **CD** mode.
2. Press the **Open/Close** button on the remote or front panel to open the CD compartment.
3. Insert a disc with the printed side facing up. Press the **Open/Close** button again to close the compartment. "READING" will be displayed as the CD player scans the disc contents.
4. Track 1 will begin playing automatically after the disc is read.
5. Press **FF>>** or **FR<<** on the remote once or repeatedly until the desired track appears on the display. Press and hold **FF>>** or **FR<<** to fast-forward or rewind within a track.
6. Press the **STOP** button on the remote or front panel to stop playback completely.
7. To repeat a single song or track, press **REPEAT** once. Press **REPEAT** twice to repeat the entire CD.
8. Press **Play/Pause** on the remote to pause playback. Press again to resume.

CD-MP3 DISC PLAYBACK

If your MP3 CD is separated into folders, follow these steps to navigate:

1. While the CD is stopped, press the **Folder Up** or **Folder Down** buttons on the remote to scroll through the folders.
2. Once the desired folder is selected, use **Forward Skip** or **Backward Skip** to select a track.
3. Press **Play** to begin playback of the selected track.
4. To repeat playback:
 - Press **REPEAT** once to repeat a single track.
 - Press **REPEAT** twice to repeat the current folder.
 - Press **REPEAT** three times to repeat all folders on the CD.

PROGRAMMING TRACKS

You can store up to 20 tracks in a programmed sequence from any compatible CD.

1. Press **STOP** on the remote, then press **PROGRAM** to begin programming.
2. Use **PREV/CH+** or **NEXT/CH-** on the front panel, or **FF>>** or **FR<<** on the remote, to select a track number.
 - For MP3 CDs:
 - a. Press **STOP**, then **PROGRAM** on the remote.
 - b. Use **PREV/CH+**, **NEXT/CH-**, **FF>>**, or **FR<<** to select the desired folder and track.
 - c. Press **PROGRAM** to confirm.
3. The display will show the stored track number and the next program position.
4. Repeat the steps to store additional tracks. The word **FULL** will appear if you attempt to store more than 20 tracks.
5. Press **PLAY/PAUSE** to play the programmed sequence.
6. To clear the programmed memory, either press **POWER**, switch to another **INPUT** mode, or open and close the CD tray.

BLUETOOTH OPERATION

1. To pair your Bluetooth device, press the **INPUT** button on the front panel or remote until **BT INPUT** mode is selected.
2. On your Bluetooth device, open the Bluetooth settings and look for a device labelled “**Jukestarz**”
 - It may appear as “Not Connected.”
 - Select **Jukestarz** to pair.
3. You’ll hear a rising tone when pairing is successful.
4. Choose audio from your Bluetooth device and press **Play** to begin. Make sure your device volume is appropriately adjusted.
5. Press **FF>>** or **FR<<** on the remote to skip forward or back.
6. Press **Play/Pause** on the remote to start or stop playback.

FM RADIO OPERATION

1. Press the **INPUT** button on the front panel or the **FM** button on the remote to select **Tuner Mode**.
2. To auto-scan stations and store them, press **SCAN/PAUSE/PLAY** on the front panel or **SCAN/PAIR** on the remote.
3. To manually tune a station, press **PREV/CH-** or **NEXT/CH+** on the front panel, or **FF>>** or **FR<<** on the remote to auto-tune to the next station.
4. To recall preset stations, press **CH-/FOLD** or **CH+/FOLD** on the remote, or **PREV/CH-** or **NEXT/CH+** on the front panel.


AUXILIARY (AUX) AUDIO OPERATION

The RCA input located on the **rear control panel** can accept a variety of audio sources.

- **Note:** No RCA input cable is supplied.
- The user must supply a compatible cable that matches their device’s output and connects to the jukebox via standard **RCA** input.
- Ensure the connected audio device has its volume properly adjusted for output.

TURNTABLE OPERATION

1. 45 RPM Adapter
2. Tonearm Lift Lever
3. Speed Switch
4. Auto Stop Switch
5. Hold Down Clip
6. Stylus

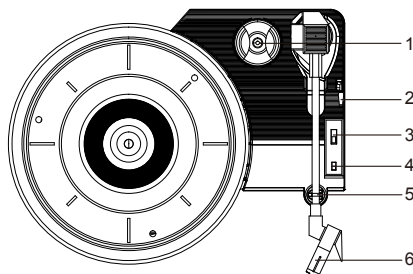

1. Press the **INPUT** button on the front panel or remote to select **Phono Mode**.
2. Set the **Speed Switch** to the appropriate speed (33 or 45 RPM).
3. Place the record on the turntable. Use the 45 RPM adapter if necessary.
4. Remove the stylus protector from the stylus assembly.
Note: To avoid stylus damage, always keep the included stylus guard in place when moving or cleaning the turntable.
5. Release the **Tonearm Hold Down Clip**.
Note: When the turntable is not in use, be sure to lock the hold down clip to secure the tonearm.
6. Use the **Tonearm Lever** to lift the tonearm.
7. Gently move the tonearm over the record to the desired start position. Lower the tonearm by setting the Tonearm Lever back down; the tonearm will descend slowly onto the record and begin playback.
8. When the record finishes playing, lift the tonearm again using the Tonearm Lever and return it to the **Tonearm Rest**. Release the lever to let the tonearm settle. To pause playback, repeat these steps.
9. Lock the **Tonearm Clip** to secure the tonearm when finished.

Platter Auto-Stop

The **AUTO STOP** feature applies to most 33 RPM vinyl records.

- If the **Auto-stop Switch** is set to **ON**, the platter will automatically stop spinning when the record reaches the end.
- In rare cases where the turntable stops before the record finishes, set the switch to **OFF** to bypass this feature and continue playback.


Replacing the Turntable Stylus (Needle)

To Remove the Stylus:

1. Use a small screwdriver to gently press the tip of the stylus downward (Direction "A").

To Install a New Stylus:

1. Hold the new stylus by the tip and insert it into the cartridge (Direction "B").
2. Push upward (Direction "C") until it locks into place.

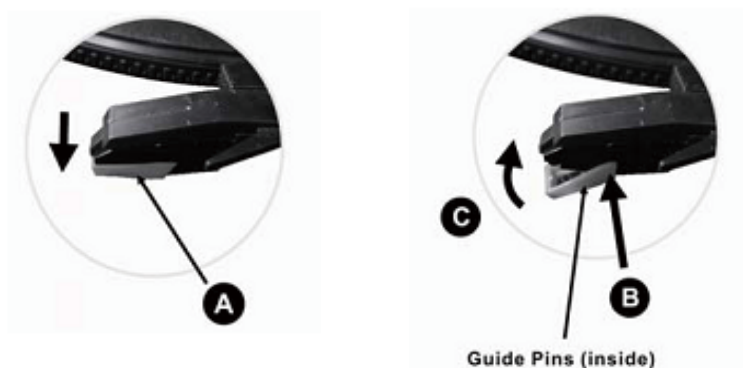

Warranty

This speaker comes with a **12-month limited warranty** from the date of purchase.

Terms & Conditions of Warranty:

1. This limited warranty **does not cover** any damage or malfunction resulting from improper installation, storage, transport, misuse, abuse, accident, neglect, mishandling, unauthorized repairs or modifications, or natural wear and tear from normal use or environmental exposure.
2. This warranty **excludes paint damage**, cosmetic wear, or scratches.
3. This warranty is **void** if the product is not used in accordance with the user instructions provided.
4. The **battery is excluded** from this warranty coverage.
5. A **processing and shipping fee** will be charged for warranty claims that require the product to be returned to the supplier for inspection or repair.

Please retain your proof of purchase, as it is required for all warranty claims.

RCA OUTPUT

1. The RCA jacks output analog line-level signals and can be connected directly to a pair of active (powered) speakers or the appropriate input of your stereo system.
2. The red plug connects to the **Right** channel, and the white plug connects to the **Left** channel.
Note: The RCA jacks are not designed for direct connection to passive (unpowered) speakers. If connected to passive speakers, the volume will be very low.

Jukebox Troubleshooting

No Power

- Ensure the jukebox is properly plugged into the wall socket.
- Verify the LED on the AC adapter (attached to the jukebox and wall socket) is glowing green.
- Confirm the wall socket is working and not switched off.
- Make sure all AC adapter connections—from the wall socket to the jukebox—are secure.
- Remove and reconnect the AC adapter at the back of the jukebox. Ensure the rear **POWER** switch is set to **ON**.

No Sound

- Check that the volume is turned up by pressing the **VOL+** button on the remote or front control panel.
Note: Volume levels typically range from 1 to 30 (maximum) on some units.
- Ensure the **SPEAKER INT./EXT./MIX.** slide switch on the back panel is set correctly:
 - **INT** for internal speakers only
 - **EXT** for external speakers only
 - **MIX** for both internal and external speakers
- Confirm the **POWER** switch is turned on and the jukebox is receiving power from the wall socket.
- If using the jukebox in **AUX** input mode, make sure the connected device's volume is properly adjusted.

CD Does Not Play

- Ensure the CD is inserted correctly with the label facing up.
- Check that the CD surface is clean.
- Verify the function switch is set to **CD** mode, and the jukebox volume is adjusted properly.
- If the CD is burned (not commercially produced), it may be in an unsupported format if created on a computer.

Remote Is Not Working

- Replace the batteries in the remote.
- Point the remote directly at the remote sensor, located near the centre of the jukebox just above the “CROSLEY” name.
- Remove any obstacles blocking the signal path between the remote and the jukebox sensor.

Product Specifications

Please note that due to ongoing improvements and technological updates, **actual product specifications and appearance may differ slightly** from those shown on the packaging or in promotional materials. All features are subject to change without prior notice.



Manufactured by TALENT ERA INC
E-Mail: talentera2022@gmail.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.