



使用说明书

User's Guide Sweeping Robot S30智能扫地机

 
Thank You For Purchasing This Product, please Use This Product Correctly By Following This Guide. Please Keep This Guide In A Safe Place For Future References.
感谢您购买本产品。请按照本指南正确使用本产品。请将本指南保存在安全的地方，以备将来参考。

Internal Name 内部名称




正面位置名称

FRONTAL LOCATION NAME

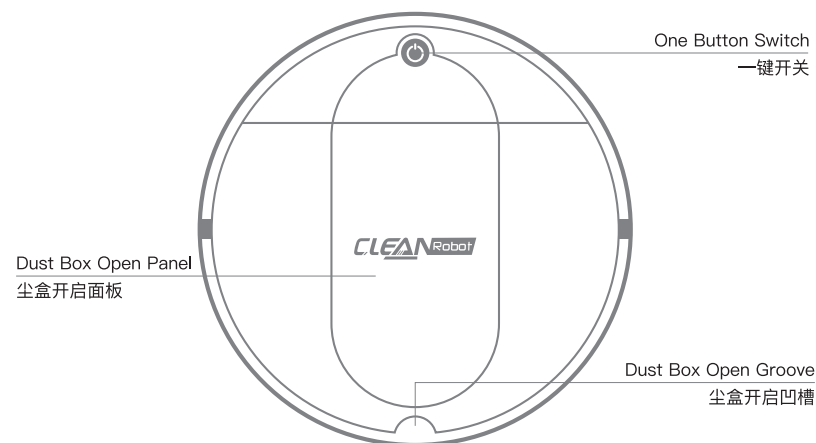

底部位置名称

 NAME OF BOTTOM LOCATION

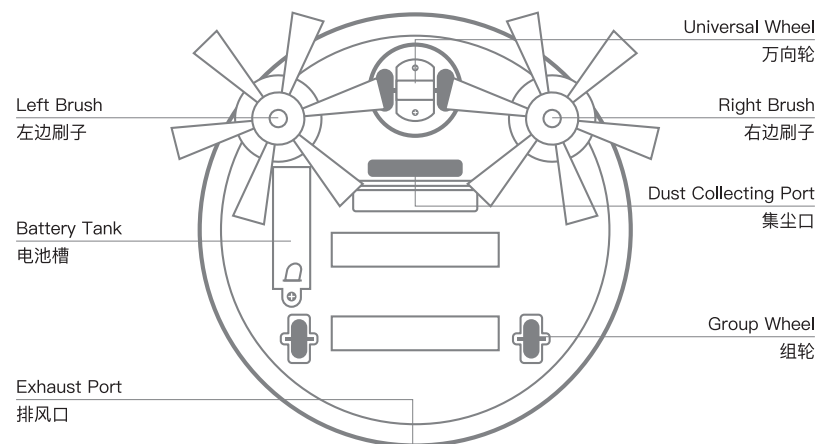

Usage Method 使用方法

1. When working, the switch position lights up blue. When working to low power, the switch position light turns off.
2. The product is equipped with a USB cable, with one end connected to the charging port and the other end connected to the power supply.
3. Turn off the power switch of the machine if it is not used for a long time.
4. Press the brush at the bottom of model S30A and tighten the screws on the brush with a screwdriver.
S30B at the bottom of the brush, the bottom of the buckle installation without screws.
5. First unplug the power block piece, and then place the product on the ground, press the above "Ⓢ" tap switch to start work; To stop work, press the "Ⓢ" button again.
6. Take out the adhesive strip and stick it on the bottom of the fuselage, figure ① is shown.

- 1.工作时开关位置亮蓝色灯，工作到低电时开关位置灯灭，这时要停止工作进行充电。
- 2.产品配置USB线，一端连接充电口，另一端连接电源。
- 3.长时间不使用时，请关闭机器的电源开关。
- 4.S30A款底部按下刷子，用螺丝刀拧紧刷子上的螺丝钉。
S30B款底部按下刷子，底部自扣安装无需螺丝钉。
- 5.首先拔掉电源阻断片，再把产品放置于地面，按下上面的“Ⓢ”轻触开关即可开始工作；需要停止工作即再次按下“Ⓢ”键。
- 6.取出胶条贴在机身底部，把布粘上即可使用，如图①所示。



 
Dust Box Cleaning Method 尘盒清洁方式

Dispose of dust box garbage after use

1. There is a dust box on the top of the product, which can be pulled out when cleaning.
2. Open the dust box and clean up the internal garbage. The internal dirty place, please use the rag dip in water after wring out and then wipe.
3. Put the dust box back into the product.

使用后要处理掉尘盒垃圾

1. 产品顶部有尘盒，清理时向外拉出即可。
2. 打开尘盒，请清理掉内部垃圾。内部脏的地方，请用抹布沾水拧干后再就行擦拭。
3. 再把尘盒放回产品。

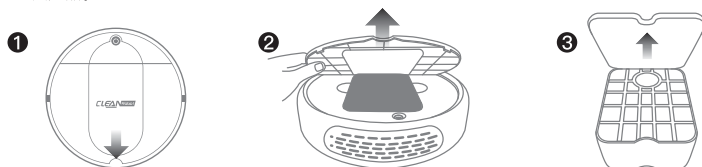

Battery Charging 电池充电



1. This product is charged by built-in battery. Do not disassemble the battery.
2. The charging time is about 3 hours according to the actual charging equipment.

1. 本产品采用内置电池充电。切勿拆解电池。
2. 根据实际充电设备，充电时间约为3小时。

Notes On Product Usages 使用说明

1. The movement of the cleaner is random. Please be aware that there may be areas that cannot be cleaned according to its movement path.
2. There will be accumulation of dirty things at the tire, so it should be cleaned regularly.
3. The exhaust port must be kept unblocked, otherwise there will be a failure.
4. Please do not store this product in high temperature and humid place near fire source.
5. Dispose of dust box garbage after use.
6. Please do not use this product for any purpose other than its function.
7. This product has no waterproof function, please do not put it in water or use it in a place with water.
8. Please do not throw, throw, or hit in violent ways.
9. Please do not place in direct sunlight and do not disassemble, repair or transform.
10. Keep out of reach of children and infants.
11. In order to avoid accidental injury, please do not use it for children and avoid inappropriate use.
12. In case of abnormal appearance during use, please stop using immediately.
13. This product cannot be washed in water. If there is any dirty place, please dip the cloth in water and wring it out before wiping.
14. When disposing of waste products, please follow the local indicators to dispose of waste products.

1. 本清洁机的移动是随机的。根据它的移动路线，可能有清洁不到的地方，请知悉。
2. 轮胎处会有脏东西积累，所以要定期的进行下清理。
3. 排气口必须要保持不堵塞，不然会出现故障。
4. 请不要在高温湿润以及靠近火源的地方存放本产品。
5. 使用后要处理掉尘盒垃圾。
6. 请不要把本产品用在本品功能以外的用途。
7. 本产品没有防水功能，请不要放入水中或者在有水的地方使用。
8. 请不要用摔落，投掷和击打这些粗暴的使用方式。
9. 请不要放置在阳光直射的地方不要拆装，修理和改造。
10. 请放置在孩子和婴儿拿不到的地方。
11. 为避免造成意外伤害，请不要供小孩使用，请避免不恰当的使用方式。
12. 如在使用过程中出现异常，请立即停止使用。
13. 本产品不能够水洗。如果有脏的地方，请用抹布沾水拧干后进行擦拭。
14. 当废品处理时，请遵从各地方的指标进行废弃处理。

Warning 警告

 
1. For the sake of safety, this product should be operated by persons with physical and mental health and over 4 years old of experience.
2. This product is not waterproof, do not let the product contact any liquid and shallow water away from the hot source.
3. When the product is working, please take good care of your family and pets to prevent falling partners, trampling and other injuries.
4. The product adopts universal wheel design. When encountering obstacles in front, the sweeper will change the direction of steering.
5. The product uses lithium battery power supply.
6. If the product appears abnormal phenomenon, such as bad smell, smoke, abnormal sound excessive heat, please stop using immediately.

1. 为安全起见，本产品需由身心健康及4周岁以上经验者操作。
2. 本产品并不防水，切勿让产品接触任何液体及浅水远离火热源。
3. 当产品在工作时，请照顾好您的家人及宠物，防止发生跌绊、踩踏等伤害。
4. 产品采用万向轮设计，当遇到前方障碍时，扫地机会改变转向方向。
5. 产品采用锂电池供电方式。
6. 如产品出现异常现象，如异味、冒烟、不正常声响过度发热，请立即停止使用。

Usage Method 使用方法

1. When working, the switch position lights up blue. When working to low power, the switch position light turns off.
2. The product is equipped with a USB cable, with one end connected to the charging port and the other end connected to the power supply.
3. Turn off the power switch of the machine if it is not used for a long time.
4. Press the brush at the bottom of S31A and use a screwdriver to tighten the screws on the brush.
The brush is pressed on the bottom of S31B, and the bottom is self-fastened without screws.
5. Turn on the switch at the bottom of S31A, place it on the ground, press "⊙" above and tap the switch to start the work;
To stop work, press the "⊙" button again.
First, unplug the power supply block, place S31B on the ground, press the "⊙" tap switch above to start the work; To stop work, press the "⊙" button again.
6. Take out the adhesive strip and stick it on the bottom of the fuselage, figure ① is shown.

1. 工作时开关位置亮蓝色灯，工作到低电时开关位置灯灭，这时要停止工作进行充电。
2. 产品配置USB线，一端连接充电口，另一端连接电源。
3. 长时间不使用时，请关闭机器的电源开关。
4. S31A款底部按下刷子，用螺丝刀拧紧刷子上的螺丝钉。
S31B款底部按下刷子，底部自扣安装无需螺丝钉。
5. 把S31A产品底部开关打开，放置于地面，按下上面的"⊙"轻触开关即可开始工作；需要停止工作即再次按下"⊙"键。
首先拔掉电源阻断片，把S31B产品放置于地面，按下上面的"⊙"轻触开关即可开始工作；需要停止工作即再次按下"⊙"键。
6. 取出胶条贴在机身底部，把布粘上即可使用，如图①所示。

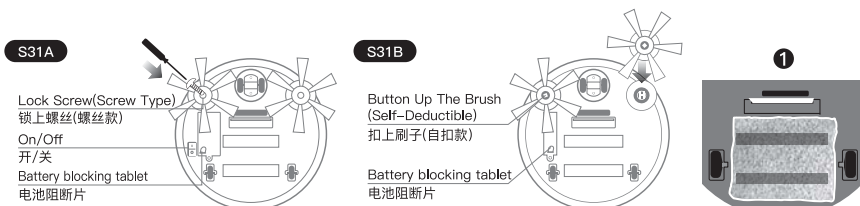


Dust Box Cleaning Method 尘盒清洁方式

- Dispose of dust box garbage after use
1. There is a dust box on the top of the product, which can be pulled out when cleaning.
 2. Open the dust box and clean up the internal garbage. The internal dirty place, please use the rag dip in water after wring out and then wipe.
 3. Put the dust box back into the product.

使用后要处理掉尘盒垃圾

 1. 产品顶部有尘盒，清理时向外拉出即可。
2. 打开尘盒，请清理掉内部垃圾。内部脏的地方，请用抹布沾水拧干后再就行擦拭。
3. 再把尘盒置回产品。

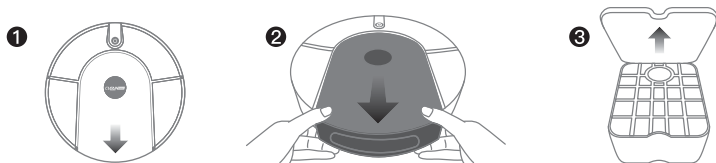

Battery Charging 电池充电

- S31A**
1. This product is charged by built-in battery. Do not disassemble the battery.
 2. The charging time is about 4 hours according to the actual charging equipment.
- ①
- ②
1. 本产品采用内置电池充电。切勿拆解电池。
2. 根据实际充电设备，充电时间约为4小时。
- S31B**
1. This product is charged by built-in battery. Do not disassemble the battery.
 2. The charging time is about 3 hours according to the actual charging equipment.
- ①
- ②
1. 本产品采用内置电池充电。切勿拆解电池。
2. 根据实际充电设备，充电时间约为3小时。

Notes On Product Usages 使用说明

1. The movement of the cleaner is random. Please be aware that there may be areas that cannot be cleaned according to its movement path.
2. There will be accumulation of dirty things at the tire, so it should be cleaned regularly.
3. The exhaust port must be kept unblocked, otherwise there will be a failure.
4. Please do not store this product in high temperature and humid place near fire source.
5. Dispose of dust box garbage after use.
6. Please do not use this product for any purpose other than its function.
7. This product has no waterproof function, please do not put it in water or use it in a place with water.
8. Please do not throw, throw, or hit in violent ways.
9. Please do not place in direct sunlight and do not disassemble, repair or transform.
10. Keep out of reach of children and infants.
11. In order to avoid accidental injury, please do not use it for children and avoid inappropriate use.
12. In case of abnormal appearance during use, please stop using immediately.
13. This product cannot be washed in water. If there is any dirty place, please dip the cloth in water and wring it out before wiping.
14. When disposing of waste products, please follow the local indicators to dispose of waste products.

1. 本清洁机的移动是随机的。根据它的移动路线，可能有清洁不到的地方，请知悉。
2. 轮胎处会有脏东西积累，所以要定期的进行下清理。
3. 排气口必须要保持不堵塞，不然会出现故障。
4. 请不要在高温湿润以及靠近火源的地方存放本产品。
5. 使用后要处理掉尘盒垃圾。
6. 请不要把本产品用在本品功能以外的用途。
7. 本产品没有防水功能，请不要放入水中或者在有水的地方使用。
8. 请不要用摔落，投掷和击打这些粗暴的使用方式。
9. 请不要放置在阳光直射的地方不要拆装，修理和改造。
10. 请放置在孩子和婴儿拿不到的地方。
11. 为避免造成意外伤害，请不要供小孩使用，请避免不恰当的使用方式。
12. 如在使用过程中出现异常，请立即停止使用。
13. 本产品不能够水洗。如果有脏的地方，请用抹布沾水拧干后进行擦拭。
14. 当废品处理时，请遵从各地方的指标进行废弃处理。

Warning 警告

1. For the sake of safety, this product should be operated by persons with physical and mental health and over 4 years old of experience.
2. This product is not waterproof, do not let the product contact any liquid and shallow water away from the hot source.
3. When the product is working, please take good care of your family and pets to prevent falling partners, trampling and other injuries.
4. The product adopts universal wheel design. When encountering obstacles in front, the sweeper will change the direction of steering.
5. The product uses lithium battery power supply.
6. If the product appears abnormal phenomenon, such as bad smell, smoke, abnormal sound excessive heat, please stop using immediately.

1. 为安全起见，本产品需由身心健康及4周岁以上经验者操作。
2. 本产品并不防水，切勿让产品接触任何液体及浅水远离火热源。
3. 当产品在工作时，请照顾好您的家人及宠物，防止发生跌伴、踩踏等伤害。
4. 产品采用万向轮设计，当遇到前方障碍时，扫地机会改变转向方向。
5. 产品采用锂电池供电方式。
6. 如产品出现异常现象，如异味、冒烟、不正常声响过度发热，请立即停止使用。

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.