

材质：铜版纸
印刷：彩色印刷
注：需对折,对折后尺寸 70x122mm

SOONBOX S9702 Wireless Speaker/ Portable Wireless Speaker 	Wireless Speaker -S9702 Wireless Speaker🔊	Wireless Speaker -S9702 Wireless Speaker🔊	Wireless Speaker -S9702 Wireless Speaker🔊	Wireless Speaker -S9702 Wireless Speaker🔊	Wireless Speaker -S9702 Wireless Speaker🔊	Wireless Speaker -S9702 Wireless Speaker🔊
	Technical specifications: Wireless standard: 5.3 Transmission distance: 10 meters Output power: 40W*2 Playing time: 6-8 hours Speaker size: 78mm 4Ω 40W*2 Input power: 5=1A Maximum current consumption: 2A Battery type: 8000mAh Charging port: Type-c charging cable Features: 1.Wireless connection 2.Memory function,breakpoint resuming. 3.Support U disk/TF card/TWS/AUX playback mode. 4.Built-in lithiumion battery. 5.Support MP3 music format decoding. 6.Using high-fidelity speakers,the sound is more natural and delicate. 7.1+1device serial connection function.	①🔊 On / Off /Volume +/ Volume - ②☀️ Lighting mode switch ③∞ TWS/Function mode conversion ④➤ Next Song ⑤⏮ Previous Song ⑥⏸ Pause/Play ⑦BASS BOOST Switch sound effects ⑧🔌 TF Jack ⑨🔌 Type-c Jack ⑩🔌 USB Jack ⑪🔌 AUX Jack	Button instruction: 1. Press and hold the" 🔊 " Power button to turn on/off the device;rotate the" 🔊 " to the left to decrease the volume;rotate the" 🔊 " to the right to increase the volume. 2. Press the" 🌞 " briefly to switch the light mode;press and hold the" 🌞 " to turnoff the light. 3. Press the" ∞ " briefly to switch between FM and Bluetooth modes; press and hold to enter pairing mode. 4.Press the" ▶ " briefly to pause/play; Bluetooth mode, press the" ▶ "briefly to answer/end a call; double-click the" ▶ " to reigt an incoming call;press and hold the" ▶ " to redial the last call. 5. Press the" ➤ " briefly to go to the next track; 6. Press the" < " briefly to go to the next trach; 7.Press the" 🎵 " briefly to switch on/off the bass boost. 8. Type-C charging port. (1).Charging cable port,when inserting the Type-c charging cable,the device is charged by default; (2).When using the radio function,you need to insert the charging cable as a radio antenna and the radio function can be used normally; 9.USB port; when a USB drive is inserted,the speaker will automati cally play the last inserted device with a prompt sound. 10.When anAUX audio cable is connected, the speaker will automatically play the last inserted device. Directions for use: 1. Wireless pairing: Open the wireless device and search for Bluetooth pairing name SOONBOX-S9702 connection pairing.	2. Play instructions: Bluetooth search status: the on/off light flashes quickly, approximately 0.5 seconds per time; Bluetooth pairing status: The on/off light is constantly on, while the playback status: The on/off light flashes slowly for about 1 second per time. 3. Charging indicator light: When charging, the red light is on, and when fully charged, the red light is off; 4. Prompt tone: (1). There is a prompt tone when turning on/off; (2). There is a prompt tone when the maximum volume is reached, and there is no tone at the minimum volume; (3). When low power of 3.4V is detected, it prompts to shut down three times. 5. Mode switching: (1). When turned on, it defaults to Bluetooth mode; (2). Mode switching sequence: Bluetooth mode -TF mode - USB mode - AUX mode, with priority given to rear insertion. 6. Volume requirements: The default volume for startup is 70%; 7. Power saving function: Automatically shut down after 10 minutes of inactivity.	Troubleshooting : 1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically,Please charge for 4 hours after use; 2. Cannot play music: The storage path of the music file cannot be recognized by the player,please store it in the root directory of the removable device; 3. There is no sound when connecting to the computer:the computer intertace is connected incorrectly,please select the correct audio output port. 4.There is no response to the keys or the function is in disorder: try again after shutting down. 5. Reset: When the machine can not shut down due to abnormal conditions, long press the 10-second switch button Reboot. FCC Warning Statement: Changes or modifications not expressly approved by the party responsible for compliance could void the user' s authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.	If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. FCC Radiation Exposure Statement The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference. (2)This device must accept any interference received, including interference that may cause undesired operation. FCC ID: 2BUYL-S9702