



Slate
CC-FOB200
Key FOB Instruction Manual

Key FOB Instruction Manual

DOCUMENT REVISION HISTORY

Revision No.	Date	Author	Change Description
1.0	09 April 2026	Paul Kafig	Draft

CONTENTS

Document Revision History.....	2
List of Figures	2
List of Tables	2
1 Button Operation	3
2 Battery.....	4
2.1 Battery Type	4
2.2 Battery Replacement Instructions.....	4
2.2.1 Battery Removal Steps	4
2.2.2 Battery Installation Steps	5
3 Regulatory Statement	6

LIST OF FIGURES

Figure 1. Key FOB	3
Figure 2. CR2032 battery.	4
Figure 3. Endcap Removal.....	4
Figure 4. Removal of the battery tray with battery.	5

LIST OF TABLES

Table 1. Button Description	3
-----------------------------------	---

Key FOB Instruction Manual

1 BUTTON OPERATION

The Key FOB (Figure 1) has five (5) buttons. The function of each button is described in Table 1.



Figure 1. Key FOB

Button	Description
	Doors Lock
	Doors Unlock
	Trunk Open
	Climate Precondition
	Panic Alarm

Table 1. Button Description

Key FOB Instruction Manual

2 BATTERY

2.1 BATTERY TYPE

The Key FOB uses a CR2032 coin cell battery. See Figure 2. Exact battery appearance may vary.



Figure 2. CR2032 battery.

2.2 BATTERY REPLACEMENT INSTRUCTIONS

2.2.1 Battery Removal Steps

1. **Remove the Endcap.** Hold the FOB in one hand while pressing down on the endcap removal tab. With the other hand, pull the endcap outward and down. See Figure 3.



Figure 3. Endcap Removal

Key FOB Instruction Manual

2. Grab hold of the battery tray with two fingers and remove the battery tray.



Figure 4. Removal of the battery tray with battery.

3. The battery may now be removed from the tray and a new battery installed.

2.2.2 Battery Installation Steps

To install a battery, place a CR2032 battery into the tray with the positive side (larger, smooth surface with the writing) **down** into the tray as pictured in Figure 4. Then, simply reverse the steps from the previous section.

Key FOB Instruction Manual

3 REGULATORY INFORMATION

3.1 FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2BV3QCCFOB200