


Viulinx Dual-band User Manual

Contents


1. Package Contents	1
2. Technical parameters	1
3. Interfaces	3
3.1. Transmitter unit	3
3.2. Receiver Unit	4
3.3. LEDs & Button (Receiver unit).....	6
3.4. LEDs & Button (Transmitter unit).....	6

1. Package Contents

Receiver Unit

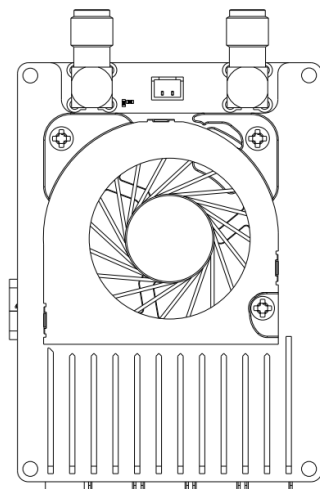

Transmitter Unit

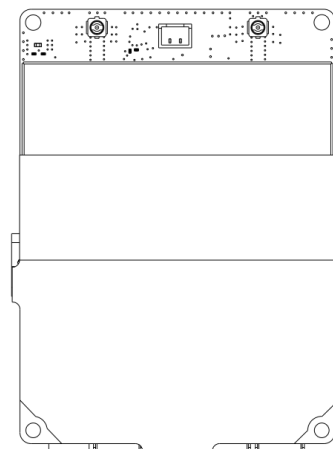

Accessories


Receiver antenna x 2	
Transmitter antenna x 2	
Power cable x2	
Serial cable (Receiver Unit) x 2	
Serial cable (Transmitter Unit) x 2	
RC cable (Receiver Unit) x 2	
RC cable (Transmitter Unit) x 2	
RJ45 cable x 2	

2. Technical parameters

Parameters	Value
Frequency	2.4GHz & 5GHz
Band width	10MHz
Power	28dBm@2.4GHz; 26dBm@5GHz
Modulation	OFDM
Constellation	BPSK, QPSK, 16QAM
FEC	LDPC (1/2, 2/3, 3/4, 5/6)
Duplex	TDD
Downlink throughput	2Mbps ~ 10Mbps
Uplink throughput	600kbps
Encryption	AES 256 (Optional)
Interface	Power*1, Ethernet*1, TTL*2, S.BUS*2, PPM*1
Weight	19g
Dimension	63.24*46.83*10.43mm
Rated voltage	DC 12V ~ 26V
Working temperature	-40°C ~60°C

3. Interfaces

3.1. Transmitter unit

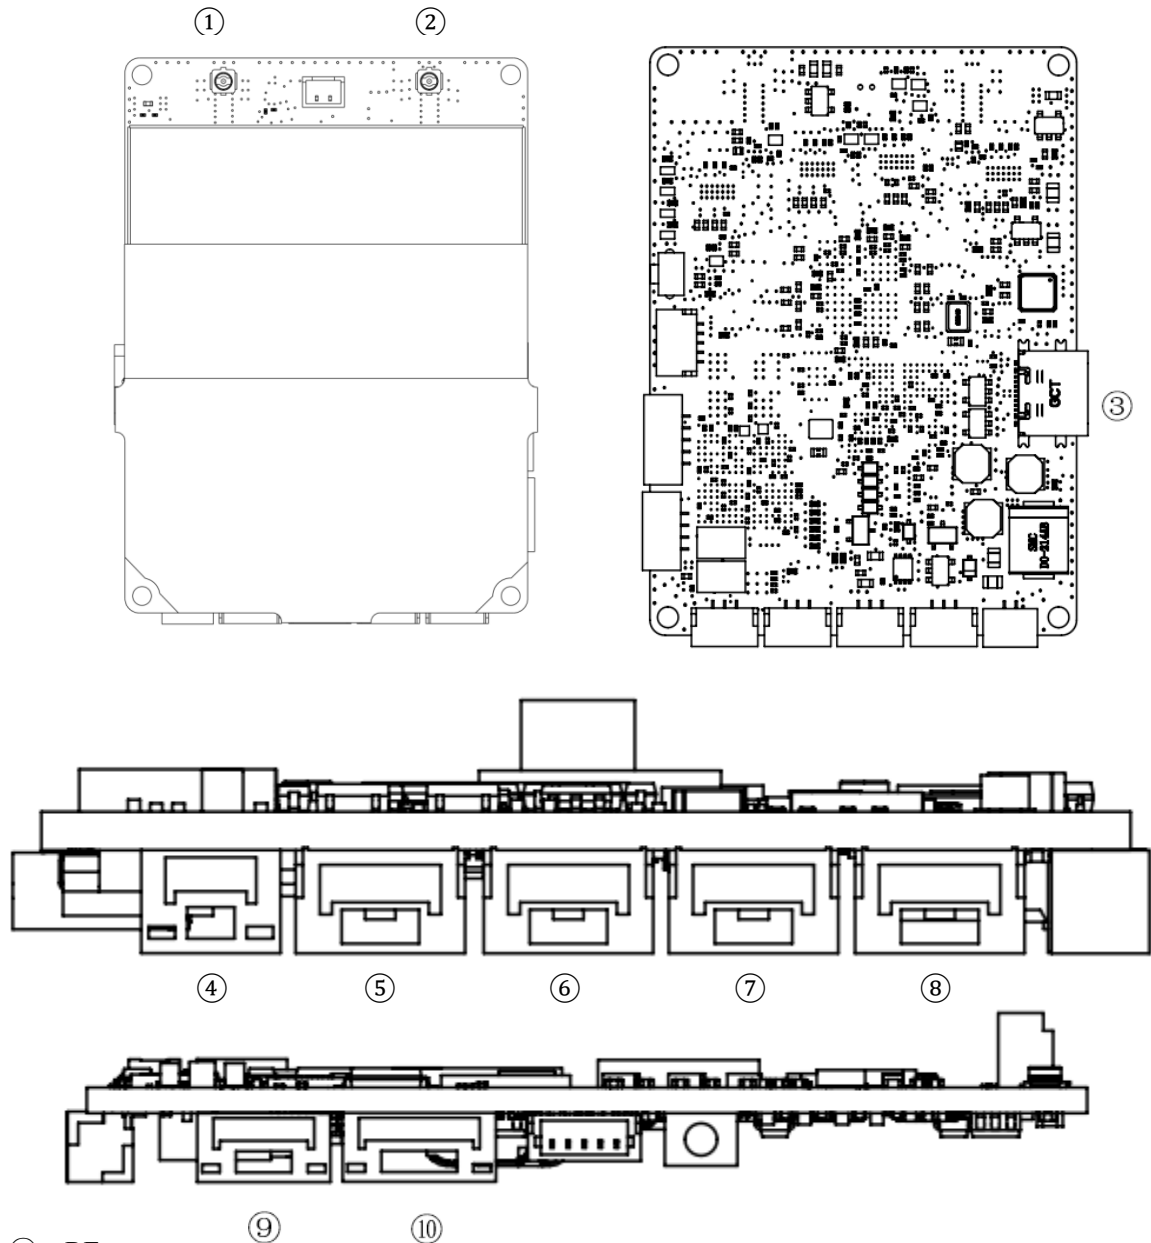

① RF port:

An IPEX RF port connects to an antenna through RF cable.

② RF port:

An IPEX RF port connects to an antenna through RF cable.

③ Type-C USB port.

Use for Debugging

④ Control Bus0 port:

Connects to Control Bus receiver. Pinouts of the Control Bus port are GND from left to right.

⑤ Control Bus1 port:

Connects to Control Bus receiver. Pinouts of the Control Bus port are GND→ 5V from left to right.

⑥ Control Bus 2 port:

connects to Control Bus receiver. Pinouts of the Control Bus port are GND→ 5V from left to right.

⑦ Serial port 1:

Serial port for telemetry, ttl(voltage level 3.3V) or RS232. Pinouts of the serial port is Tx Rx GND seen from left to right in above figure.

⑧ Serial port 2:

Serial port for telemetry, ttl(voltage level 3.3V) or RS232. Pinouts of the serial port is Tx Rx GND seen from left to right in above figure.


⑨ Power Port:


Power iinput (DC12V ~ 26V). Pinouts of the power port are PWR GND from left to right.

⑩ Ethernet Port:

Video input from a camera and web-page management interface. Pinouts of the Ethernet port is R- R+ G T- T+ from left to right.


3.2. Receiver Unit

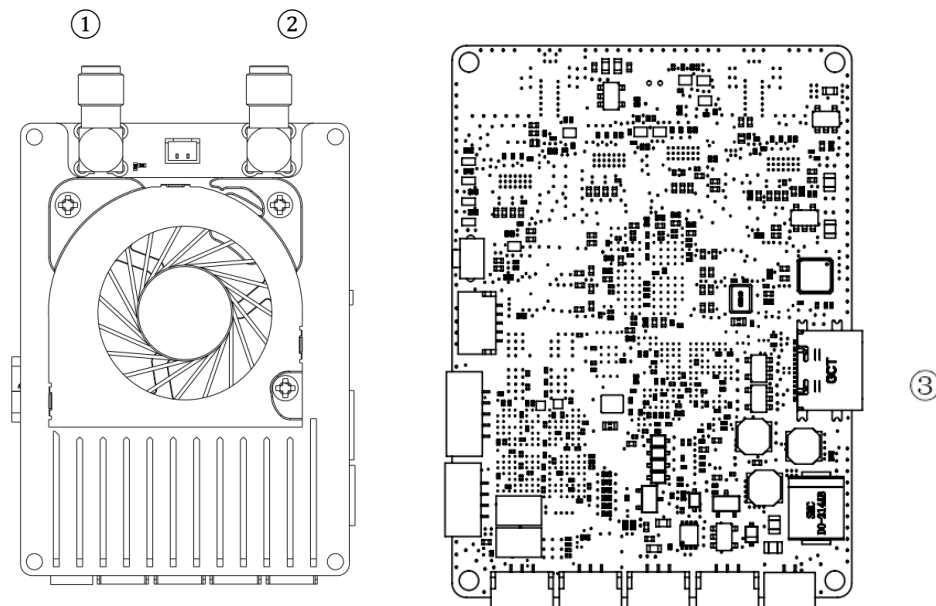

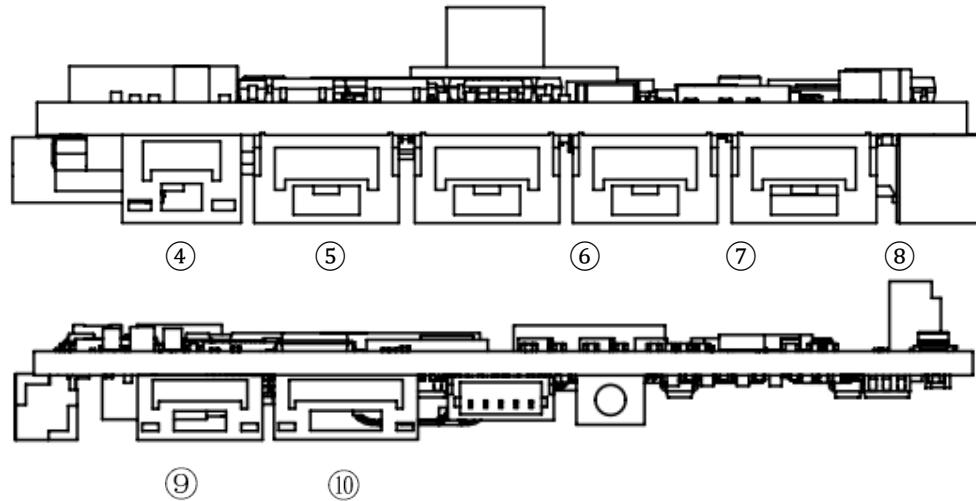


- ① RF port:
An IPEX RF port connects to an antenna through RF cable.
- ② RF port:
An IPEX RF port connects to an antenna through RF cable.
- ③ Type-C USB port.
Use for Debugging
- ④ Control Bus0 port:
Connects to a controller. Pinouts of the Control Bus port are GND from left to right.
- ⑤ Control Bus1 port:
Connects to the receiver. Pinouts of the Control Bus port are GND→ 5V from left to right.
- ⑥ Control Bus2 port:
connects to the receiver. Pinouts of the Control Bus port are GND→ 5V from left to right.
- ⑦ Serial port 1:
Serial 1st telemetry port connects to PC USB port through TTL to USB, ttl (voltage level 3.3V). Pinouts of the serial port is GND Rx Tx from left to right
- ⑧ Serial port 2:
Serial 2nd telemetry port connects to PC USB port through TTL to USB, ttl (voltage level 3.3V). Pinouts of the serial port is GND Rx Tx from left to right
- ⑨ Power Port:
Power input (DC12V ~ 26V). Pinouts of the power port are PWR GND from left to right.
- ⑩ Ethernet Port:
Video input from a camera and web-page management interface. Pinouts of the Ethernet port is R- R+ G T- T+ from left to right.

3.3. LEDs & Button (Receiver unit)

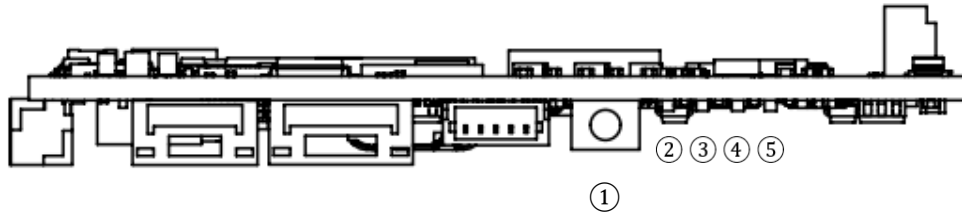

- ① Bind button:
Press and hold until LED1&LED2 start flashing, it's bound already before factory delivery.
- ② LED1:
It's off when the radio link is connected.
- ③ LED2:
It's off when the radio link is connected.
- ④ LED3:
Solid on in orange, 100Mbps Ethernet physical link connected.
- ⑤ LED4:
Flickering in green, when there's data transmission.

3.4. LEDs & Button (Transmitter unit)

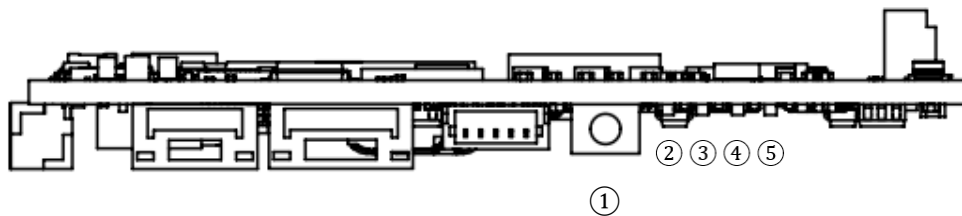

- ① Bind button:
Press and hold until LED1&LED2 start flashing, it's bound already before factory delivery.
- ② LED1:
Solid on in green: Receiver-to-Transmitter link connected.
- ③ LED2:
Solid on in orange: Transmitter-to-Receiver link connected..
- ④ LED3:
Solid on in orange: 100Mbps Ethernet physical link connected.
- ⑤ LED4:
Flickering in green: when there's data transmission.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

List of applicable FCC rules

This module has been tested and found to comply with part 15 requirements for Modular Approval.

Specific operational use condition

The module is tested for standalone mobile RF exposure use condition.

- (1) The antenna must be installed such that 20 cm is maintained between the antenna and users,
- (2) The transmitter module may not be co-located with any other transmitter or antenna.

Limited modular Procedures

No applicable.

Trace antenna designs

No applicable.

RF exposure considerations

1. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Antennas:

The following antennas have been certified for use with this module.

Only antennas of the same type with equal or lower gain may also be used with this module.

Other types of antennas and/or higher gain antennas may require the additional authorization for operation.

Antenna Specification list below:

Antenna Type	M/N	Frequency Band (MHz)	Antenna Gain (dBi)
Dipole	SKGE2458D3B01A.BLGB.SMA MF.Z	2400-2500	2.4G: 2.76dBi
		5100-5900	5.8G: 2.73dBi
PCB	WF209A.RG178.80Z.MMCX.F	2400-2500	2.4G: 3.55dBi
		5100-5900	5.8G: 2.89dBi

Label and compliance information

When the module is installed in the host device, the FCC ID label must be visible through a window on the final device or it must be visible when an access panel, door or cover is easily re-moved. If not, a second label must be placed on the outside of the final device that contains the following text: “[Contains FCC ID: 2BV64-G2026A2458J](#)”.

The FCC ID can be used only when all FCC compliance requirements are met.

The end product shall bear the following 15.19 statement: This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Information on test modes and additional testing requirements

This transmitter is tested in a standalone mobile RF exposure condition, and any co-located or simultaneous transmission with other transmitter(s) class II permissive change re-evaluation or new certification.

Part 15 Subpart B disclaimer

This transmitter module is tested as a subsystem and its certification does not cover the FCC Part 15 Subpart B rule requirement applicable to the final host. The final host will still need to be reassessed for compliance to this portion of rule requirements if applicable.

As long as all conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

Important Note

In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for reevaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

Manual Information to the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The host integrator must follow the integration instructions provided in this document and ensure that the composite-system end product complies with the requirements by a technical assessment or evaluation to the rules and to KDB Publication 996369.

The host integrator installing this module into their product must ensure that the final composite product complies with the requirements by a technical assessment or evaluation to the rules, including the transmitter operation and should refer to guidance in KDB 996369.

OEM/Host manufacturer responsibilities

OEM/Host manufacturers are ultimately responsible for the compliance of the Host and Module. The final product must be reassessed against all the essential requirements of the FCC rule such as FCC Part 15 Subpart B before it can be placed on the US market. This includes reassessing the transmitter module for compliance with the Radio and EMF essential requirements of the FCC rules. This module must not be incorporated into any other device or system without retesting for compliance as multi-radio and combined equipment

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

END