

9K-30MHz



(The EUT was placed in the center of the turntable)

30MHz-1GHz




(The EUT was placed in the center of the turntable)

1GHz -18GHz



(The EUT was placed in the center of the turntable)

18GHz-25GHz

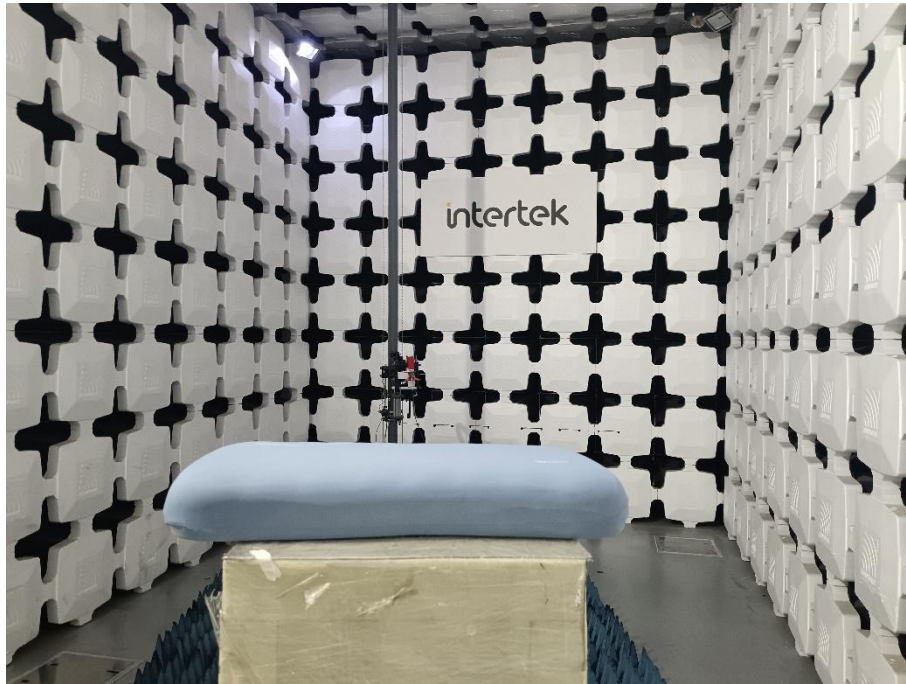

(The EUT was placed in the center of the turntable)