 


User Manual for Children's Visual Walk-

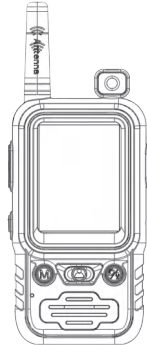

 
User Manual

Please read this user manual carefully before using this product.

This manual is for reference only; actual operation

I. Product Structure

Product Description

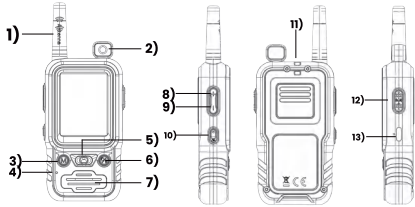

- 1) Antenna 2) Lens (Rotate clockwise to switch)
3) Left Button / M Key 4) Microphone 5) OK Key
6) Right Button / Talk Button 7) Speaker 8) Volume +
9) Volume - 10) Power Switch 11) Lanyard Hole
12) Intercom Key 13) Charging Port

II. Button Functions & Basic Operation

1. Power On & Power Off

Toggle the Power Switch: Push up to power on, push down to power off

2. Main Interface



 
- 1) Video Call 2) Voice Call
3) Chat 4) Camera
5) Album 6) Game

Main Interface Button Operations

- 1) Press the Left / Right Button briefly to move left and right.
2) Short press the Volume - button to decrease volume, short press the Volume + button to increase volume.
3) Press the OK Button briefly to enter the function.

3. Walkie Talkie

Press the Left / Right Button to move and select  Press the OK Button to enter the Walkie-Talkie mode.



- 1) Emoji
2) Voice
3) Music
4) Take Photo
5) Picture

Button Operations:

- 1) Press the Left / Right Button briefly to select the bottom functions by moving left and right; press the OK Button briefly to enter.
2) Press the Intercom Button briefly to exit Walkie-Talkie.

Video Call Operations:

- 1) Press the OK Button briefly to select Video Call and dial out, then wait for the other party to answer. Press the Answer Button to answer or press the M Button to hang up.
2) Press the M Button briefly to switch voice effects.
3) Press the Volume +/- Button briefly to increase or decrease the volume. Long press the M Button to switch the video window display. Rotate the camera clockwise to switch between front and rear lenses. Press the OK Button briefly to switch stickers.
4) Long press the Intercom Button for voice Intercom.
5) Press the Call Button briefly to hang up the video call.

Voice Intercom Operations:

- Long press the Intercom Button to conduct voice Intercom: hold to speak, release to finish and send.
In Walkie-Talkie mode, long press the OK Button to conduct voice Intercom: hold to speak, release to finish and send.

Emoji Operations:

- Press the Left / Right Button briefly to select emojis by moving left and right; press the OK Button briefly to send.

Picture Operations:

- 1) Press the Left / Right Button briefly to select pictures by moving left and right; press the OK Button briefly to zoom in and view.
2) On the picture selection interface, press the OK Button briefly to send.
3) Press the Intercom Button briefly to return to the Walkie-Talkie interface.

Camera Operations:

- 1) Tap the 'OK button' to take a photo and send it;
2) While in the camera interface, rotate the camera clockwise to switch between front and rear lenses. Tap the 'OK button' to take a photo and send it;
3) Tap the 'Intercom button' to return to the micro-chat interface.

4. Camera

Tap the 'Left/Right buttons' to move to  tap the 'OK button' to enter camera mode;

- 1) Tap the 'OK button' to take a photo and save it;
2) Rotate the camera clockwise to switch between front and rear lenses;
3) Tap the 'Intercom button' to return to the main interface.

5. Album

Tap the 'Left/Right buttons' to move to  tap the 'OK button' to enter album mode;

- 1) Tap the 'Left/Right buttons' to move left/right and select an image. Tap the 'OK button' to zoom in and view. Tap again to return to the preview interface;
2) While on the image selection screen, long press the 'OK button' to bring up the delete menu;
3) Tap the 'Intercom button' to return to the main interface.

6. Game

Tap the 'Left/Right buttons' to move to  tap the 'OK button' to enter the game;

- 1) Tap the 'Left/Right buttons' to move up/down.
2) Tap the 'Intercom button' to return to the main interface.

III. Product Specifications

LED Display	2.0 Inches (240×320 pixels)
Buttons	7 buttons
Operating Temperature	Maximum 65° C, minimum -10° C
Operating Humidity	85%
Power Supply	USB 5V; Battery 3.7V
Power Consumption	USB power supply: 3.9W; Battery power supply: 1.7W
Low Battery Indicator	3.71V
Power Supply Power Consumption	USB 5V: Power consumption 3.9W Battery power consumption 1.7W

Note: This product reserves the right to change the design and specifications without prior notice.

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.