

Sensor with clamp-in valves 金属气门嘴+传感器

Installation instructions

Caution:

1. It is recommended to use Zilian's valve in combination with Zilian's sensor.
2. To ensure safety and proper use, please refer to the steps outlined in the instruction manual for installation.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

•Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Installation

- 1.Put down the screw nut;
- 2.Slide the valve stem through the valve hole of the rim. Tighten the screw-nut with 4.0 Nm with the help of the Torque tool.
- 3.Assemble the tire, be sure that sensor would not touched with the rim and tire.

Note: Use different way to re-lean according to the different vehicle.

安装说明

- 1.将压紧螺母旋下;
- 2.将气门嘴从轮毂孔穿过,并用扭矩扳手用4.0Nm的力把压紧螺母旋紧;
- 3.安装轮胎,确保传感器不受轮毂与轮胎边缘的挤压;

注意: 根据不同的车型学习方式进行学习

China
Suzhou Zilian Automobile Technology Co., Ltd
Building A6, No. 81 Weizhong Road, Weitang
Town, Xiangcheng District, Suzhou City
Tel: +86 0512-62627555
Email: dzd@zln-tech.com

中国
苏州紫联汽车科技有限公司
苏州市相城区渭塘镇渭中路81号A6栋
电话: +86 0512-62627555
邮箱: dzd@zln-tech.com