 


Space Heater

Model : GP-1300

- Please read this manual carefully before use.
- The appearance of the product is subject to the actual product.
- The company reserves the right to interpret the instructions.

User Manual

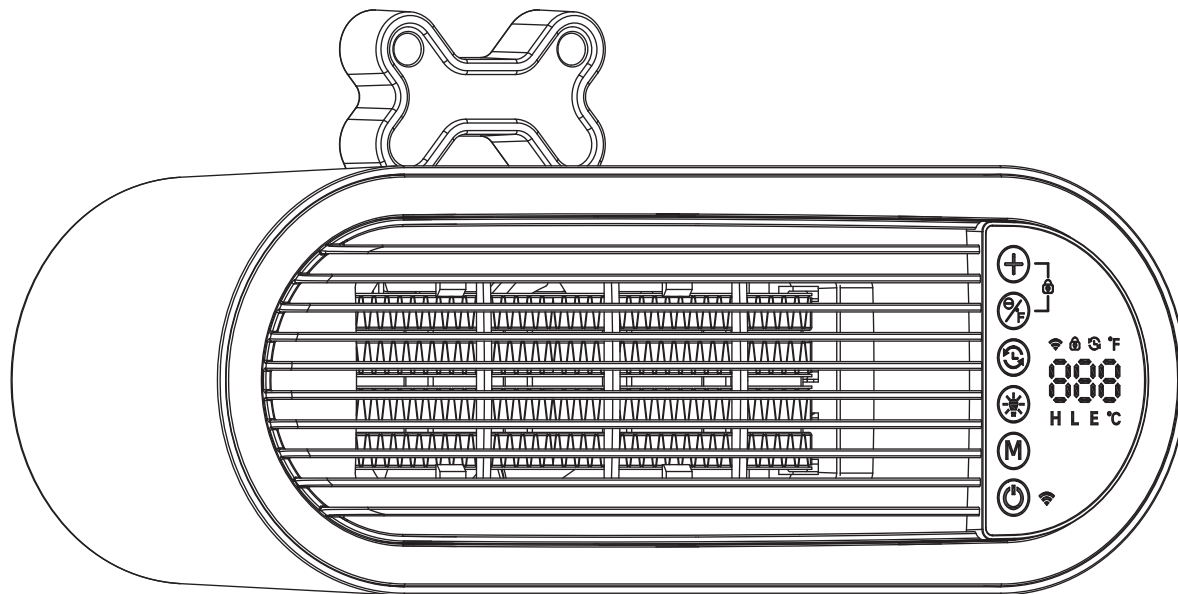

 Warning:

In order to prevent the occurrence of danger, please make sure that the heater is not covered by other objects when using. In order to serve you better, please read this manual carefully before use and keep it properly for future maintenance.

It is normal for the peculiar smell to start up for the first time, and it will volatilize within a few minutes after starting up. Please feel free to use it.

*Please DO NOT wind up the power cord during use to avoid heat build-up in the power cord, which may cause danger.

*The power extension cord is not recommended for this electric heater.

*Please store the heater after it cooling.

*This Space Heater can ONLY be used with the voltage specified on the heater's name-plate (120V~60HZ).

*DO NOT alter the heater or cord in any way, this greatly increases your risk of fire and voids all warranty.

*Please DO NOT put any foreign objects or metal objects into the air inlet or outlet of the Space heater, as this may cause electric shock, fire, or damage to the heater.

*Please DO NOT immerse the heater in water or let water enter the inside of the electric heater, which may cause electric shock.

*When installing, placing, and using the electric heater, please DO NOT cover the air outlet and inlet of the electric heater, and ensure that the flammable materials are more than 1 meter away from the electric heater to avoid the electric heater from overheating and causing a fire.

*Please DO NOT place the electric heater close to other heat sources.

*Please DO NOT use this electric heater in the following places: near natural gas or gas pipelines, the use and storage of paint or other flammable liquids.

- *In order to avoid burns during or after the use of this heater, please DO NOT let your bare skin touch it; if you need to move it, please turn it off and wait for its surface to cool down.
- *please DO NOT cover the heater with clothing or other items.
- *If the heater fails, please contact us in time or send it to a qualified service station.
- *Please DO NOT use frosted materials to clean the electric heater. The electric heater can be cleaned with a cloth soaked in hot soapy water and wrung out. Before cleaning the heater, make sure that the heater is POWER OFF
- *Please DO NOT switch on the power supply before the heater is fully installed or adjusted.
- *Please DO NOT install the electric heater under the electrical outlet.
- *To avoid the possibility of electric shock or fire, please ensure that the power cord and electric heater are not exposed or immersed in rain or any other liquid.
- *This Space heater is not suitable for use in exposed outdoor or humid places.
- *Please make sure to cut off the power supply when the heater is not in use.
- *please keep the power cord and fixed cables away from the high temperature surface of the heater.
- *Please DO NOT use next to bathtubs, showers, swimming pools or other liquids.
- *Fix the electric heater on the wall or install it in the correct position, also keep the heater upright.
- *please use the heater in accordance with these instructions. To avoid causing fire, electric shock or injury, do not use other manufacturer's product instructions for use with this Space heater.
- *Please DO NOT wrap the power cord somewhere or twist the power cord into a bundle which may cause the insulator of the power cord to weaken or fail. Please make sure that the power cord does not come into contact with any sharp objects.
- *Please DO NOT touch the electric heater when your hands are wet.
- *The most common cause of overheating of the electric heater is the accumulation of dust or fluff. Please make sure to clean the electric heater regularly when it is not powered on.
- *Please DO NOT install electric heaters next to windows with curtains to prevent electric shock or fire.
- *DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.

- *Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
- *DO NOT use outdoors.
- *Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- *In order to avoid overheating, do not cover the heater.
- *This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- *Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- *Children of less than 3 years should be kept away unless continuously supervised.
- *CAUTION —Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- *Save these instructions.



WARNING

 
INGESTION HAZARD: This product contains a button cell or coin battery DEATH or serious injury can occur if ingested.

A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.

KEEP new and used batteries OUT OF REACH Of CHILDREN. Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.




Product List

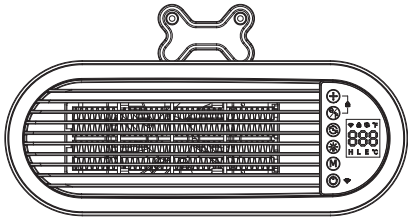


Heater



 Controller

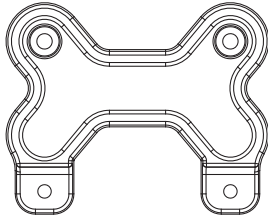

Hanging board

 

Screws


Product Specifications

Model Number:	GP-1300
Rated Voltage:	120VAC(60Hz)
Rated Power:	1300W
Product Dimensions:	11.5 in.x5.4 in.x6.1 in.


Product Features

Heating	Shutdown Timer
Temperature Adjustment	Smart Wi-Fi Function
Remote Control	Overheat Safety Feature
Ambient lighting	Multi-scenario usage

 
1、 First, use screws to fix the two Hanging board pieces onto the heating unit.

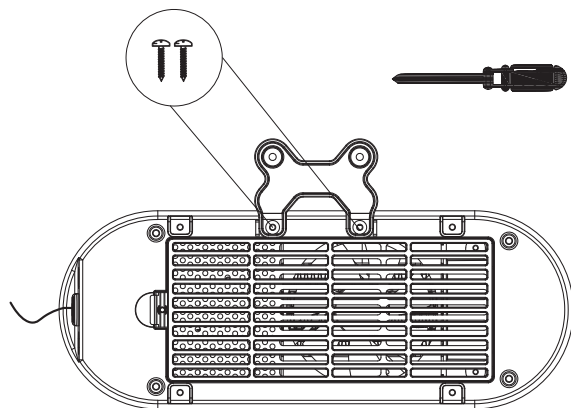

 
3: Choose the best location on the wall (near the end of the power cord) and drill a hole at least 25 mm in diameter to ensure that the power cord can pass through this hole.

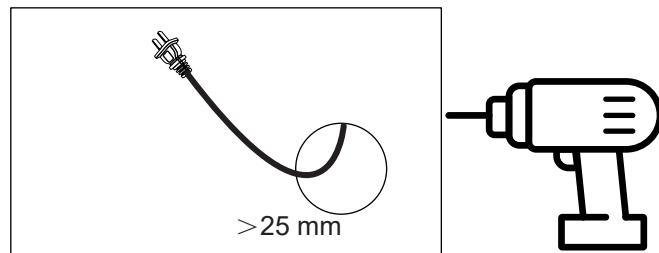

 
2. Fix the heater with the installed hanging board to the height you need with screws. (It is recommended that the best installation height should be higher than the height of the pet.)

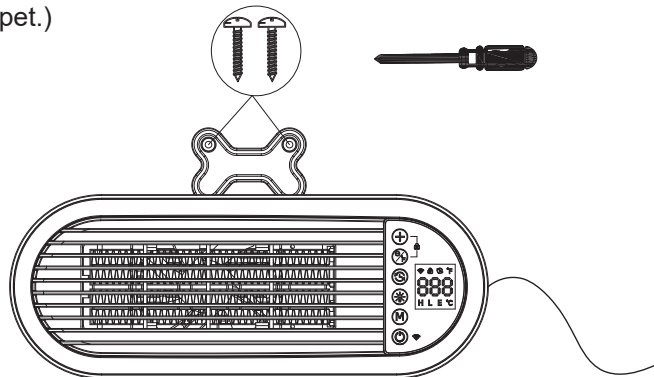

 4. heating device can be used normally after the power is turned on.

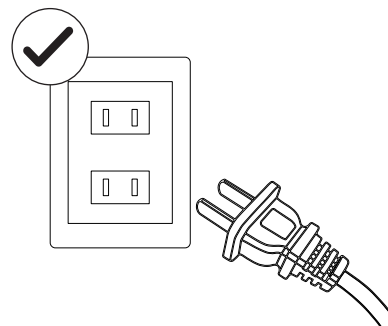

PRODUCT DIAGRAM

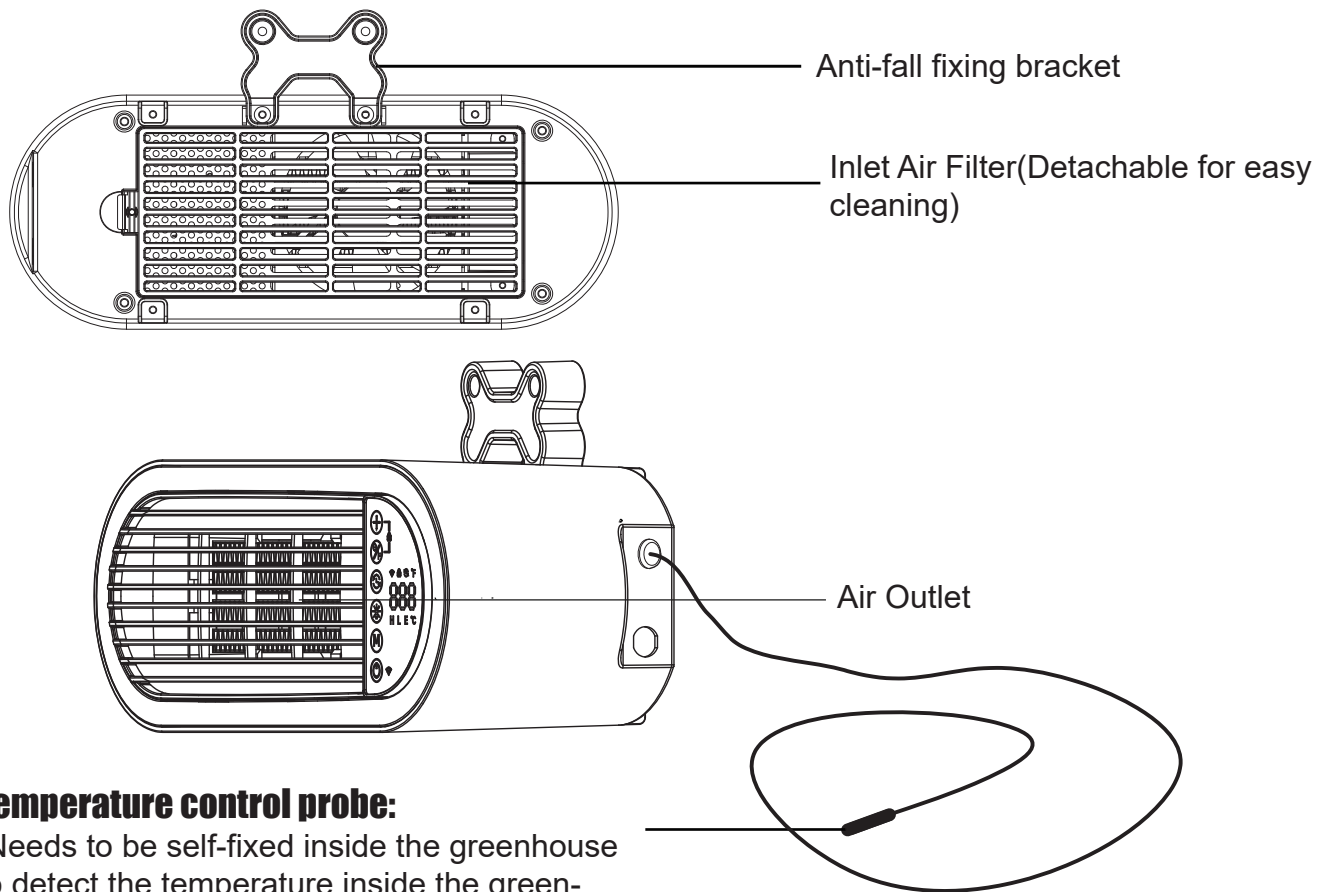 

Temperature control probe:

Needs to be self-fixed inside the greenhouse to detect the temperature inside the greenhouse;

CONTROL PANEL

Long press: "+Temp" + "-Temp" Child Lock

Short press: + Temp

Long press:
to switch to °C/°F

Short press: - Temp

 
Short press :
0-24 timing

Short press :
ambient lighting

mode switch:
Short press High,
Low and Eco modes.

Short press: Power switch

Long press : Network paired mode

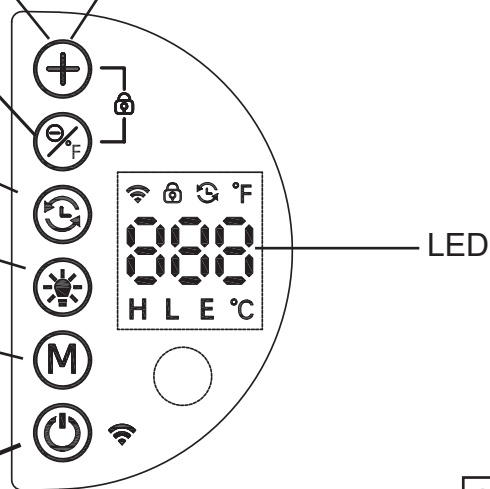


Note:

EE: fan is blocked

E1: Poor connection of temperature probe.

 Wi-Fi Child Lock Timing

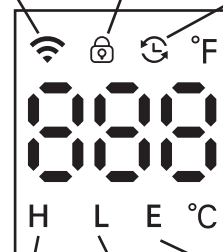

High heat mode

Low heat mode

Note: mode switch: High Mode uses 1300W; Low Mode uses 950W. ECO mode is an Economic Energy Saving Function. When ECO mode is chosen, the heater will manage itself from less to more heating power (watts), Default display 77 °F .

Operation Guide

After power on, the buzzer will sound once and enter the standby.

1. Power button “”

1) In standby mode, press the power button “” (quick response) to enter the working state, the digital screen shows the ambient temperature.

2) In the working state, press the power button “” (response after release) and then enter the shutdown state.

2. Temperature adjustment key “+” “-”

1) Press “+” or “” in normal operation, the set temperature will be displayed and flashing, and the temperature unit symbol C or F will light up, and enter the temperature setting mode. At this time, the temperature setting can be adjusted by pressing the key “+” or “”, The temperature is set cyclically within the range of 5 °C-45 °C, and after three seconds of no operation, confirm and exit the temperature adjustment mode to display the ambient temperature. When the set temperature is higher than the ambient temperature, the product starts to heat. When the temperature is lower than the ambient temperature, the product stops heating. Set temperature with power-down memory function;

3. Mode switching button “”

When the machine is turned on, press to “M” for a short time to switch between High heat mode & Low heat mode & ECO mode circularly, and icons H or L or E of indicator lamp of current working mode will be lighted; (

Note: ECO mode After power loss, the default temperature will be set to 77 °F upon restart.)

4. Timing key “”

In the working state, Short press “” for three seconds to enter the timer shutdown mode, the icons “+” and “” flash (do not affect the display of other icons), and the temperature adjustment key “+” or “” 0H-24H cycle increases and decreases the adjustment time. After three seconds of inactivity, it will automatically confirm and return to the environment display window.

5. Ambient light: “”

Press the light button briefly and the ambient light will turn on.

6. combination key

Press “+” “” at the same time to turn on or cancel the child lock in working condition.

press “” for five seconds to reset the Wi-Fi, the Wi-Fi symbol is always on when the Wi-Fi connection is successful, and it flashes when it is not connected.

1. Download the App



Please download " smart life" from App Store.
You can also scan the QR to download the APP.

2. Add the device

Please follow the APP prompts to connect the Smart green house heater. If it fails, please long press the“ ⏻ ”button for 5S until the“ 📶 ”flashes and try to reconnect again.

3. App operation

You can scan the QR code to watch the APP detailed operation instructions.

(Note: For the sake of environmental protection, we have already cancel the APP paper manual, please scan the code and check!)



 
 
Maintenance

1. Turn off the power switch.
2. Unplug the unit and let it cool completely.
3. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. **CAUTION: DO NOT** let liquid enter the heater.
4. **DO NOT** use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
5. **DO NOT** immerse the heater in water.
6. Wait until the unit is completely dry before use.
7. If you do not use the heater for a long time, please take out the remote batteries (to prevent corrosion) as shown below. Store the remote in a safe place.

Remote control

Battery cover

Battery

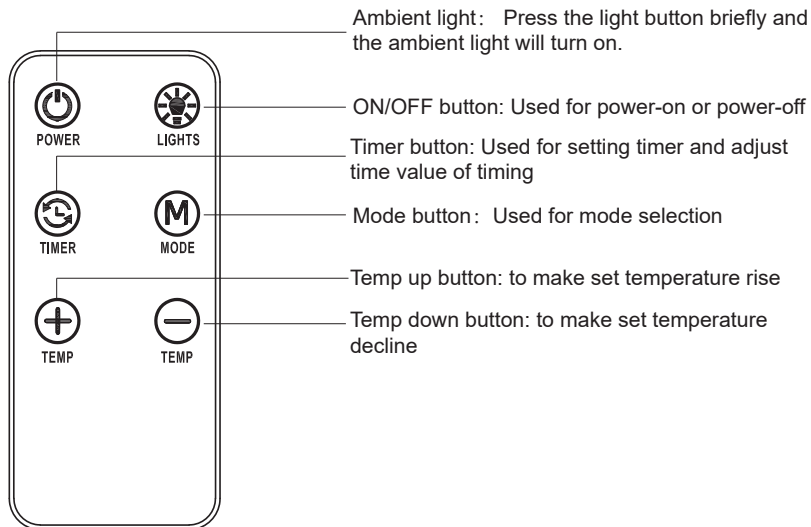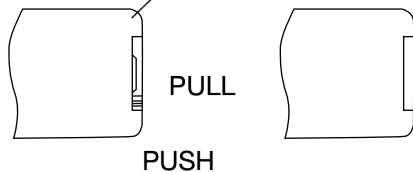

Storage

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

Basic Troubleshooting

If the heater will not operate, please check the following before seeking repair advice:

1. Check if the power cord is plugged into an electrical outlet, if not, plug in.
2. Check if electricity to the main power switch is working.
3. Check to see if the battery on the remote is placed correctly, undamaged.

NOTE: For the heater to function properly, the desired temperature on the heater must be set a few degrees higher than the temperature in the room. If it seems to not be heating, increase the desired temperature on the heater to engage the heat elements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.



MADE IN CHINA