


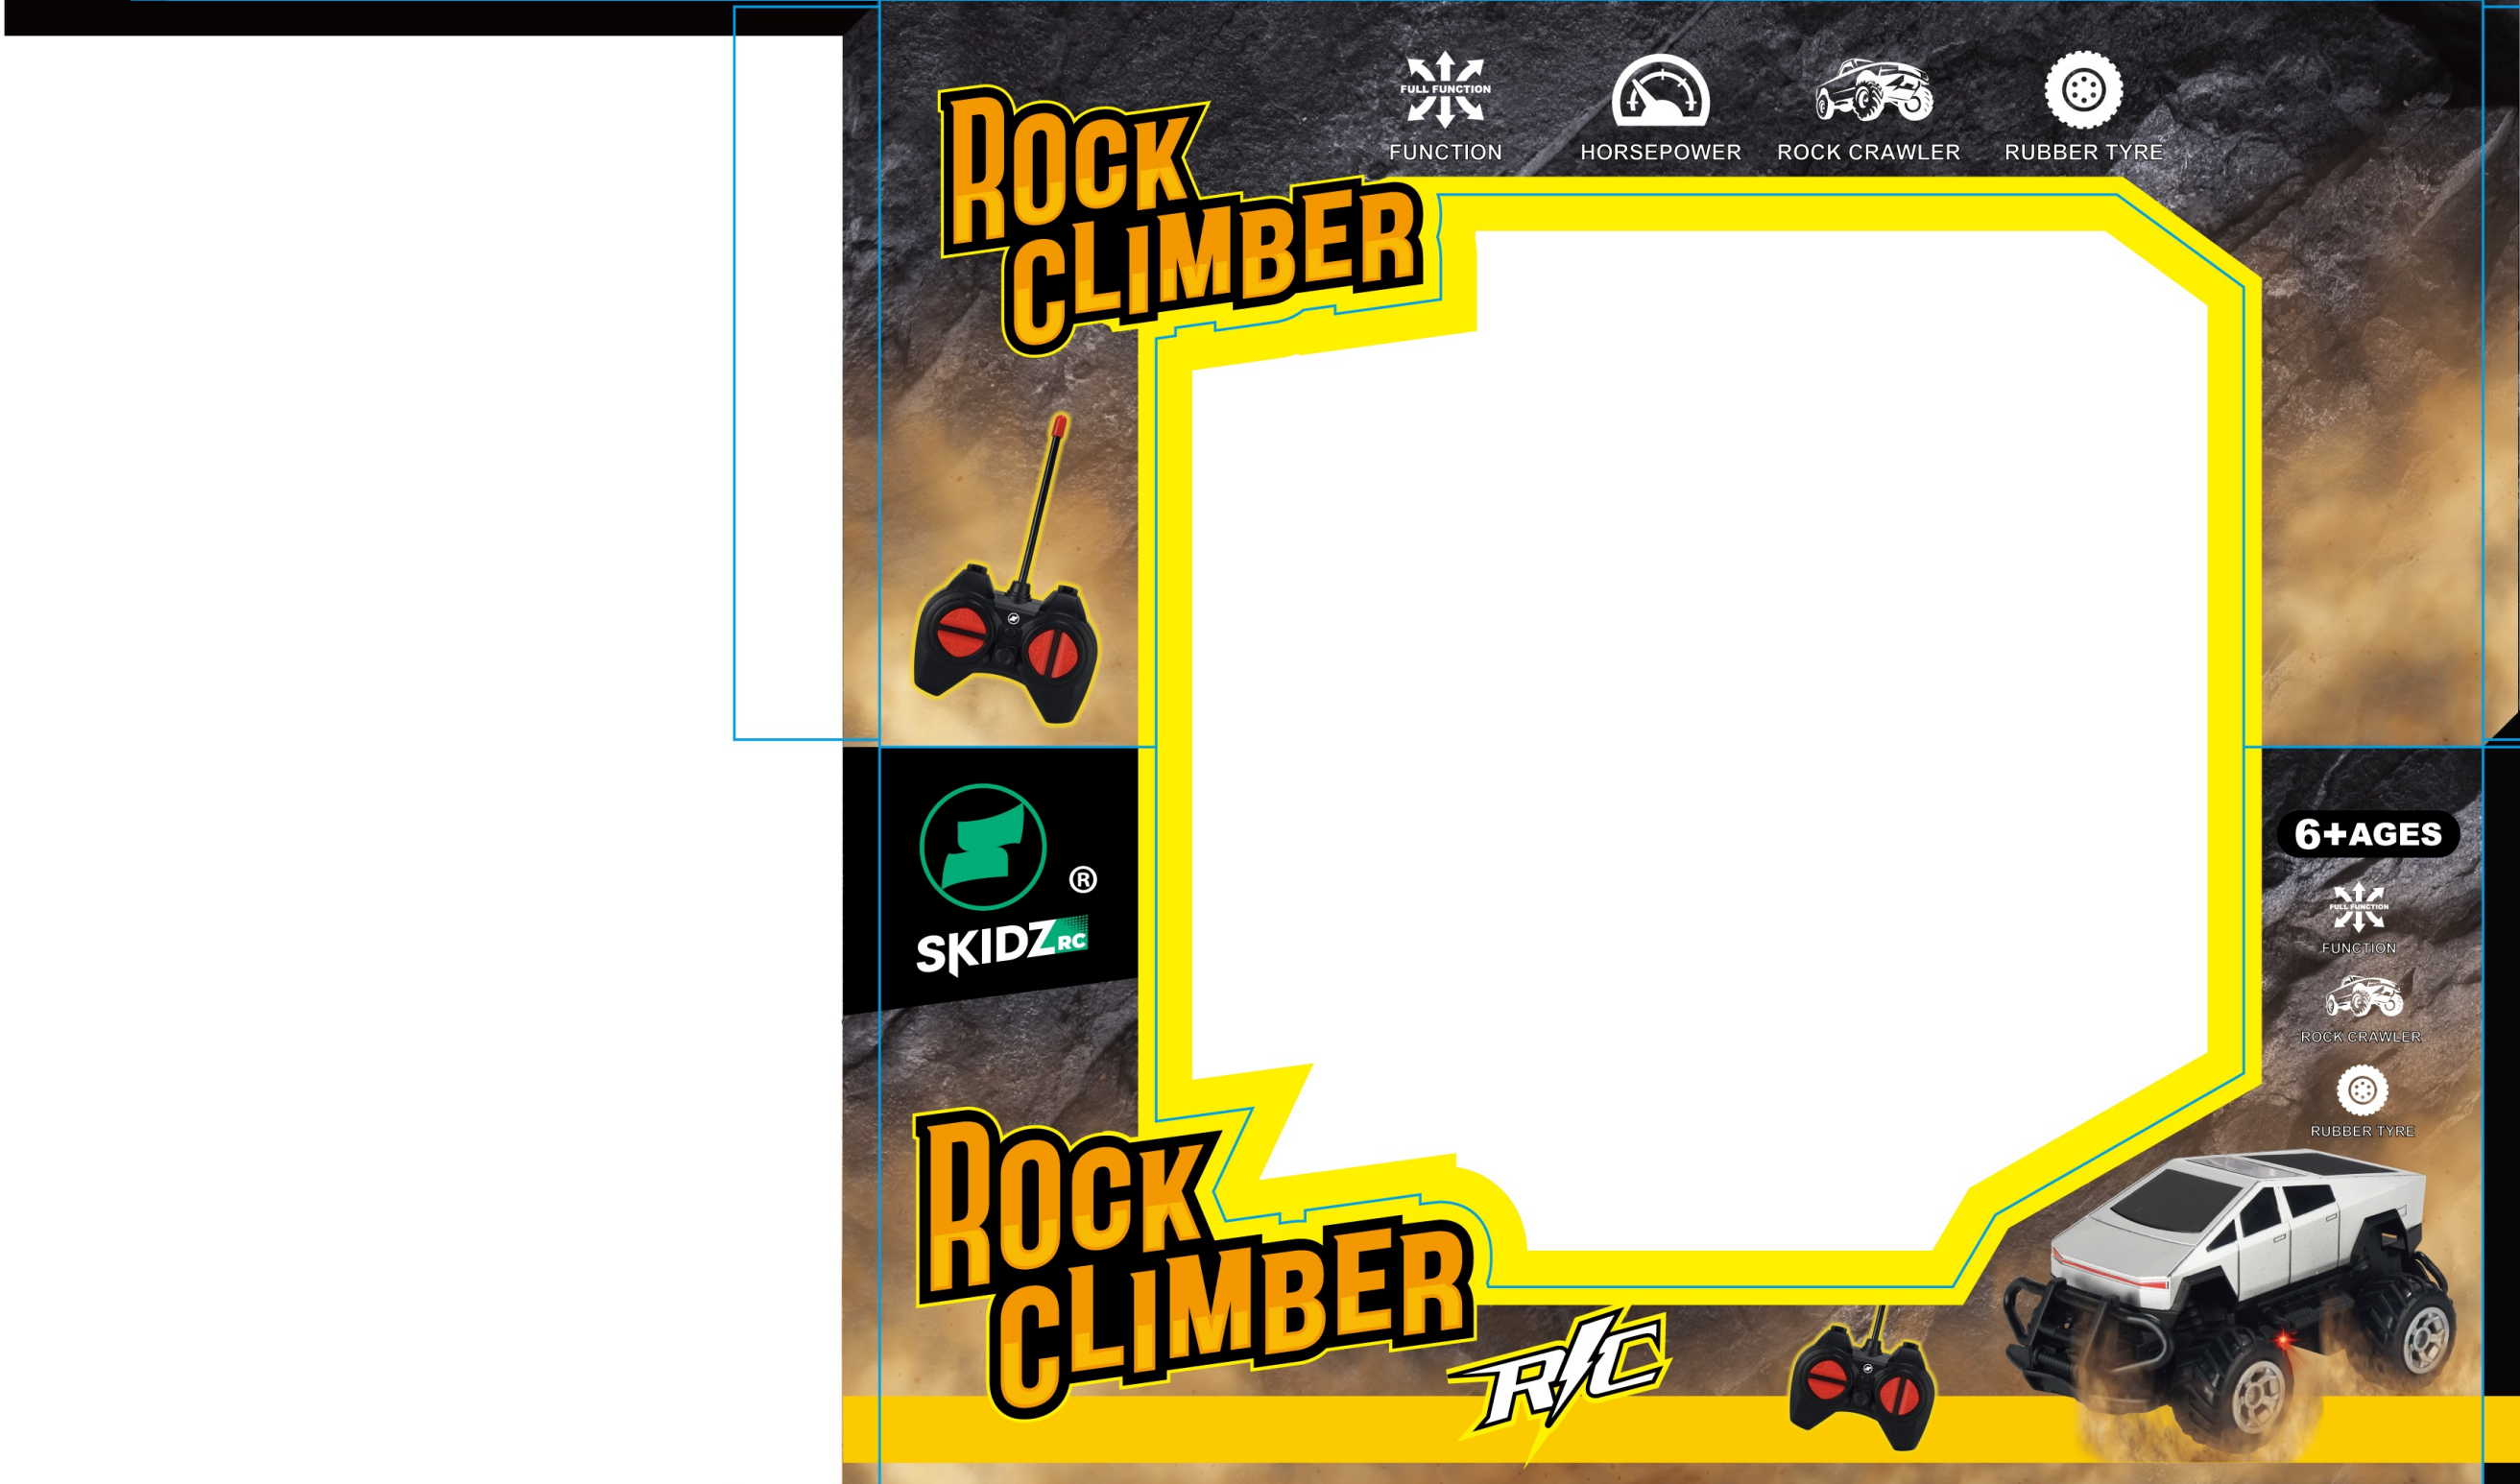

Uses 2 x 1.5V "AA" Size Batteries (Not Included)

Uses 2 x 1.5V "AA" Size Batteries (Not Included)

Uses 2 x 1.5V "AA" Size Batteries (Not Included)

Uses 2 x 1.5V "AA" Size Batteries (Not Included)

REMOTE CONTROL

Install 2 X 1.5V "AA" Batteries (Not Included)

Frequency:
27MHz

FCC ID: 2BVAEJLMT2651
No. MT2651 Tracking No. 040126

Missry Associates Inc. DBA Misco Toys
Edison, NJ 08817
Made in Shantou, China

WARNING:
CHOKING HAZARD - small parts,
Not for children under 3 years.

WARNING:
Ersttückungsgefahr - Kleinteile,
nicht für Kinder unter 3 Jahren.

WAARSCHUWING:
VERSTIKKINGSGEVAAR - Kleine onderdelen,
niet voor kinderen onder de 3 jaar.

OSTRZEŻENIE:
ZADŁAWIENIA - małe części,
nie dla dzieci poniżej 3 lat

ATTENTION:
RISQUE D'ÉTOUFFEMENT - Petites pièces,
pas pour les enfants de moins de 3 ans.

Warning! Not suitable for children under 36 months. Small parts/small balls. Choking hazard. Use under adult supervision. Remove all packaging before giving to children. Please retain this information for future reference. Non rechargeable batteries are not to be charged. Rechargeable batteries must be removed from the toy before being charged. Batteries should be replaced by an adult. Different types of batteries or new and used are not to be mixed. Batteries to be inserted with the correct polarity (+ and -). The supply terminals are not to be short-circuited. Do not dispose of batteries in fire, batteries may leak or explode. Ensure the compartment is shot securely before giving toy to the child. This symbol indicates that the product must not be disposed of with other household waste, due to the content of substances that may be hazardous to human health and the environment. It is the responsibility of the user to deliver the waste equipment to the appropriate collection point for recycling.

Vorsicht! 1. Nicht wiederaufladbare Batterien dürfen nicht aufgeladen werden. 2. Der Austausch der Batterien sollte von einem Erwachsenen durchgeführt werden. 3. Mischen Sie keine alten mit neuen Batterien. 4. Legen Sie die Batterien mit der richtigen Polarität ein. 5. Entfernen Sie die Batterien aus dem Spielzeug, wenn es nicht verwendet wird. 6. Mischen Sie keine Alkalibatterien, Standardbatterien (Kohle-Zink) oder wiederaufladbare Batterien.

Caution 1. Non-rechargeable batteries are not to be recharged. 2. Replacement of batteries should be done by an adult. 3. Do not mix old with new batteries. 4. Insert batteries with the correct polarity. 5. Remove batteries from toy when not in use. 6. Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.

3

CE

FC

UK CA