 


Multi-person intercom smart Bluetooth device

The overall style of the Bluetooth headset is as follows:

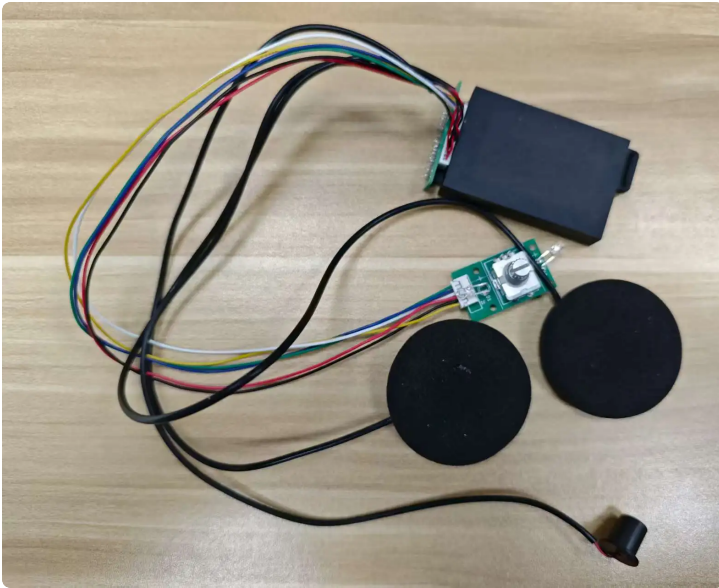

1. Button Description

(The core buttons are labeled according to the product image, mainly involving three key buttons.)



- **PLAY Button:** Mainly used for core operations such as power on/off, play/pause, answer/end call.

- **VOL+ Button:** Used to increase volume, switch to the next track, enter pairing mode, etc.
- **VOL- Button:** Used to decrease volume, switch to the previous track, activate voice assistant, etc.

2. Basic Operations

2.1 Power On


- **First Power On (Never connected to a phone):** Press and hold the PLAY button for 3 seconds. After hearing the "power on" prompt tone, it will continue to announce "pairing" and automatically enter pairing mode.
- **Non-First Power On (Already connected to a phone):** Press and hold the PLAY button for 3 seconds. After hearing the "power on" prompt tone, it will continue to announce "Wait for connection" and automatically enter waiting-for-connection mode.



2.2 Power Off

- **Operation:** While powered on, press and hold the PLAY button for 3 seconds. After hearing the "power off" prompt tone, the headset will turn off.

Press and hold the Play button for 3 seconds

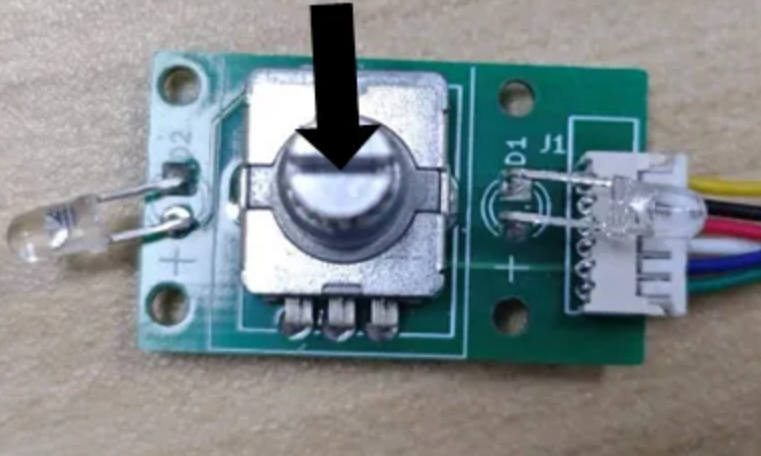

-

2.3 Bluetooth Pairing

- **First Pairing:** Automatically enters pairing mode after power on (prompts "pairing"). Search for and select this headset in your phone's Bluetooth list to complete the pairing process.
- **Re-enter Pairing Mode During Use:** While powered on and not in a call, press and hold the VOL+ button for 3 seconds. After hearing the "pairing" prompt tone, it enters pairing mode.


Rotate and hold the Volume + knob clockwise for 3 seconds.



-

2.4 Clear Pairing List

- Operation: In any mode, quickly triple-click the PLAY button to clear the list of paired devices (requires re-pairing upon subsequent power on).

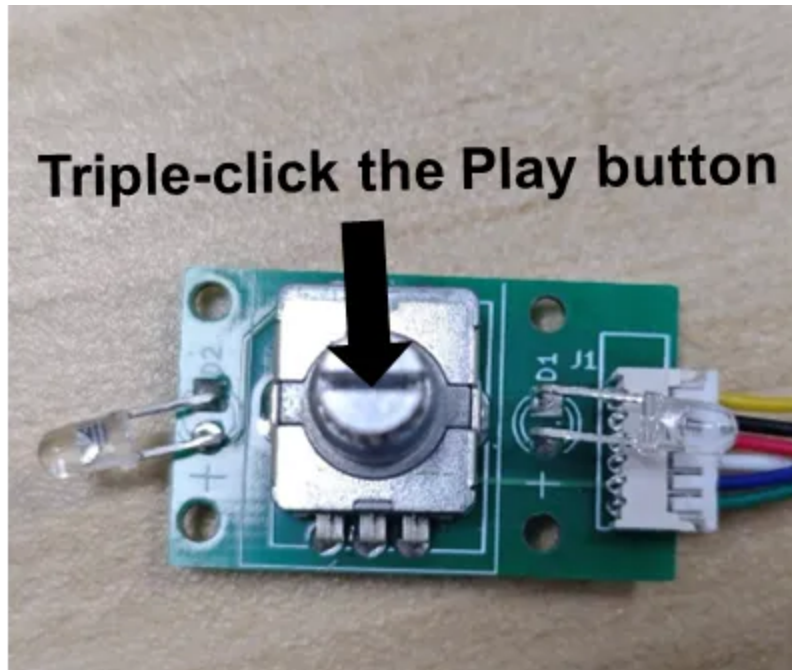


3. Music Playback Functions

3.1 Play / Pause Music

- **Play:** When not in a call and music is not playing, click the PLAY button to start playing music from the connected device.
- **Pause:** While music is playing, click the PLAY button to pause the music.

click the Play button

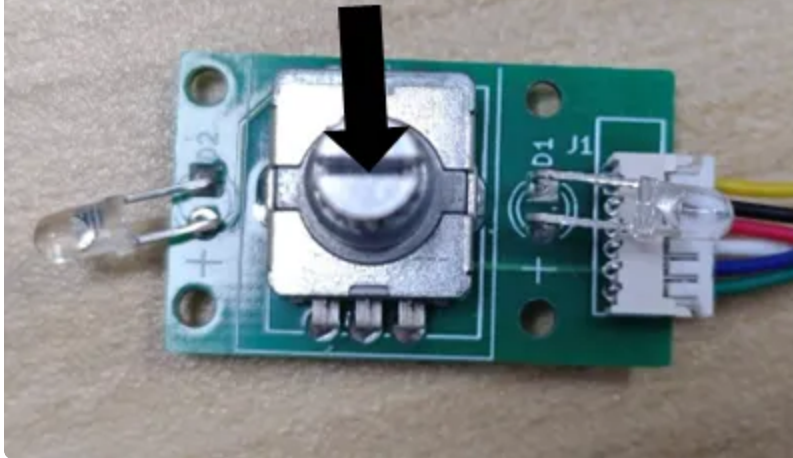


•

3.2 Switch Tracks

- Previous Track: While music is playing, double-click the VOL- button to switch to the previous song.
- Next Track: While music is playing, double-click the VOL+ button to switch to the next song.

**Rotate the Volume + knob
clockwise twice**

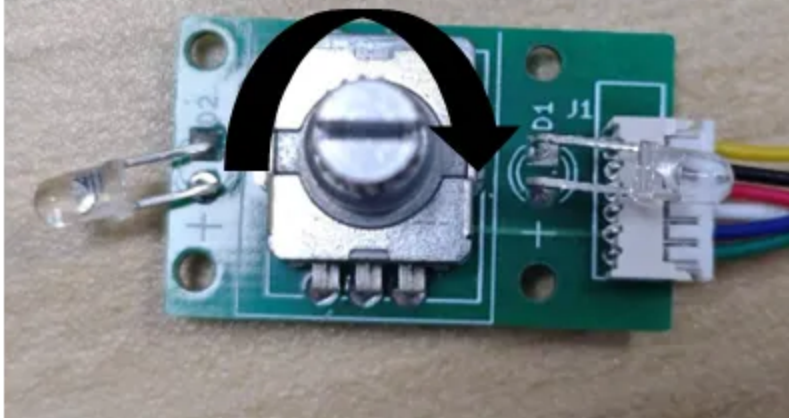

•

3.3 Adjust Music Volume

- Increase Volume: While music is playing, click the VOL+ button to increase the volume.
- Decrease Volume: While music is playing, click the VOL– button to decrease the volume.



3.4 Switch to Intercom Mode during Music Playback

- Operation: While music is playing, press and hold the PLAY button + VOL– button for 1 second. The music will pause and enter Intercom mode (prompts "Intercom mode"); music playback will automatically resume after the intercom is turned off.

4. Call Functions

4.1 Two–Party Call

- **Answer Incoming Call:** When there is an incoming call, click the PLAY button to answer the call.
- **Reject Incoming Call:** When there is an incoming call, press and hold the PLAY button for 1 second to reject the call.
- **End Call:** During a call, click the PLAY button to end the current call.
- **Redial Last Number:** When not in a call, double–click the PLAY button to automatically dial the last called number.
- **Adjust Call Volume:** During a call, click the VOL+ button to increase the volume, click

the VOL– button to decrease the volume.

- **Mute Toggle:** During a call, press and hold the VOL– button for 1 second. After hearing a "beep" prompt tone, it indicates successful activation/deactivation of mute (the other party cannot hear your voice when muted).

4.2 Three-Way Calling (New incoming call during an ongoing call)

- Hold current call and reject new incoming call: Press and hold the PLAY button for 1 second.
- Hold current call and answer new incoming call: Click the PLAY button (current call is put on hold, new incoming call is connected).
- End current call and answer new incoming call: Double-click the PLAY button (current call is ended, new incoming call is connected).

5. Intercom Function

5.1 Activate Intercom Mode

- Operation: While powered on and not in a call, press and hold the PLAY button + VOL– button for 1 second. After hearing the "Intercom mode" prompt tone, enter Intercom mode.



5.2 Answer Call during Intercom

- Operation: When receiving an incoming call during intercom, click the PLAY button. The intercom will automatically close and the call will be connected; the intercom will automatically resume after the call ends.

5.3 Intercom Microphone Switch

- Operation: In Intercom mode, press and hold the VOL– button for 1 second. After hearing a "beep" prompt tone, turn the intercom microphone on/off (the other party cannot hear your intercom voice when it is off).



5.4 Deactivate Intercom Mode

- Operation: In Intercom mode, press and hold the PLAY button + VOL– button for 1 second. After hearing the "Bluetooth mode" prompt tone, exit Intercom mode.

6. Voice Assistant Function

6.1 Activate Voice Assistant

- Operation: When not in a call, quickly triple-click the VOL– button to wake up the phone's voice assistant. (The availability of the button-wake voice assistant function

depends on whether the user's mobile phone system supports this feature.)



6.2 Deactivate Voice Assistant

- Operation: When the voice assistant is active, click the PLAY button to deactivate the voice assistant.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.