 


尺寸148*210mm；封面4P:105克哑粉、内页20P:105克哑粉
实际有图案印刷内容23P，设定对应封面背面那1P为空白页
印刷单黑
骑马钉装订

BYTEFREE



55" Outdoor TV
User's Manual

Note: Product appearance and illustrations in this user manual are for reference only and may vary by model.

Content

General Information	01-03
Accessories	04
TV Specification	05
Installation	05-06
Overview	07
Remote Control	08
General Description	09
Initial Setup	10-17
TV Source Setting	17
Accounts & Sign-In	18
Help	19
Warning	20

General Information

To avoid damaging the television set please observe the following safety instructions during setup and use.

Cleaning the television set	Before cleaning, disconnect the television set. Use only a soft damp cloth or a special cleaning product for flat-screens.
LED Display	Too much pressure on the screen can damage the television set.
Heat/Damp/Humidity	The television set should not be exposed to high temperatures (radiators, open fire). The television set should not be used in areas with high humidity.
Condensation	If moved from a cool area to one with a higher temperature, the television set should be left for at least an hour before plugging it in. A rapid change of temperature can lead to the formation of condensation in the television set itself. This can lead to damage if the television set is in use.
Air Circulation	To prevent overheating of the television set the, ventilation slots at the rear should always be clear.
Small Objects	It is important to ensure that no small objects or liquids enter the television set. They can cause damage or even fire.
Liquids/Candles	Do not place any liquid-containing containers or candles on the television set.
Crushing	Take care to avoid crushing fingers or other objects when turning the television set in any direction.
Electric Supply	Use the television set only with the voltage indicated in the specifications. Ensure that there is easy access to the plug and that the television set can always be disconnected from the electricity supply. Do not disconnect the television set by pulling the power cable. Always take hold of the plug. The power cable must not be kinked or placed over sharp edges.
Moving the Television Set	When moving the television set, hold only the casing.
Repairs/Accessories	Repairs and servicing must be undertaken only by authorised and trained personnel.
Battery Disposal	In accordance with battery regulations, batteries must be disposed of only in designated recycling containers.



In extreme weather (storms, lightning) and long inactivity periods (going on holiday) disconnect the TV set from the mains. The mains plug is used to disconnect TV set from the mains and therefore it must remain readily operable.

If the TV set is not disconnected electrically from the mains, the device will still draw power for all situations even if the TV is in standby mode or switched off.

General Information

IMPORTANT – Please read these instructions fully before installing or operating.

WARNING: Never let people (including children) with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge use electrical devices unsupervised.

- The TV set is intended for outdoor and similar general use and may also be used in public places.
- It is prohibited to enclose it in a sealed box or embed it in a wall.
- The ventilation should not be impeded by covering or blocking the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- Do not place the TV/furniture, etc. on the power cord.
- A damaged power cord/plug can cause fire or give you an electric shock.
- Handle the power cord by the plug; do not unplug the TV by pulling the power cord.
- Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock.
- Never make a knot in the power cord or tie it with other cords.
- When the TV set is damaged, it must be replaced only by qualified personnel.

WARNING

Never place a television set in unstable or inclined locations.

A television set may fall, causing serious personal injury or death.

Many injuries, particularly to children, can be avoided by taking simple precautions such as: Educating children about the dangers of climbing on furniture to reach the television set or its controls.

WALL MOUNTING WARNINGS

Read the instructions before mounting your TV on the wall.

 
Mounting Brackets are not supplied with TV.

Do not install the TV on a ceiling or on an inclined wall.

Use the specified wall mounting screws and other accessories.

Tighten the wall mounting screws firmly to prevent the TV from falling.

Do not over-tighten the screws.

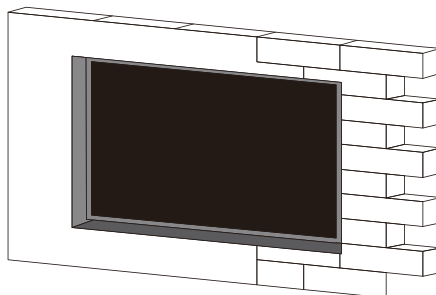

General Information

 
 
 
 
 
 
 
WARNING

Please install the television in a well-ventilated area.

It is prohibited to enclose it in a sealed box or embed it in a wall.


Do not rinse the TV from the bottom upwards as this may damage the TV.

Avoid using the TV in direct sunlight.

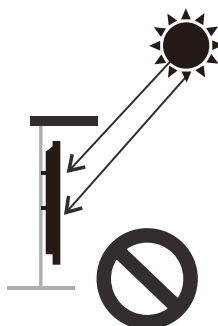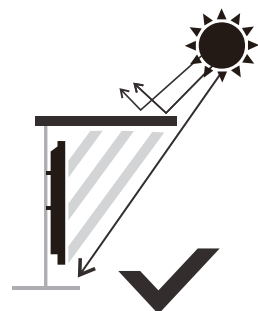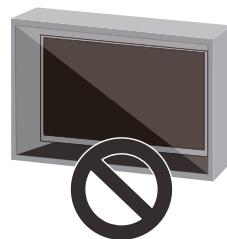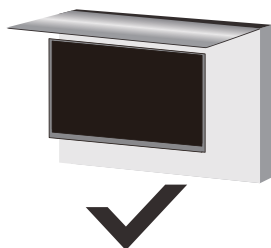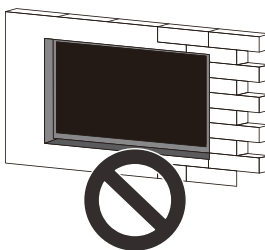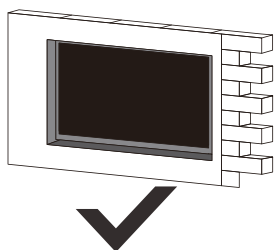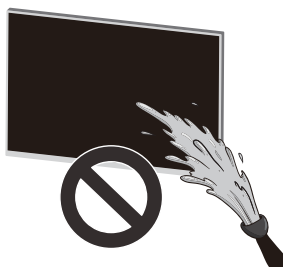


Accessories

 
Please make sure the following items are included in the TV package.
If any items are missing, please contact us.




Television

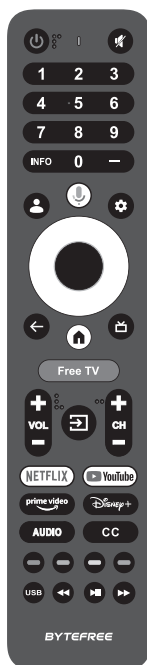 


Remote Control

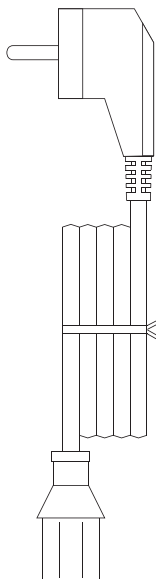 


Power Cord

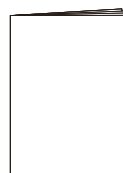 

User's Manual

 

Batteries (AAA x 2)

 

Screws BM8X24MM & Gasket
(Matched with Fixed Wall Mount)



TV Specification


Screen size	55"
Display Type	TFT LED
Resolution	3840 X 2160
Aspect Ratio	16:9
Power Supply:	AC100-240V 50/60Hz
Audio Output	L/R 15W X 2
Dimensions	48.98×28.60×3.45 inch
Operating Temperature	0°C to 50°C (32° to 122°F)

Note:

Design and specification modification maybe made at any time without prior notice, all data and dimensions are approximations.

Installation

 Fixed Wall Mount

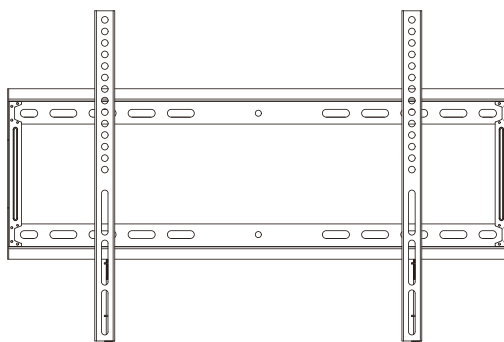

Warning - Please read before installation (Mounting Brackets are not supplied with TV)

Please thoroughly read this manual before attempting installation

 
This mounting method is only suitable for 43"-75" outdoor TVs.

We advise 2 people to install the screen due to its heavy weight.


Please be sure the mounting surface is strong enough to hold the weight of the screen.

Installation


Step 1: Mount the Brackets to the Wall
Fix the horizontal brackets to the wall with screws.

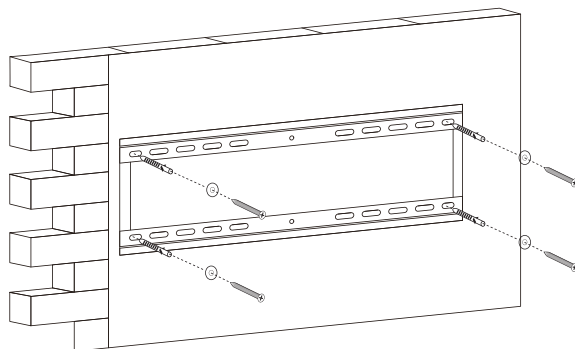

 Step 2: Mount the Brackets to the TV
Fix the vertical brackets on the back of the TV with screws (M8).

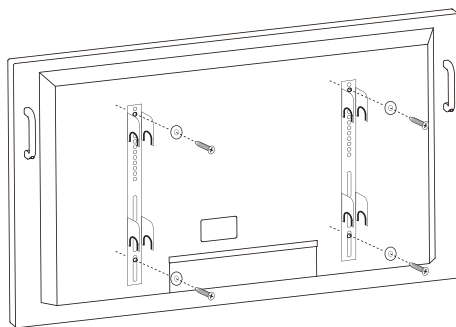

 
Step 3: Mount the TV onto the Wall Brackets
Hang the TV (with the attached brackets) onto the wall bracket.

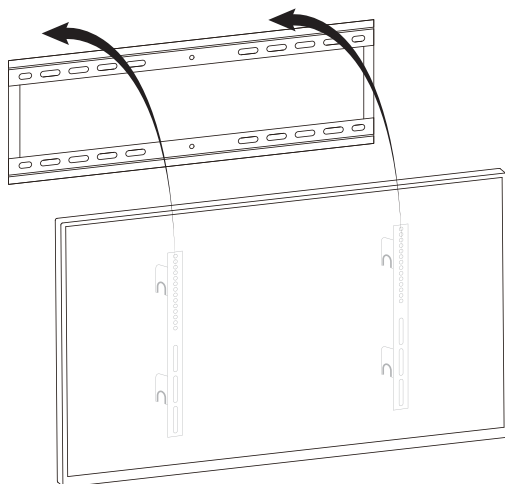


VESA Standard
55": 600×400 mm
400×200 mm

Overview

 - ① Remote Control Sensor
- ② Power Indicator
- ③ Speaker

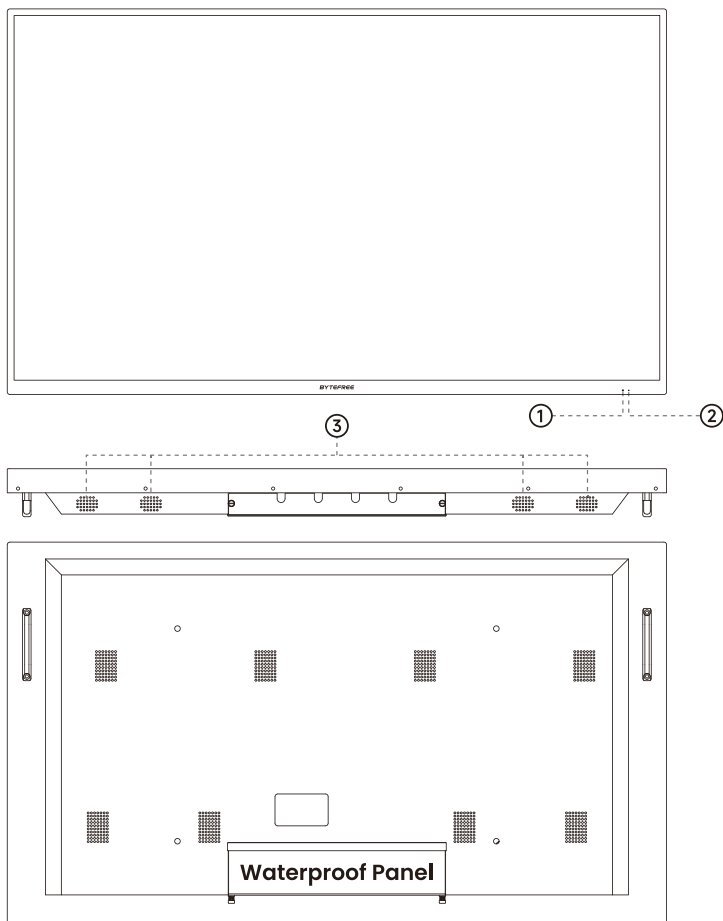

 
Remove the waterproof panel on the back of the TV to see all the ports.

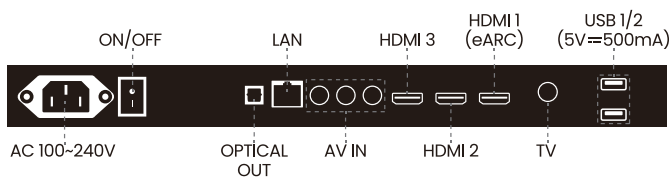

- 1. RJ45: Ethernet connection.
- 2. OPTICAL OUT: Digital audio output.
- 3. TV: Connected to external antenna to receive ATV/DTV program in ATV/DTV mode.
- 4. HDMI1/2/3: Connecting for HDMI signal.
- 5. USB: USB input.
- 6. EARPHONE OUT: Connecting for headphone.

Remote Control

 - ① Switches the TV between on and standby mode.
- ② Indicator light
- ③ Mute or restore your TV sound.
- ④ **INFO:**
Displays the present channel information such as the current time and channel name.
- ⑤ **Google Assistant:**
Talk to Google to control your TV using your voice.
- ⑥ **Profiles:** Switch between profiles.
- ⑦ -: Enter "-" for Sub-channel symbol.
- ⑧ **Setting:**
In the HOME page, this button is "Dashboard" function. On the Live TV, this button is "Menu" function.
- ⑨ **Navigation buttons:** Cursor UP/ LEFT/ RIGHT/ DOWN.
- ⑩ **Back:** Press to move back through menus.
- ⑪ **Live Guide:** Open the Live TV EPG.
- ⑫ **Free TV:** Press it to enter Free TV.
- ⑬ **Inputs:** Display/Select signal source options .
- ⑭ **NETFLIX:**
Connects to NETFLIX for viewing online TV shows and films. (internet connection required).
- ⑮ **YouTube:**
Connects to YouTube (internet connection required).
- ⑯ **Prime video:**
Connects to Prime video (internet connection required)
- ⑰ **Disney+ :**
Connects to Disney+ (internet connection required, some regions may not support it).
- ⑱ **Audio:**
Displays the Audio Language list and select an audio language or audio format if available (only applicable when the TV programme has this feature).
- ⑲ **CC:** Closed Caption.
- ⑳ **USB:** Press to enter Multimedia Player.
- ㉑ ⏮ : Play the last programme.
- ㉒ ⏸ : Play/ Pause/Stop the programme.
- ㉓ ⏭ : Play the next programme.

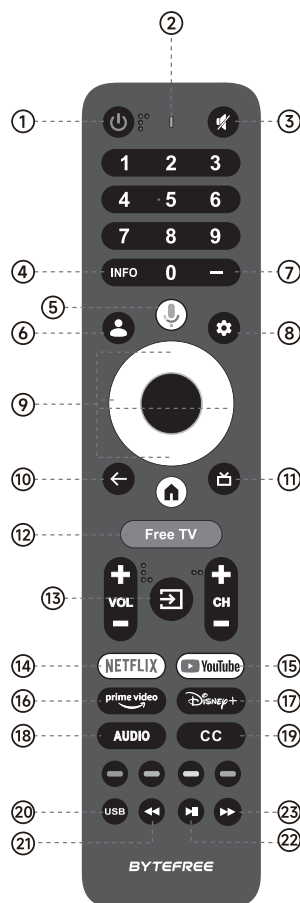

* Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

 
* Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, Google Home, YouTube Music and other marks are trademarks of Google LLC.

General Description


Installing Batteries in the Remote Control

Installing Batteries


1. Slide open the battery cover on the back of the remote control by pushing the latch in the direction indicated.



 
2. Insert two AAA batteries (1.5 V), observing the correct polarity (+/-).

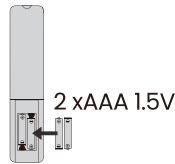

 
3. Close the battery cover until it clicks into place.



 Before outdoor use, place the remote control in the waterproof pouch.



Remote Control Usage

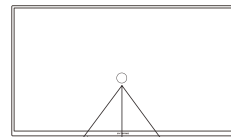 

30° 30°



- Point the remote control at the TV's remote sensor and use it within 7 meters.
- Recommended operating angle: within 30° of the front of the TV.

Notes

1. Under normal usage, a set of batteries can last up to one year.
2. If the remote control will not be used for an extended period, remove the batteries to prevent damage from leakage.
3. Do not mix old and new batteries or different types of batteries.
4. Do not dispose of batteries in fire or water.
5. Batteries should not be exposed to excessive heat such as direct sunlight, fire, or similar sources.

External Connection

Antenna Connection

Antenna input impedance of this unit is 75 ohm.

 
Connect a 75 ohm VHF/UHF coaxial cable directly to the ANT IN jack.

If your antenna uses a 300 ohm twin-lead (flat) cable, use a 300 ohm/ 75 ohm adapter (balun).


Refer to the diagrams below.

Antennas with ohm Twin-Lead (Flat) Cable

Use a 75 ohm - 300 ohm adapter (balun)

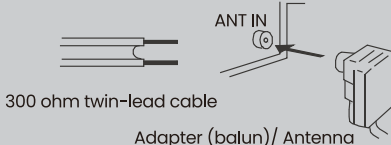

Antennas with 75 ohm Coaxial Cable

 

Initial Setup

 
1. Initial Setup

For the first initial setup, on-screen setup wizard will guide you through setting up your TV. Please follow the guide to setup your TV correctly.

1.1 Pairing Bluetooth Remote

1. Press 'BACK' (⬅️) and 'Home' (🏠) simultaneously on remote control to enter the Bluetooth pairing mode.

The indicator light on remote control will flash when starting the pairing mode.

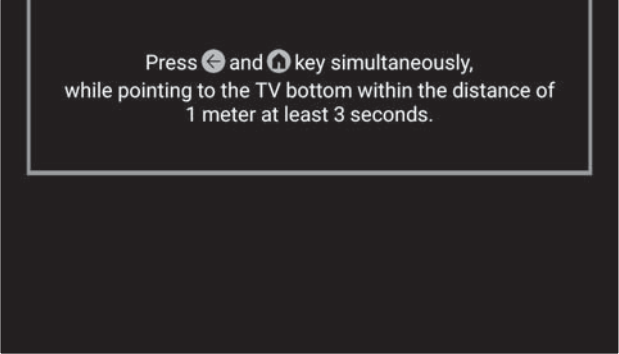

Press ⬅️ and 🏠 key simultaneously,
while pointing to the TV bottom within the distance of
1 meter at least 3 seconds.

1.2 Language select

Use ▲/▼ buttons to select system languages, then press 【OK】 to confirm.

Welcome

English (United States)

Afrikaans

አማርኛ

العربية (الإمارات العربية المتحدة)

العربية

العربية (المملكة العربية السعودية)

1.3 Region or Country select

Use ▲/▼ buttons to select your region or country, then press 【OK】 to confirm.

Select your region or
country

South Korea

United States

Canada

Mexico

Dominican Republic

Initial Setup

 
1.4 Set up with your phone

Follow the instructions in the Google Home app.

Note: You may also choose “Manual setup (with TV remote)”.

Not all countries support the Google Home app, and setup codes vary on different TVs.

Please refer to the actual software.

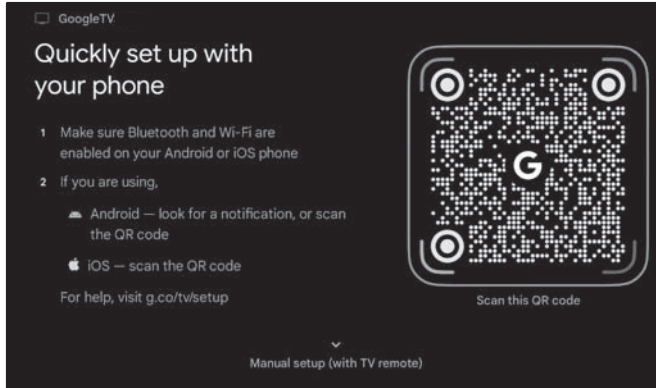


1.5 Select TV mode (Home/Retail)

Please be sure in this step, select “**Home**” if you are using this TV at home.

Make sure to confirm once you have selected “**Home**”.

 
Note: This can only be chosen via boot up process.

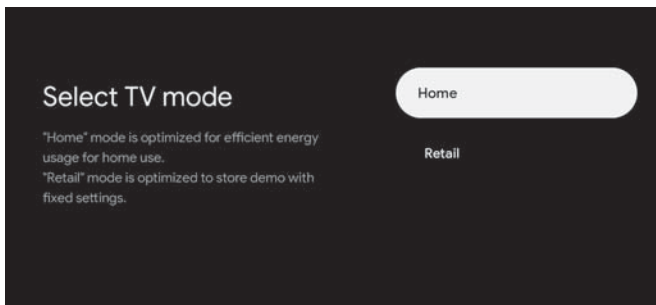

1.6 Configure the WIFI network

Press **▲**/**▼** buttons to select Wi-Fi you wish to connect, enter the password, and then confirm to connect.

 
If you select “**Skip**”, it could be performed in homepage or settings menu.

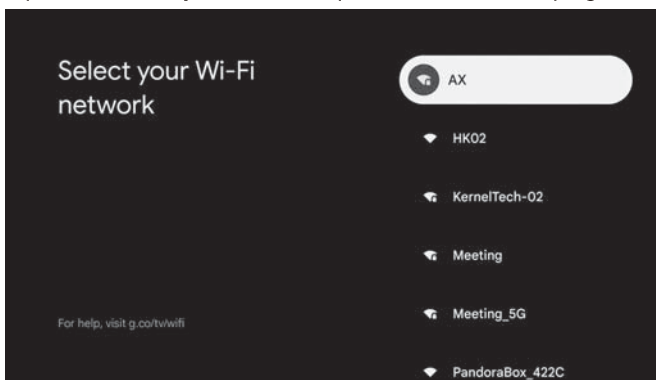

Initial Setup


1.7 Terms of Service

 By accepting the Terms of Service to improve the product experience, select “Accept” to proceed with this condition.

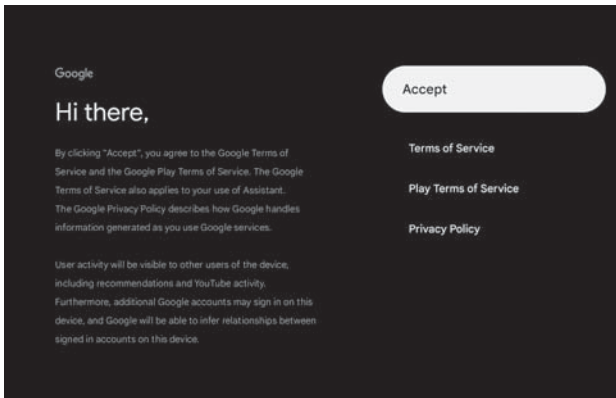

1.8 Google Services

 
To learn more about a service, select it below. Data will be used according to Google’s Privacy Policy. Select Accept to confirm.

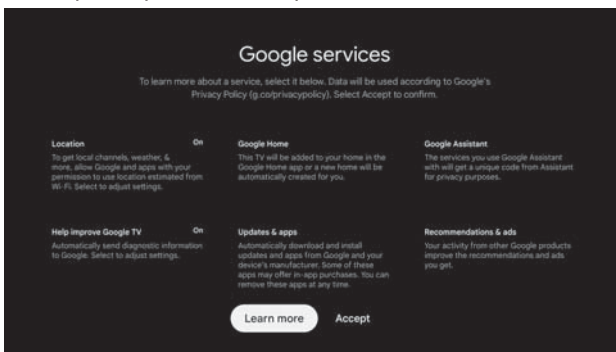

1.9 Tuner mode Setting

Select Antenna/Cable to scan TV channel.

 
If you select “**Next step**”, the channel scan could be performed in menu.

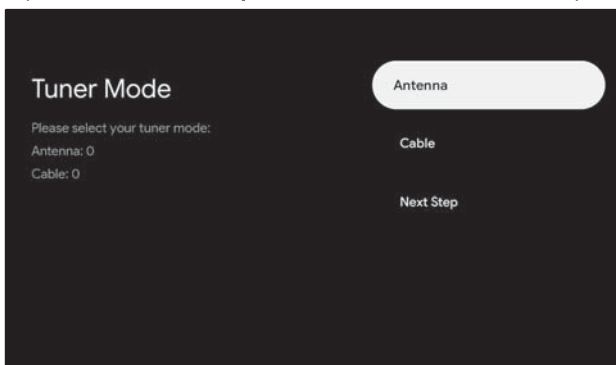

Initial Setup


1.10 Play Auto Installs

 Select to install or uninstall recommended apps by using this process.

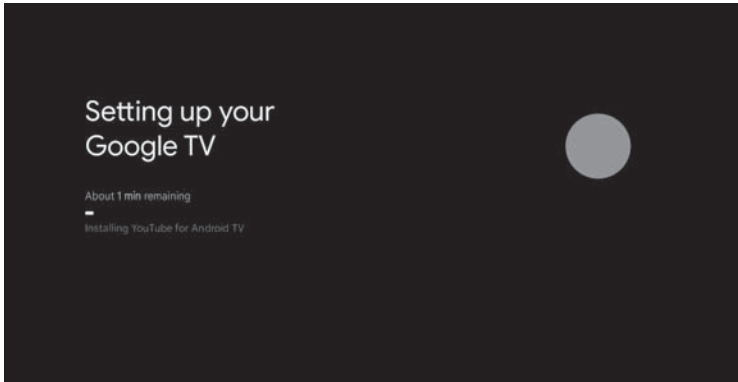

1.11 Get the most out of your Google TV™

 You may set up additional optional features for a more personalised experience. Select **"Go to Google TV"** to go to the home page.

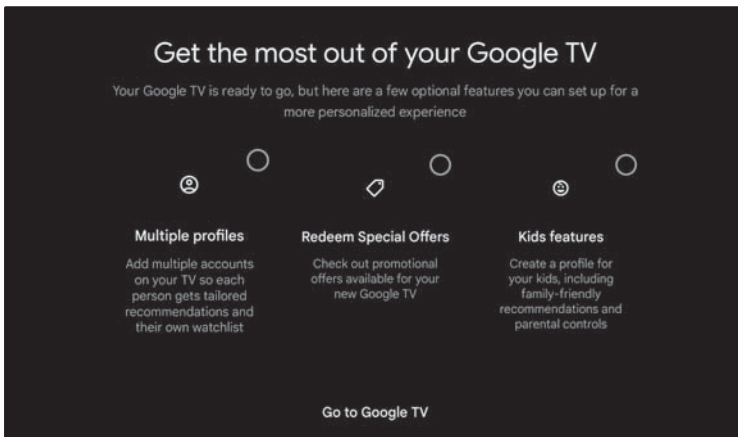

Initial Setup

2. HOME

Once you have completed initial setup, you will now enter the home by screen or press  button to display the homepage.



* Some countries home screen UI may display different from above image, please refer to the product for details.

① For you

Browse 400,000+ movies and TV episodes from across your streaming services — in one place, and organized by the genres and topics that interest you the most.

② Movies & ③ Shows

Watch your favorite movies and shows or discover new favorites all in one place.

④ Apps

Download and access your favorite apps to discover movies, shows, games, and more.

⑤ Library

Keep all your shows and movies in a single watchlist. Add from your TV, phone, or browser – no matter which app its on.

⑥ Search

Thousands of movies and shows at the sound of your voice. Ask Google to quickly find what you want to watch.

⑦ Settings

 
Adjust various settings on your TV.

Initial Setup

3. Settings

Allows to set various performance of your TV.


1. Press **</>** button to select “Settings” which is in the upper right corner of the screen.
2. Press **▲/▼** button to select the option which you want to adjust in the Settings menu.
3. Press **【OK】** to enter.

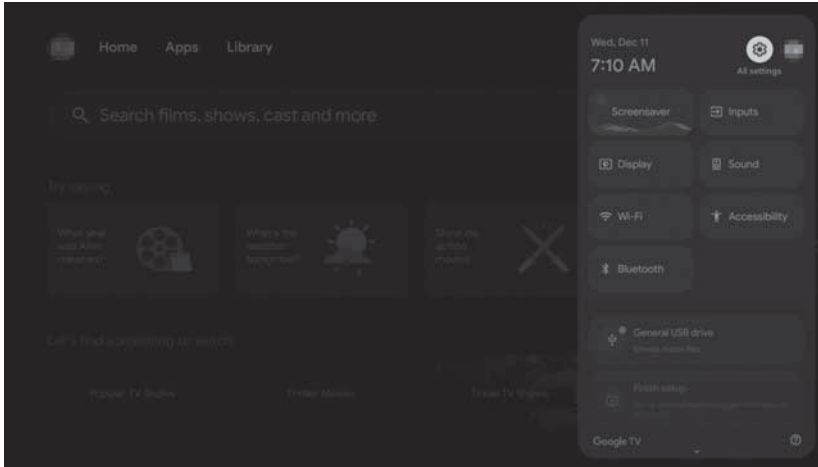

Channel and inputs

Display the scan sub-menu based on different channel installation modes.

 1. Press **▲/▼** button to select “**Channel and Inputs**”.
2. Press **【OK】** to enter “**Channels**”, then press **▲/▼** choose Analog, Antenna, Cable etc to scan the channels.
3. Press **▲/▼** button to select “**Inputs**”, press **【OK】** to enter “**Inputs**”, then press **▲/▼** choose HDMI1, HDMI2, HDMI3, Composite etc.

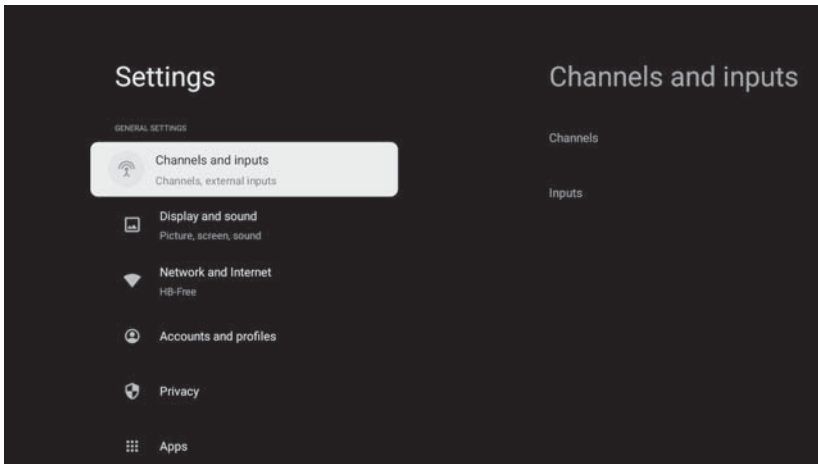


Initial Setup

Network and Internet

Adjust all network setting and check connection if you have connection problems.

1. Press **▲** / **▼** button to select “**Network and Internet**” in the settings menu.

 
2. Press **▲** / **▼** button to select: Wi-Fi/Add new network/Scanning always available.

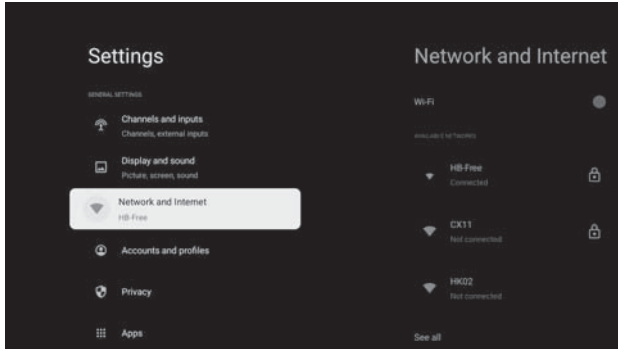

System

1. Press **▲** / **▼** button select the options of Ambient Screensaver, Power&Energy, About, Date & Time, Language, Keyboard, Storage, Cast, System sounds, Restart.

 2. Press **【OK】** to jump to the corresponding sub-option.

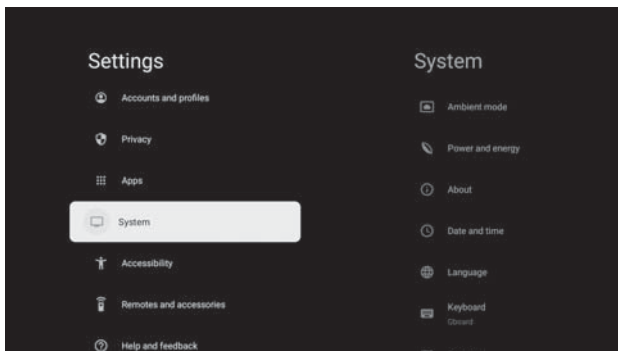


About

1. Press **▲** / **▼** button to check additional information such as System update, Device name, Restart, Status, and more.

2. Press **⬅** button to return to the previous menu.

 
Press **⬅** button to exit the menu.

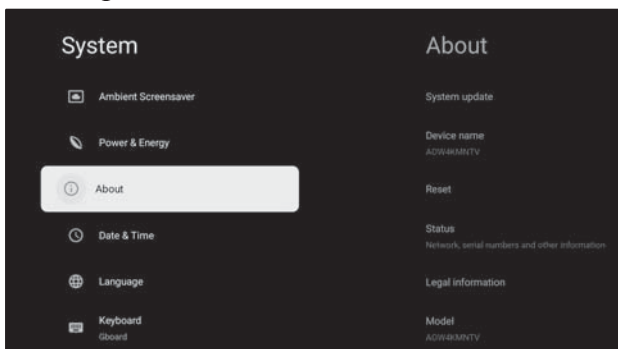

Initial Setup

Factory reset

 If Factory reset is selected, it will erase all data from your device's internal storage, including: your Google Account, system and app data and settings, and downloaded apps.

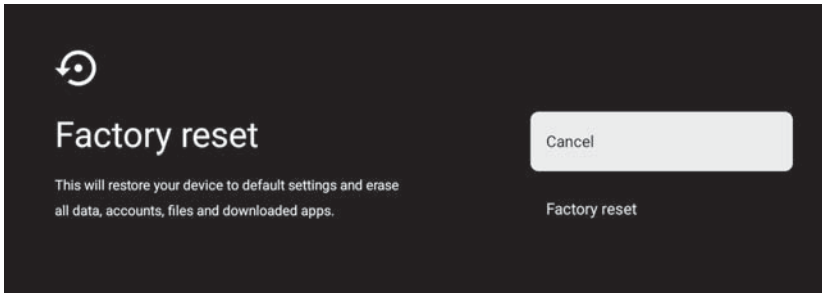


TV Source Setting

4.TV Source Setting

To enter TV source in Homepage:

 1. Press  button or Select "Live TV" on Homepage.

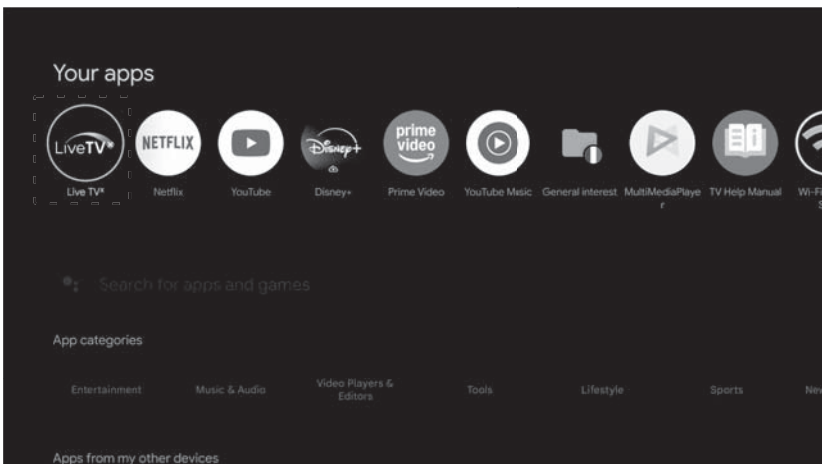


* Some countries Live TV icon may display different from above image, please refer to the product for details.


Accounts & Sign-in

5. Accounts & Sign-in

 
To have access and to download applications, you must sign in with a Google Account.

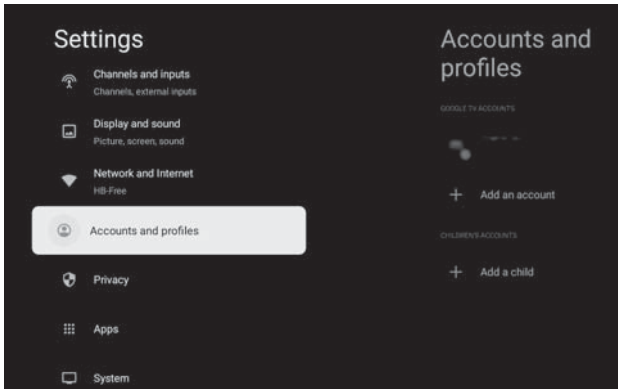

Sign in or create a new account.

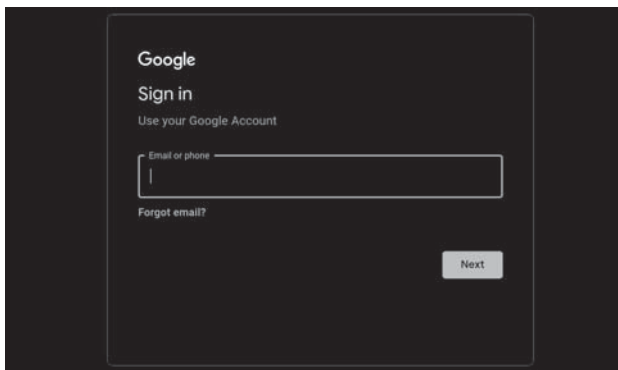 

 Once you have signed in, you will be brought to the below page, scroll through the list of applications available for download or go to the search button, and search via entering text or talk to Google to search for apps using your voice.

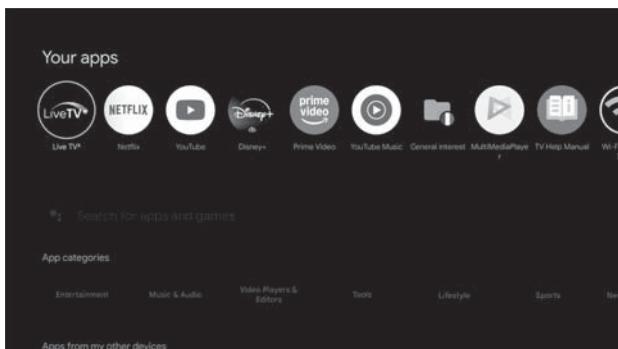

* The above pictures are for reference only, please refer to the product for details.

Help

No power	• Check if the AC cord of TV is plugged in or not. If there's still no power, please disconnect the plug , and reconnect to the socket after 60 seconds. Turn the power back on .
Signal not received properly	• Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult instruction of vernier regulation, or adjust the direction of the external antenna. • If you use an indoor antenna, signal reception may be more difficult under certain circumstances. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna.
No picture	• Check if the antenna at the back of the TV is connected properly. • View other channels to see if the problem still occurs.
Video appears with no audio	• Try increasing the volume. • Check if the TV's sound is on mute or not.
Audio is present, but video does not appear or is discolored	• Try adjusting the contrast and brightness.
Static noise affects video and audio quality	• Check if the antenna at the back of the TV is connected properly.
Broken lines on screen	• Electrical appliances such as hair dryers or vacuums etc. may be interfering with your TV Set. switch these appliances off.
Remote doesn't work	• Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the TV. check if the placement of the batteries is correct, or try using new batteries with the remote control. • The TV Will go into standby mode if it receives no response in a few minutes.
No video (PC mode)	• Please check if the cable is connected to the HDMI Port correctly, or if the cable is bent in some places.
Screen is too bright or dark (PC Mode)	• Adjust the brightness or contrast in the main menu.
No response from the PC	• Check if the PC's display resolution is set to a compatible resolution for the TV.
Lines appearing when a device is connected to the RCA port	• Make sure you are using a cable in good quality.
Problems are unresolved	• Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist , do not attempt to repair the TV by yourself. Kindly contact the service center.

Do not leave your Tv displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period of time, doing so will damage the display and may cause image burn-in.

Warning

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death.

Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

The plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

BYTEFREE