

75mm

70mm

User Manual

Package List

● Earbuds *1

● User Manual *1

● Charging Case *1

● Type-C Charging Cable *1

Earbuds

Charging Case

User Manual

Charging Cable

Parameters

Product Name	Wireless Clip-on Earphones
Product Model	H001
Battery Capacity	300mAh (Charging Case) 40mAh*2 (Earbuds)
Earbuds Battery Life	About 20 Hours
Music Playback Time	About 5 Hours
Talk Time	About 3.5 Hours
Charging Port	Type-C
Charging time	≤ 2 Hours
Input	5V=300mA
Speaker Size	40mm
BT Version	BT V5.4
Frequency Band	2.402MHz ~ 2.480MHz
Max. Signal Transmission	≤ 400m

Introduction

NFB Touch Area

Leakage Hole

Microphone

Charging Compartment Indicator Light

Type-C Charging Port

Function

Function Name	Operation Mode and Status
Connection & Pairing	Open the charging case and take out the earbuds. They will automatically connect to each other (pairing mode). When the earbuds are fully charged, they will automatically connect to each other (pairing mode). When the earbuds are fully charged, they will automatically connect to each other (pairing mode).
Call Answering	When a call comes in, double-tap the left or right earbud.
Reject Calls	When a call comes in, triple-tap the left or right earbud.
End call	When a call is being ended, double-tap the left or right earbud to cancel.
Music Control	During music playback, double-tap the right earbud to pause. Repeat the action to resume playback.
Previous Song	During music playback, triple-tap the left earbud (accompanied by a "Next" tone).
Next Song	During music playback, triple-tap the right earbud (accompanied by a "Next" tone).
Automatic Startup	When the charging case lid and remove the earbuds, they will power on automatically.

Function

Function Name	Operation Mode and Status
Manual Startup	When powered off, press and hold the left and right earbuds for about 5 seconds until you hear the "Power On" prompt tone.
Automatic Shutdown	Place the earbuds back into the charging case. They will disconnect and enter charging mode.
Automatic Reconnection	When turning on the earbuds will body activity reconnect to the last paired device.
Battery Display	When connected to an iOS device, the earbud battery level will be displayed.
Volume Up	Volume up: Tap the right earbud once to increase the volume by one step, and the maximum volume will be accompanied by a prompt sound "Full".
Volume Down	Volume down: Tap the left earbud once to decrease the volume by one step, and the minimum volume will be accompanied by a prompt sound "Full".
Voice Assistant	During music playback, double-tap the left earbud to activate the voice assistant. During the voice assistant operation, the earbuds will automatically connect to the voice assistant. During the voice assistant operation, the earbuds will automatically connect to the voice assistant.
Call Pairing Records	In the powered-on pairing state, tap both the left and right earbuds simultaneously for 5 seconds (accompanied by a "Pairing" prompt sound). When the earbuds are fully charged, they will automatically connect to each other (pairing mode).
Reset to Factory Settings (Reset Pairing)	If the left and right earbuds lose their Bluetooth connection and cannot connect with each other, tap each earbud 5 times while powered on. This will reset the earbuds to factory settings. After the reset, the earbuds will be in pairing mode and can be paired with a device again.

LED Display Status

Function Name	LED Display Status
Pairing	Light flashing slowly
Standby	No light
Talking	No light
Music	No light
Charging finished	LED light off
Charging	LED on
Low Voltage Warning	When the battery is low, the earbuds will announce "Low Battery" with a prompt tone. The earbuds will automatically enter a low power mode, and the white LED indicator will flash about once every 5 seconds.

Safety Guidelines

1. Do not disassemble or modify the equipment for any reason, as it may cause the earbuds to malfunction or be damaged.

2. Do not let the device come into contact with liquid and get wet, otherwise it may cause serious damage to the device.

3. Do not place the device in an environment where the temperature is too low or too high. Below 0°C or above 40°C.

4. Do not use the equipment during thunderstorm weather, as thunderstorms can cause abnormal equipment operation, signal interruption, and other phenomena.

Danger Warning

⚠ Earbuds contain batteries and should not be exposed to environments such as sunlight, fire, or similar overheating.

⚠ The earbuds contain batteries, and there is a risk of explosion if the batteries are not replaced properly. Only batteries of the same or equivalent type can be used for replacement.

⚠ When children use this product, an adult must supervise from the side.

⚠ Do not place this product in environments with corrosive substances or strong magnetic fields.

⚠ Do not collide, throw, or puncture the product to avoid falling, squeezing, or bending the product.

Disposal of electrical and electronic equipment

The crossed-out garbage can means that you are legally obliged to collect these devices separately from unsorted municipal waste. Disposal in thermal waste bins or other bins is prohibited. If the product's construction or accessories that are not permanently installed, they must be removed before disposal and disposed of separately as batteries.

Possibilities of returning old appliances

Owners of old devices can hand them in within the framework of the options set up and available by public waste disposal authorities for returning or collecting old devices to ensure that the old devices are properly disposed of.

Data protection

We would like to point out to all end users of waste electrical and electronic equipment that they are responsible for deleting personal data on the old equipment to be disposed of.

CE

FC

FCC ID: 20164-H001

材质：80g书写纸单色印刷 风琴折 成品尺寸75*70mm