 
 
 


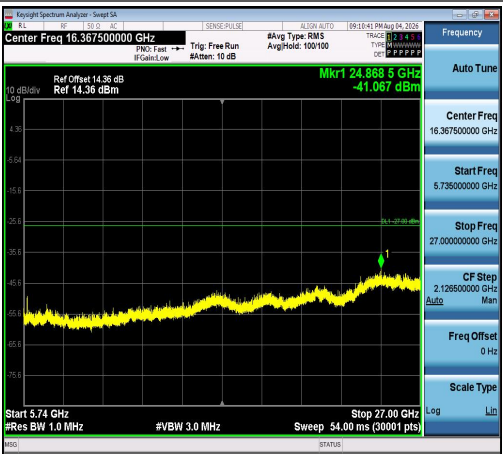


11AC20SISO-Ant1-5580-5735~40000-PASS

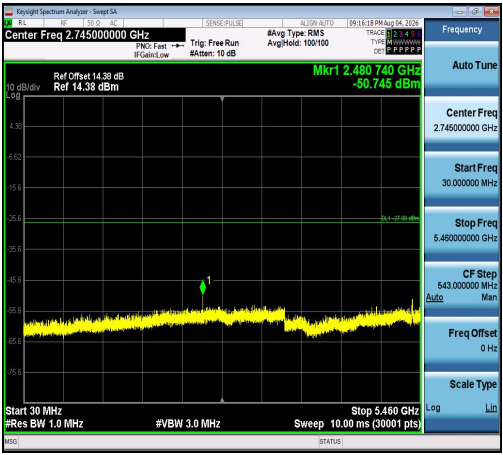


11AC20SISO-Ant1-5700-30~5460-PASS

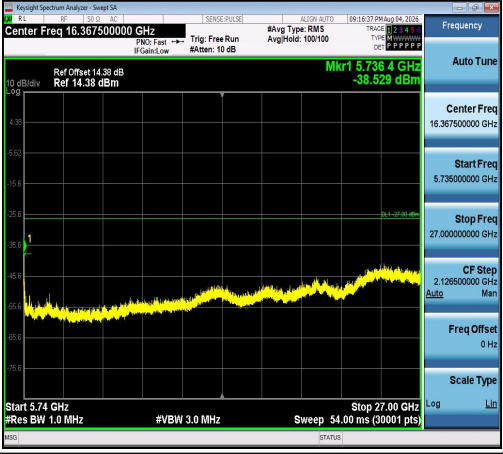

 
11AC20SISO-Ant1-5700-5735~40000-PASS

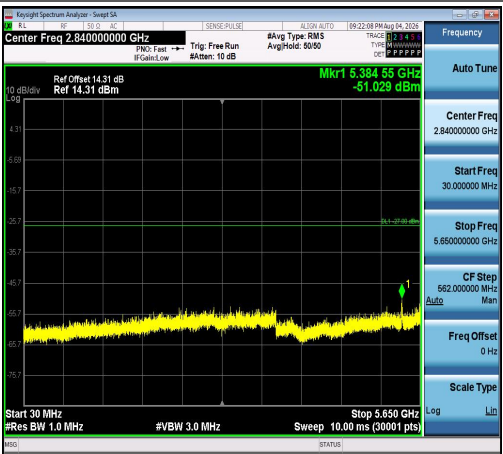


11AC20SISO-Ant1-5745-30~5650-PASS

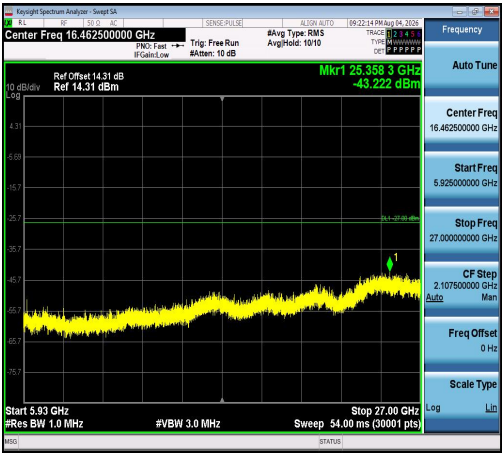 


11AC20SISO-Ant1-5745-5925~40000-PASS

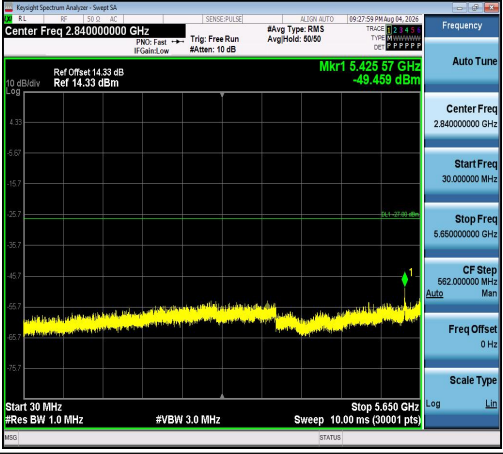 


11AC20SISO-Ant1-5785-30~5650-PASS

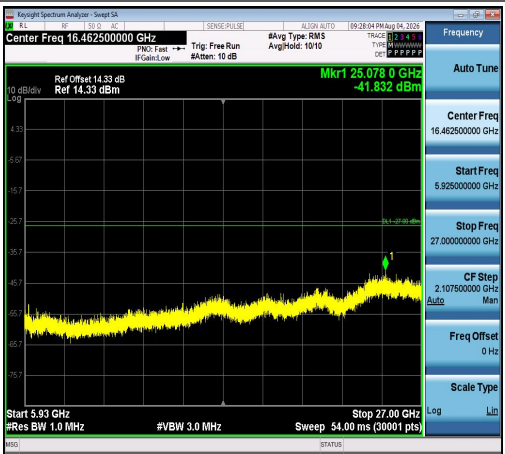 

11AC20SISO-Ant1-5785-5925~40000-PASS

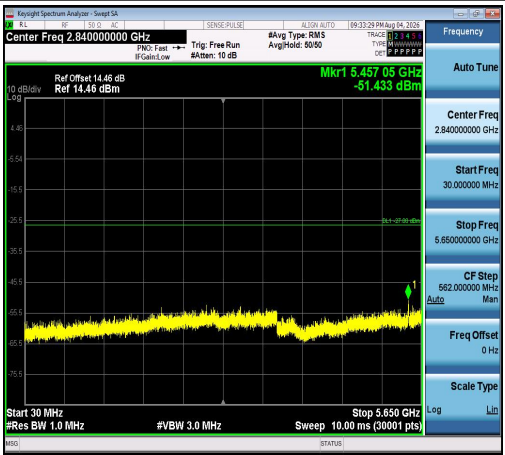 


11AC20SISO-Ant1-5825-30~5650-PASS

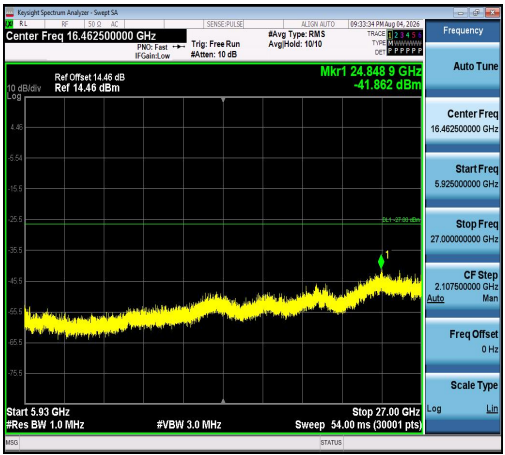 


11AC20SISO-Ant1-5825-5925~40000-PASS



 
11AX20SISO-Ant1-5180-30~5140-PASS

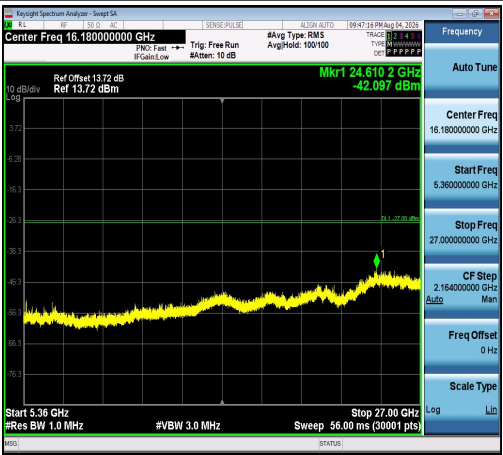


11AX20SISO-Ant1-5180-5360~40000-PASS

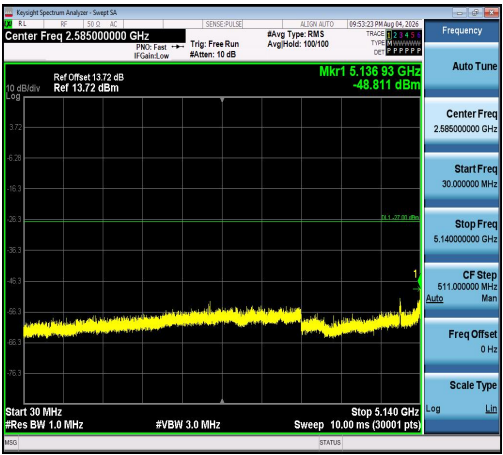 


11AX20SISO-Ant1-5200-30~5140-PASS

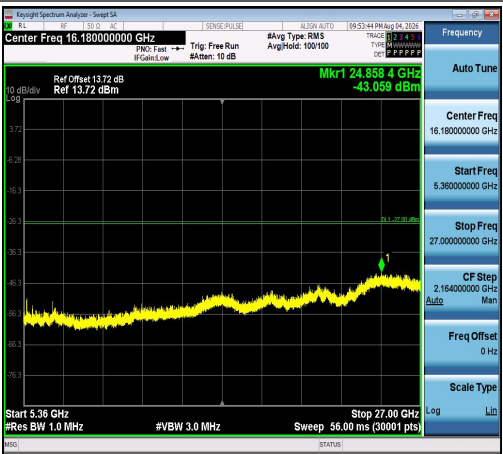 


11AX20SISO-Ant1-5200-5360~40000-PASS

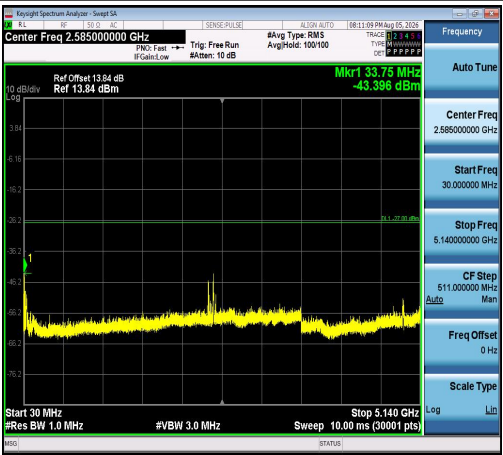 


11AX20SISO-Ant1-5240-30~5140-PASS

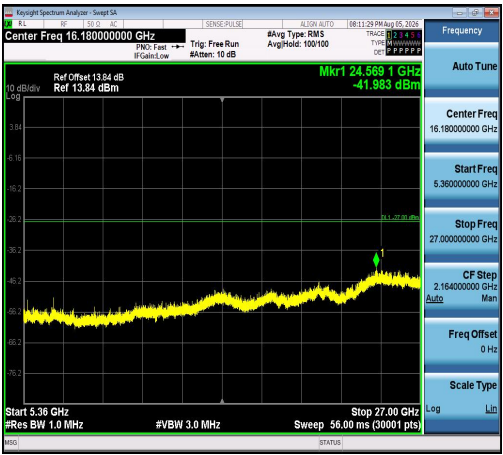 


11AX20SISO-Ant1-5240-5360~40000-PASS

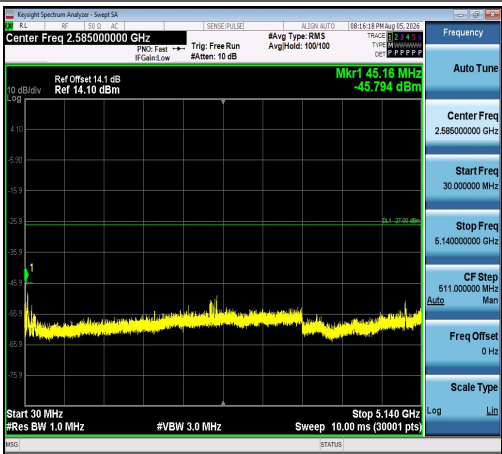 


11AX20SISO-Ant1-5260-30~5140-PASS

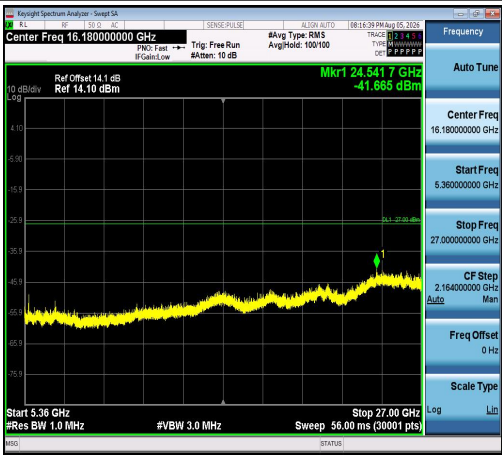 


11AX20SISO-Ant1-5260-5360~40000-PASS

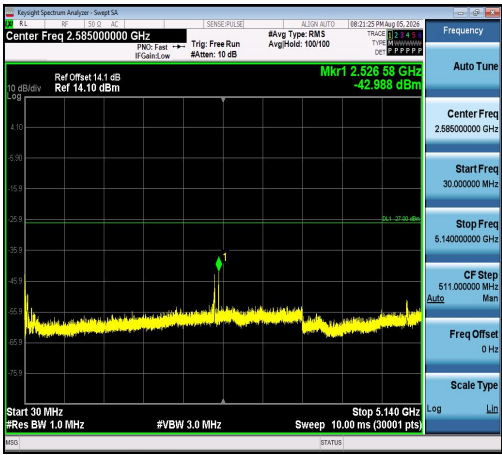 


11AX20SISO-Ant1-5280-30~5140-PASS

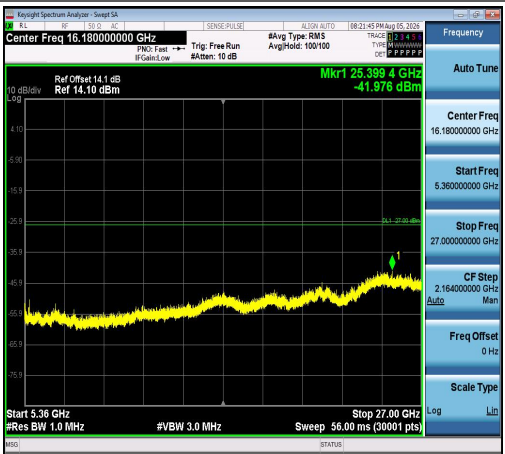 


11AX20SISO-Ant1-5280-5360~40000-PASS

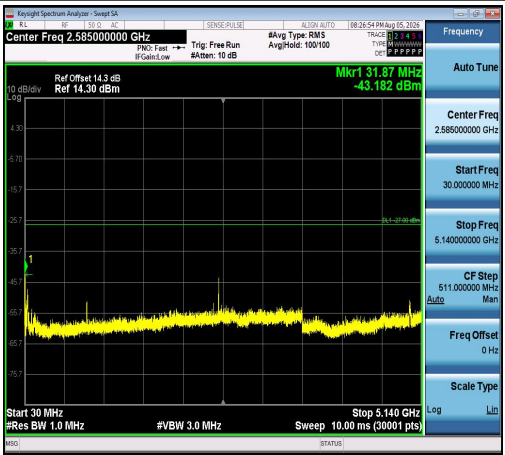 


11AX20SISO-Ant1-5320-30~5140-PASS

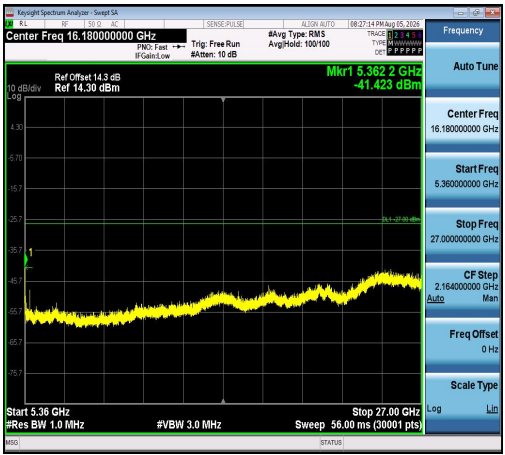 


11AX20SISO-Ant1-5320-5360~40000-PASS

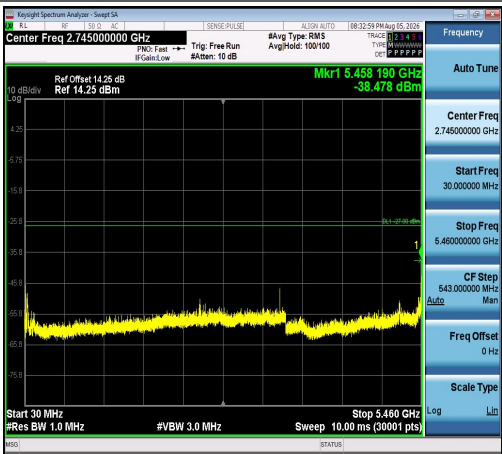 


11AX20SISO-Ant1-5500-30~5460-PASS

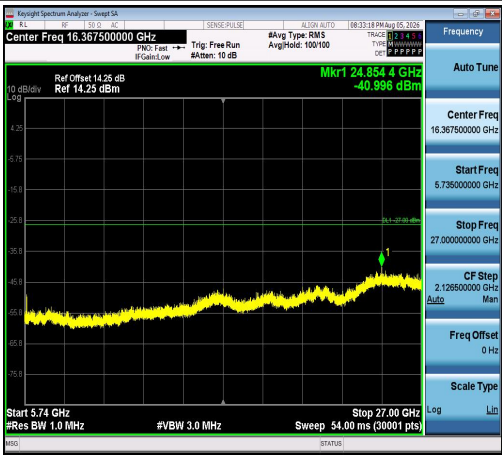 


11AX20SISO-Ant1-5500-5735~40000-PASS

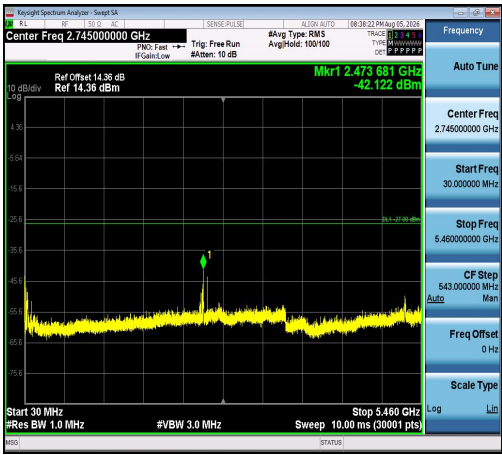 


11AX20SISO-Ant1-5580-30~5460-PASS

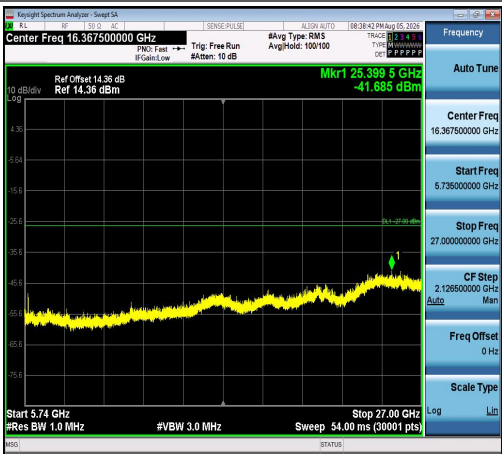 


11AX20SISO-Ant1-5580-5735~40000-PASS

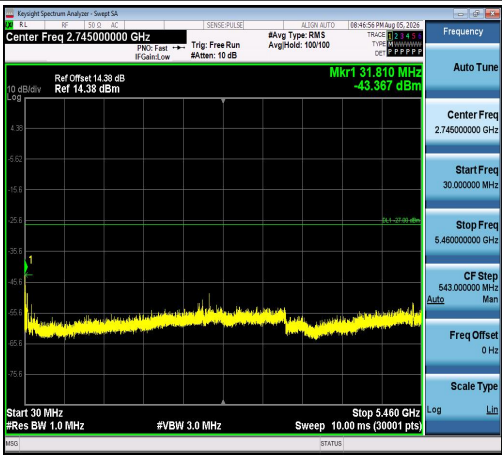 


11AX20SISO-Ant1-5700-30~5460-PASS

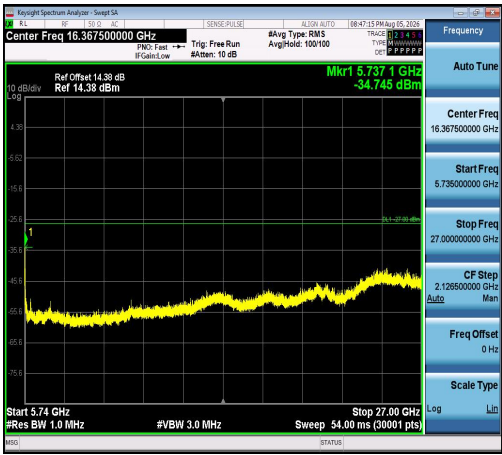 


11AX20SISO-Ant1-5700-5735~40000-PASS

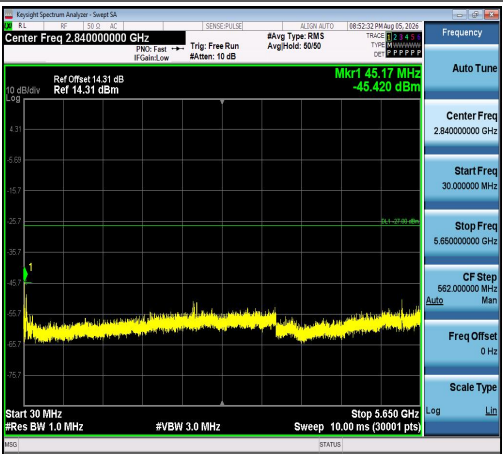 


11AX20SISO-Ant1-5745-30~5650-PASS

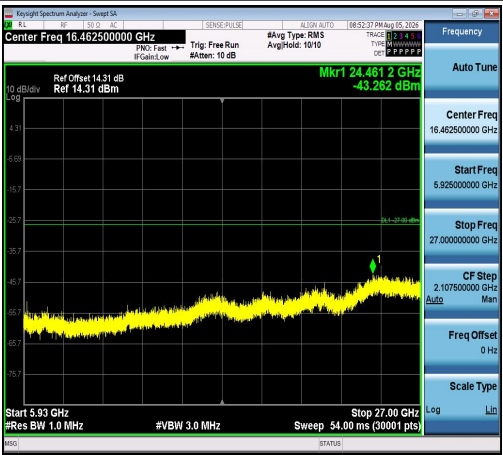 


11AX20SISO-Ant1-5745-5925~40000-PASS

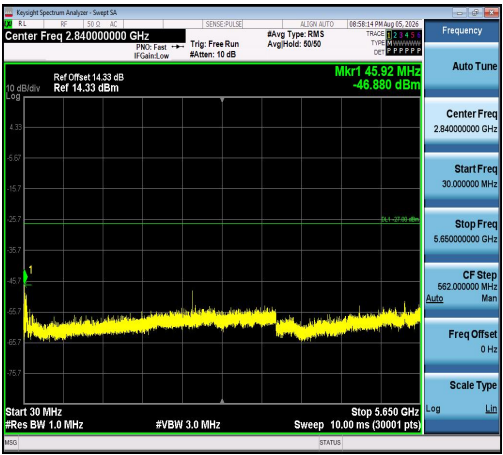 


11AX20SISO-Ant1-5785-30~5650-PASS

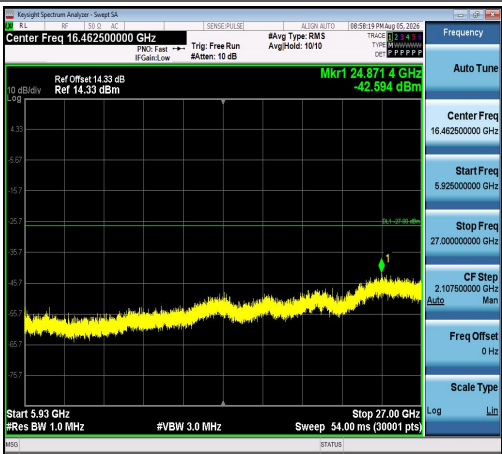 

11AX20SISO-Ant1-5785-5925~40000-PASS

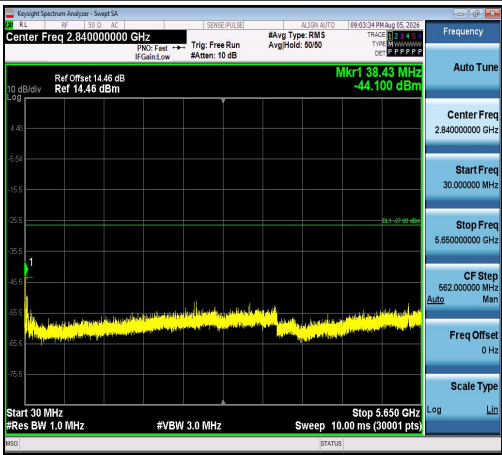 


11AX20SISO-Ant1-5825-30~5650-PASS

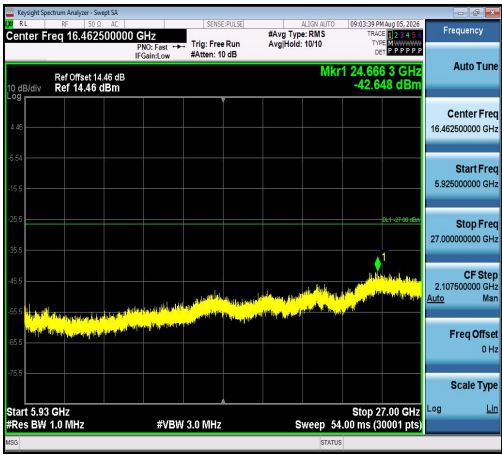 


11AX20SISO-Ant1-5825-5925~40000-PASS

 
PCB Antenna

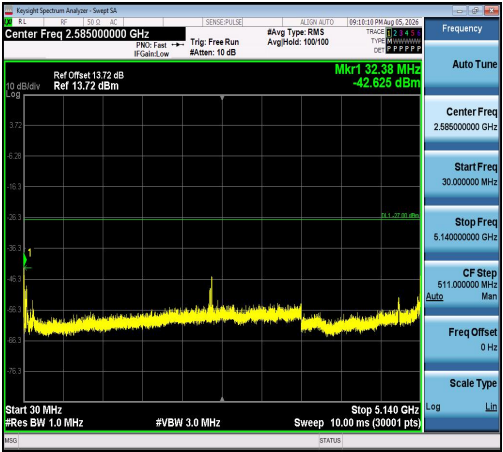


11A-Ant1-5180-30~5140-PASS

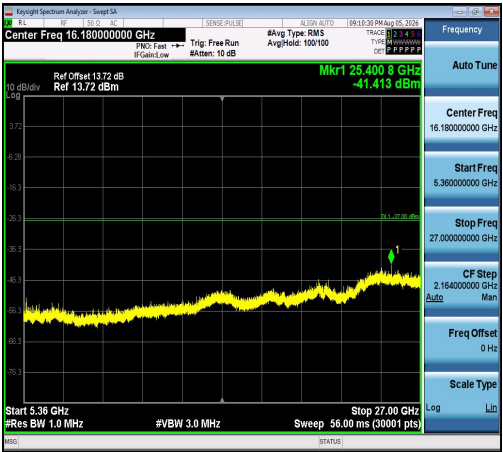 


11A-Ant1-5180-5360~40000-PASS

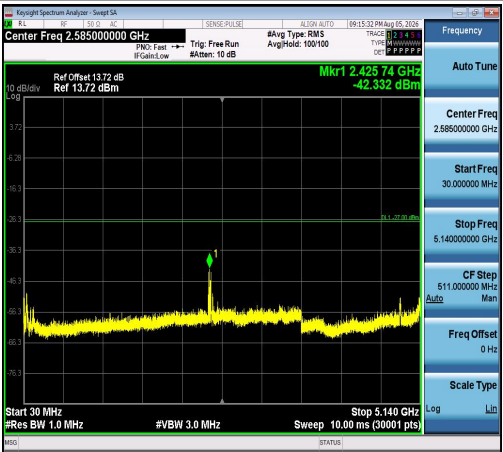 


11A-Ant1-5200-30~5140-PASS

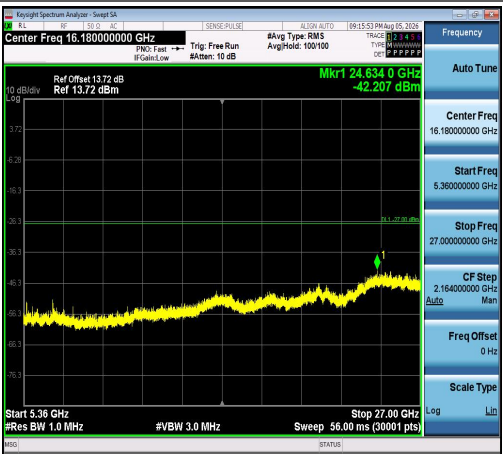 

11A-Ant1-5200-5360~40000-PASS

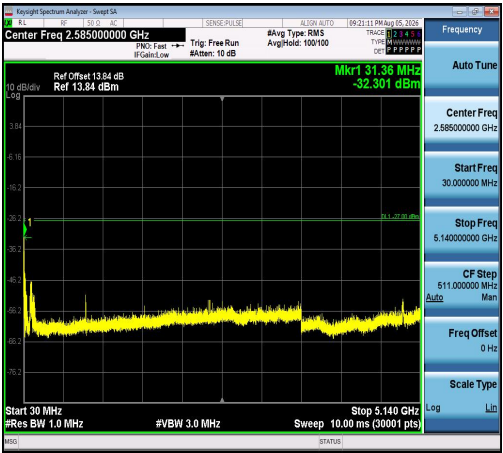 


11A-Ant1-5240-30~5140-PASS

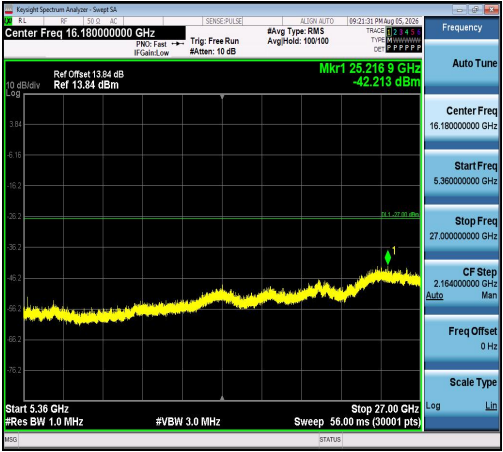 


11A-Ant1-5240-5360~40000-PASS



 11A-Ant1-5260-30~5140-PASS

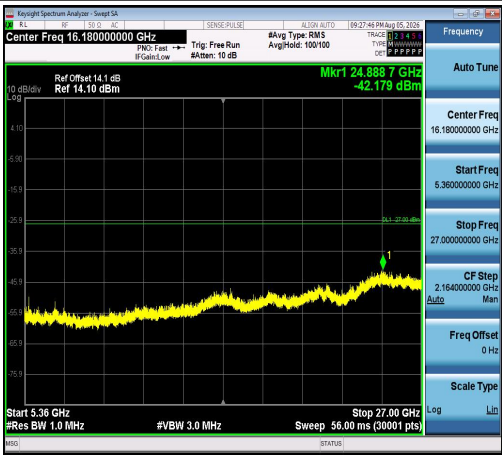

11A-Ant1-5260-5360~40000-PASS

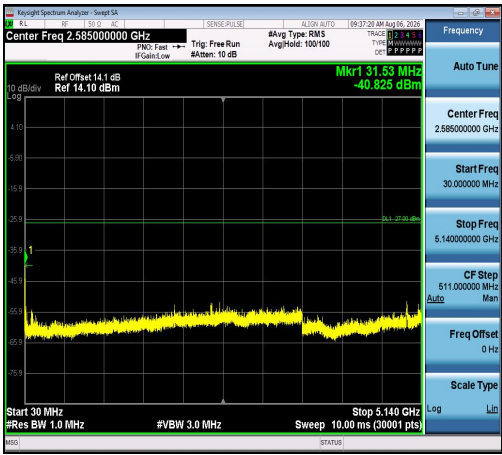 

11A-Ant1-5280-30~5140-PASS