

READ BEFORE USE:

GENERAL OPERATING SAFETY:

- Keep the Water Dino at a safe distance and do not aim at another person or animal.
- Keep hands, hair, and loose clothing away from moving parts.
- Avoid objects that could cause propeller entanglement.
- Do not touch propellers while in operation.
- Do not spray water into eyes or face.
- The Remote Controller must be kept dry and not submerged.
- Stop using the product immediately if damaged.
- Never attempt to disassemble or modify the vehicle or its accessories.
- Turn off power after use.
- Store in a cool, dry place away from direct sunlight or extreme heat.

WARNING: WATER USE SAFETY

- This vehicle is designed for temporary shallow-water operation only.
- Never enter deep or unsafe water to retrieve the vehicle.
- Adult supervision is required when operating in water.
- Do not use in salt water, or chlorinated pools, unless rinsed and dried immediately after use.

HOW TO REPLACE THE PROPELLER:

Pinch the small hat in the middle position of the fan blade and remove it. When replacing it, align it with the motor shaft and press it down, being careful not to deform it.

Check propellers regularly for foreign objects wrapped around them, damaged or detached blades. Clean and replace with spare propeller blades when necessary.

ATTENTION: The propeller blades are LEFT and RIGHT. Install them correctly, otherwise they can't row.

Directional speed can be affected by environment conditions and water flow speed.



BATTERY INSTALLATION:

REMOTE CONTROLLER (2.4GHz)

- Battery Installation / replacement should be done by an adult.
- Unscrew the battery cover and insert or replace with 2 x 1.5V AA batteries (Not included) with the correct polarity as indicated in the battery compartment.
- Replace the battery cover and tighten securely. Do not over-tighten.



Requires
2x AA batteries.
(not included)

BATTERY WARNING AND SAFETY

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the unit before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium) batteries.
- Do not mix old and new batteries.
- Exhausted batteries should be removed from the product.
- Remove the batteries if the product is not to be used for an extended period of time.
- The supply terminals are not to be short-circuited.
- Batteries are to be inserted with the correct polarity.
- Only use batteries with the same or equivalent type.
- Do not dispose of batteries in fire. Batteries may explode or leak.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.



R-NZ

The Monster Group LLC
Suite 13, 2501 Technology Circle,
Bentonville, Arkansas, 72712, USA



© Universal City Studios LLC and
Amblin Entertainment, Inc.
All Rights Reserved.



ToyMonster International Limited
Unit 1501, 15/F, Ginza Square 567
Nathan Road, Kowloon, Hong Kong.
E-Mail: cs@themonstergroup.com
www.toymonster.net
Made in Shantou, China

DESTINATION: UNCHARTED



MOSASAURUS ENCOUNTER



AGES
6+



Water Dino

 
REMOTE CONTROL INSTRUCTION MANUAL

RC HANDSET CONTROLLER GUIDE:

CONTENTS:

- 1x Remote Control (2.4GHz)
- 1x Mosasaurus Water Dino
- 1x USB Charging Cable
- 2x Propeller Blades
- 1x Instruction manual

Requires 2 x AA batteries.
(not included)

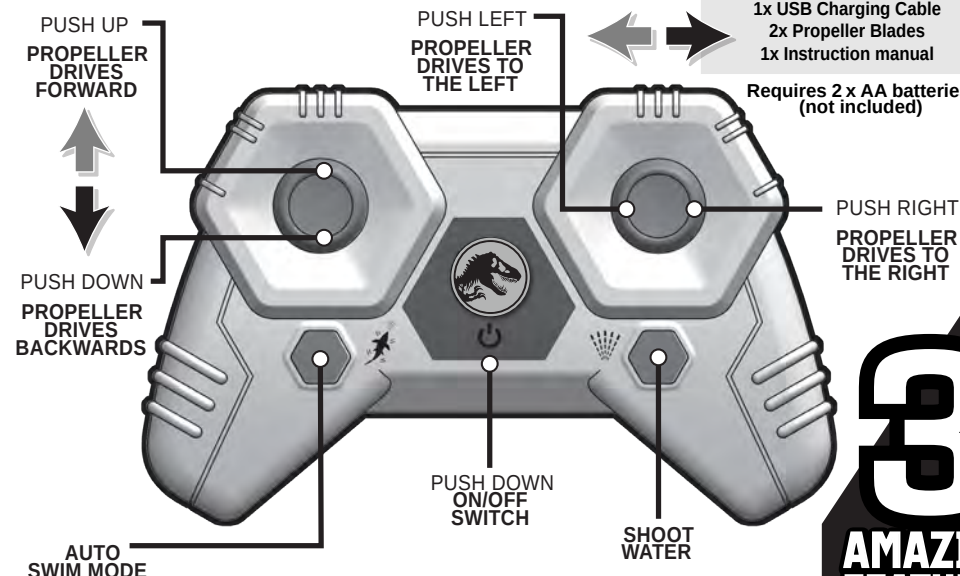

PUSH RIGHT
PROPELLER
DRIVES TO
THE RIGHT

3
AMAZING
FEATURES

PREPARE TO SWIM:


- 1: INSERT BATTERIES** into the RC Handset Controller (See Battery Install section).
- 2: CHARGE** the *Water Dino*. When charging the lights on the spine of the *Water Dino* will flash. When fully charged the lights will stay on. Charging time approximately 2 hours for 15-20 minutes playing time, (depending on use and conditions).
- 3:** Before putting the *Water Dino* device into water, ensure that the rubber plug is inserted into the charging port (on the under belly).
- 4:** The *Water Dino* device must be placed in water to activate the sensor to connect to the RC handset. Note: The *Water Dino* will not work if it is out of the water.
- 5: TURN ON** the RC Handset Controller and wait 5 seconds to connect with the *Water Dino* device. When connected the device will light up, and is ready to swim in water. If the RC Handset Controller is not in operation after 5 seconds, it will go into sleep mode.
- 6:** When learning to swim the *Water Dino*, choose a bath, pool, or outdoor open water environment. Stay away from areas with over-hanging and underwater plant life.
- 7:** To make the *Water Dino* stop swimming, remove from water and switch off the handset.
- 8:** Transmission distance: 32 feet / 10 meters.

WARNING: WATER USE SAFETY

This vehicle is designed for temporary shallow-water operation only.




DINO TAIL ASSEMBLY:

To remove the tail from the main *Water Dino* body, gently squeeze the large tail segment vertically, releasing the pins that connect it to the body. To reattach gently squeeze this same segment and realign the pins to the main body.

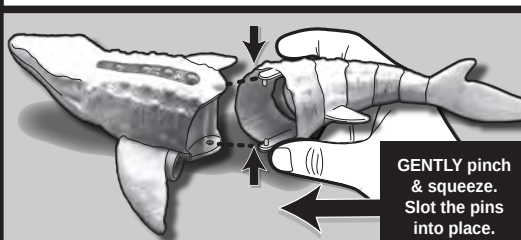

CHARGING THE WATER DINO:

 1. Ensure that you have turned off the *hand-set* before charging the *Water Dino*.
2. Non-replaceable lithium battery
3. Battery must be charged by an adult.
4. Do not charge near water or on wet surfaces.
5. Dry product before charging.
6. Connect USB Type C into the port on the under belly of the *Water Dino*.

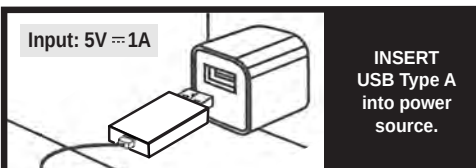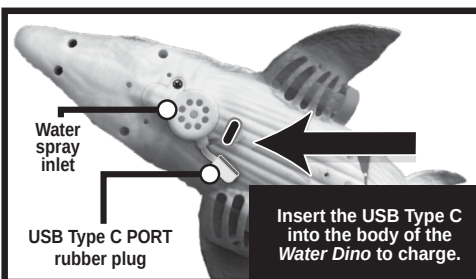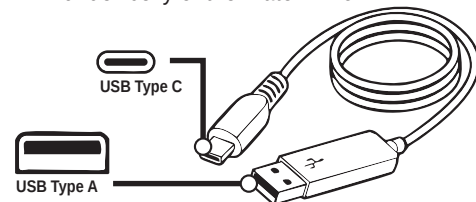


7. Connect USB Type A charging cable and adapter to the power source.
8. Charge the battery of the *Water Dino*. The lights on the the *Water Dino* will flash until charge is complete.
9. CAUTION: Only use the charging cables supplied and remove from power source when not in use.
10. Ensure the rubber charging port cover is securely closed before placing in water.
11. If the product becomes hot, damaged, or swollen discontinue immediately.
12. Regularly inspect the charging cable for damage. Do not use if the cable or the connector is damaged.

LIGHTUP THE MOSASAURUS




TURBO SWIM

MANUAL MULTI-DIRECTIONAL MODE

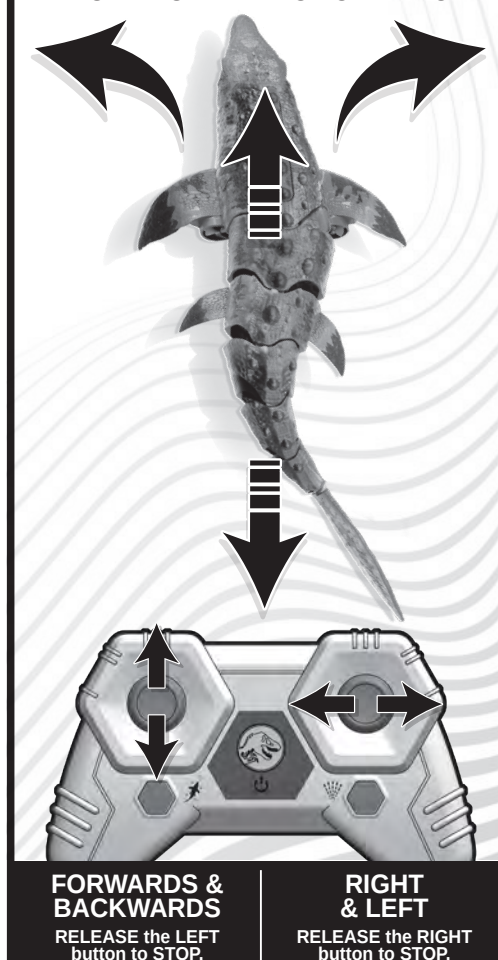

SHOOTING WATER

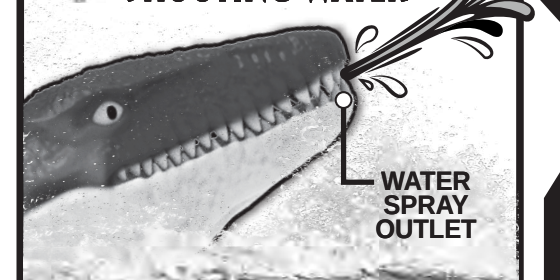 

WHIPLASH SWINGING TAIL

AUTOMATIC MULTI-DIRECTIONAL SWIM MODE

