

your face and speak in a normal voice, with the antenna pointed up and away from the face.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


Consult the dealer or an experienced radio/TV technician for help.

Notice before use

- ◆ The right to repair can be carried out by professional technicians.
- ◆ Do not use the intercom or charge the battery in an explosive environment (such as gas, dust, steam, etc.).
- ◆ Turn off the intercom when refueling or stopping at the gas station.
- ◆ No modification or adjustment is allowed for any reason.
- ◆ Do not expose the radio to direct sunlight for long periods of time, and do not place it in the heating appliance accessories.
- ◆ Do not place the radio in an extremely dusty, wet, or splashing place, nor place it on an unstable surface.

Safety: It is important for users to understand and understand the general risks of using walkie-talkies.

Be familiar with the machine

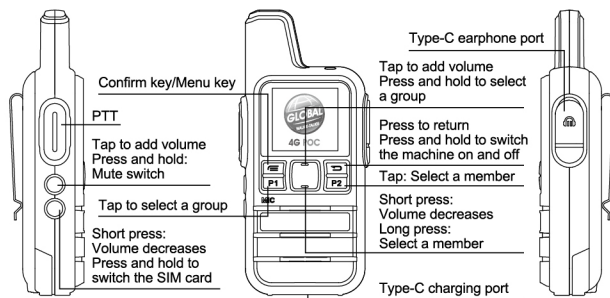

Warranty card

Note:

- 1.This warranty card is only applicable to two-way radio of the above-listed model and serial number.
- 2.The warranty card is an important document for the end-user to enjoy warranty service, please keep it well.
- 3.The warranty card shall be filled and chopped by the dealer, or it is invalid.

Customer's name: _____

Gender: _____

Add and postal code: _____

Customer's tel: _____

Model: _____

Serial number: _____

Purchasing date: _____

Purchasing date: _____

Invoice No.: _____

Dealer: _____

Stamp: _____

Add and ptal code of the dealer: _____

Contact tel: _____

Handling people: _____



warn

- ◆ This product is a non-explosion-proof product!
- ◆ Explosive environment (gas, dust, smoke, etc.)
- ◆ When refueling or stopping for refueling, turn off the power of the intercom.
- ◆ Please use the original charger to charge!
- ◆ Do not use more than 5V1A power adapter for charging!

Native specification

Switch on and off

Press and hold to turn on/off.

Adjust the volume

Side key 1: Short press volume plus and long press mute on/off.

Side key 2: Hold down the volume and hold down the SIM card to switch.

Group selection

When 4G LTE POC RADIO is waiting, press [] to access the menu, select Select Group, and press []. Press [▲/▼] to select the corresponding group and press [] to confirm.

Member selection

When 4G LTE POC RADIO is waiting, press [] key to enter the menu, select "Member selection" option, and press [] key to enter. At this time, press [▲/▼] to select the corresponding member, and press the button to confirm.

Friend selection

When 4G LTE POC RADIO is waiting, press [] key to enter the menu, select "Select Friends" option, and press [] key to enter. Press [▲/▼] to

select the appropriate friend and press [] to confirm.

Call transmission

Start launching: Press and hold the [PTT] key, the red light will come on, and there will be a "beep" sound. The LCD screen will show that the machine is talking. End transmission: Release the [PTT] key, the red light goes out, and there is a "beep" sound. The LCD screen displays the current status as idle.

Call reception

Start receiving: Normally, the intercom is in the monitoring state. When a call is received, the LCD screen displays the name of the speaker and the blue light turns on. End Receiving: The blue light is off and a beep sound is played.

Waiting state

When the radio is waiting, the blue light flashes every 3 seconds.

Busy ban

If you are in the receiving state, press the [PTT] key. The red light turns on and the "drip" tone is played, indicating that the call is unsuccessful.

NETWORK DIGITAL

4G LTE POC RADIO

USER'S MANUAL

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; (2) This device must accept any interference received, including interference that may cause undesired operation.

SAR tests are conducted using standard operating positions accepted by FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. Before a new model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each product are performed in positions and locations as required by the FCC.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with and accessory designated for this product or when used with and accessory that contains no metal. To maintain compliance with FCC RF exposure guidelines hold the transmitter and antenna at least (25 mm) from