 
 


OWS Bluetooth Earphone

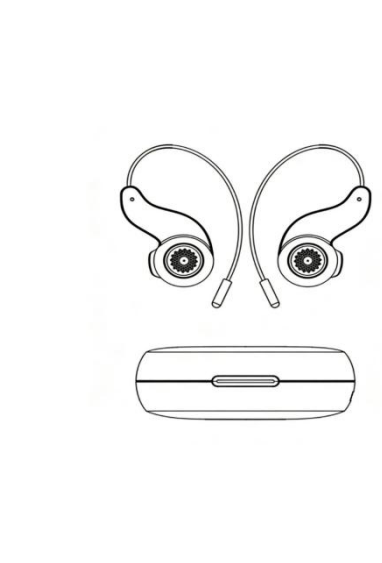

使用指南 User Guide

●product overview

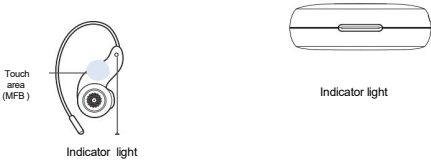

●Key function operation

- Power on: Open the charging compartment and take out the earphones to automatically turn on. The main ear white and orange lights alternate flashing, while auxiliary ear no light. After connection, the lights stop flashing. 2. Press and hold the MFB button for 3 seconds to manually turn on the device, white light on 1 second.
 - Shutdown: 1.The earphones will automatically shut down when placed in the charging compartment. 2. Press and hold the MFB button for about 4 seconds, and the orange light will flash on 1 second before turning off.
 - Pairing: After the headphones are turned on, they automatically enter pairing mode (waiting to be connected to the phone), and the main ear white and orange lights alternate flashing, while auxiliary ear no light.
 - Answer: When receiving an incoming call, double click the MFB button on the left and right ears.
 - Hang up: During a call, double click the MFB button on the left and right ears.
 - Reject: When receiving an incoming call, press and hold the MFB button for 2 seconds on either ear.
 - Play/Pause: Click the MFB button on either side of the ear.
- Previous song: Press and hold the MFB button for 2 seconds on the left ear.
- Next tack: Press and hold the MFB button for 2 seconds on the right ear.
- Volume increase: Single click on the MFB button on the right ear.

●产品概述



●按键功能操作

- 开机: 1. 打开充电仓取出耳机自动开机, 主耳机白橙灯交替闪, 副耳机不闪灯, 连接后不闪灯; 2. 长按MFB按键3S手动开机, 白灯亮1秒
- 关机: 1. 耳机放入充电仓自动关机. 2. 长按MFB按键约4秒, 橙灯亮1秒后熄灭
- 配对: 耳机开机后自动进入配对状态(与手机待连状态), 主耳白橙灯交替闪, 副耳机不闪灯
- 接听: 来电时, 双击左右耳MFB按键
- 挂断: 通话中, 双击左右耳MFB按键
- 拒接: 来电时, 任意长按左右耳2秒MFB按键.
- 播放/暂停: 双击左右耳MFB按键
- 上一曲: 长按左耳2秒MFB按键.
- 下一曲: 长按右耳2秒MFB按键.
- 音量加: 单击右耳MFB按键.
- 音量减: 单击左耳MFB按键.
- 语音助手: 三击左右耳MFB按键松开进入语音助手, 三击退出.
- 复位耳机: 开机未连接手机时, 任意5击左右耳MFB按键复位耳机出厂设置, 复位成功 白橙灯同时闪三次.
- 低电报警: 耳机电量不足时每隔5分钟提示一次低电报警音。(橙灯5秒闪1下)
- 充电: 耳机放入充电仓, 仓对耳机充电, (1-30%红灯亮, 31-70%橙灯亮, 71-100%绿灯亮) 充电仓指示灯常亮30秒灭掉, 耳机充电中橙灯常亮, 充满灯灭。给充电仓充电(1-30%红灯闪, 31-70%橙灯闪, 71-100%绿灯闪) 充电仓指示灯闪烁, 充满绿灯常亮。

- Volume reduction: Single click on the left ear MFB button.

Voice Assistant: Three clicks the MFB button to enter the voice assistant, then three clicks to exit.

- Reset the earphones: When the phone is not connected and turned on, five clicks the MFB button on the left and right ears to reset the earphones to their factory settings. After a successful reset, the white and orange lights flash simultaneously three times.
- Low battery alarm: When the earphone battery is low,a low telegram alarm sound is prompted every 5 minutes (The orange light flashes once every 5 seconds.)
- Charging: Place the earphones into the charging compartment and charge them in the compartment. (1-30% red light on, 31-70% orange light on, 71-100% green light on) The charging compartment indicator light stays on for 30 seconds and goes off. During earphone charging, the orange light stays on and the fully charged light goes off. Charge the charging compartment (red light flashing at 1-30%,orange light flashing at 31-70%, green light flashing at 71-100%).The indicator light of the charging compartment is flashing, and the green light is always on when fully charged.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- ~ Reorient or relocate the receiving antenna.
- ~ Increase the separation between the equipment and receiver.
- ~ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ~ Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.


●蓝 牙 操 作

- 蓝牙连接成功:
1. 耳机进入蓝牙模式, 手机搜索蓝牙配对名"Cricket 16W", 点击连接即可
2. 耳机默认回连上一次设备。
- 蓝牙断开:
1. 手动关闭手机蓝牙端, 耳机进入蓝牙配对模式。
2. 耳机与手机超距后断开, 5分钟内回到有效距离范围, 能正常回连手机, 超过5分钟会自动关机。

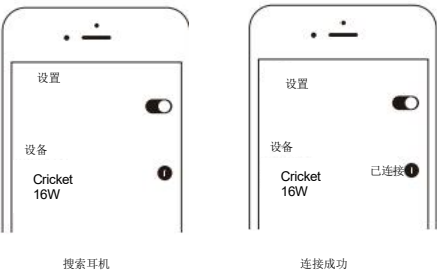

●Bluetooth operation

 - Bluetooth connection is successful:
The headset enters Bluetooth mode, and the phone searches for the Bluetooth pailing name Cricket 16W
Click on the connection.
- 2.The headset connects to the device once by default
- Bluetooth disconnected:
1.Manually turn off the Bluetooth of the mobile phone,and the headset enters Bluetooth pairing mode.
- 2.Disconnect the headset from the phone after overdistance, return to the effective distance range within 5 minutes,and connect the phone normal.After 5 minutes, it will automatically shut down.

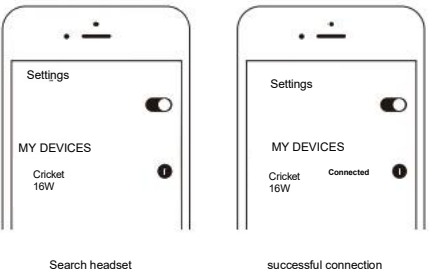

●规格参数

- 名称: OWS 蓝牙耳机
- 型号: Cricket 16W
- 蓝牙版本: V6.0
- 连接范围: ≥10m
- 耳机电池容量: 45mAh
- 充电仓电池容量: 400mAh
- 充 电 电 压: 5V ~ 1A MAX
- 充电时长: <2H
- 播放时长: 4H
- 待机时长: 80H

●注 意 事 项

- 切勿使用具有腐蚀性的清洁剂清理本产品。
- 切勿让本产品加热或靠近火源, 如煮食炉。
- 切勿让本产品长时间受阳光直接照射。
- 切勿将本产品弃置于火中, 避免发生爆炸。
- 切勿尝试拆开本产品作出任何修改, 因为它并不包含任何维修组件。
- 切勿在雨中使用本产品。
- 如果长时期内不打算使用本产品, 请您将它储存在干燥的环境中, 并每月至少为耳机充电一次以延长寿命, 避免极端的温度和灰尘。

●Specifications

- Name: OWS Bluetooth Earphone
- Model: Cricket 16W
- Bluetooth Version: V6.0
- Connection range: ≥10m
- Headphone Battery Capacity: 45mAh
- Battery Capacity of Charging Bay: 400mAh
- Charging voltage: 5V ~ 1A MAX
- Charging time: <2H
- Play time: 4H
- Standby time: 80H

●Matters needing attention

- Do not use abrasive cleaners to dean this product.
- Do no allow this product to be heated or close to a fire source,such as a cooking stove.
- Do not expose the product to direct sunlight for a long time.
- Do not discard this product in fire to avoid explosion.
- Do not attempt to disassemble this product to make any modifications, as it does not contain any maintenance components.
- Do not use this product in rain.
- If you do not plan to use this product for a long time, please store it in a dry environment and charge the headset at least once a month to extend Its life and avoid extreme temperatures and dust.