

PRODUCT SPECIFICATIONS:	
MATERIAL: LIQUID SILICONE	HVIN:EN-RD-6404-2 (221744298)
FUNCTIONS: 8 VIBRATING SPEEDS & PATTERNS + TURBO MODE	
BATTERY: LITHIUM, REMOTE: AAA	VOLTAGE: 3.7 V
USER TIME: 60 MINUTES	SOUND LEVEL: ≤60DB
WATERPROOF RATING: IPX-6 PROTECTED AGAINST HIGH PRESSURE WATER STREAM FROM ANY ANGLE.	



ATTACH USB
CHARGER
TO PRONGS

CHARGING INSTRUCTIONS: It is recommended to charge this toy before first use. To charge, connect the USB plug into a power source at one end and the DC end onto the charging pins at the bottom of the toy's base. The light will flash while the device is charging and remain solid when fully charged. Charges complete in about 2 hours. Charge lasts for 1 hour with average use. This toy operates at a sound level of 60db with a lithium battery at 3.7V.

INSTRUCTIONS FOR USE

1. This toy can be operated with the remote control or its buttons directly, but please note that the remote cannot turn the toy on or off.
2. Locate the 2-button control panel at the front of the toy's base. Press the Power Button for 2 seconds to turn toy on. The button will light up and the motor will begin in standby.
3. Press the Power Button again more quickly to engage vibration, cycling through 8 speeds and patterns.
4. Press the Turbo Button to engage Turbo Mode which give you a maximum power boost until you press the button again. Note: Turbo Mode is only available during vibration.
5. The remote control is automatically in standby mode. It does not need to be powered on when the toy is turned on.
6. Press the remote's Power Button to cycle through 8 speeds and patterns of vibration. Press the remote power button for 2 seconds to put into standby at any time.
7. To activate Turbo Mode with the remote, press the top Button. Vibration will boost to its top speed until you press the button again. Please note: Turbo mode lasts 10 seconds.
8. To turn toy off, press its Power Button directly for 2 seconds. Lights will go off and all vibration will cease. Remote will turn off when the toy's signal is no longer available.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Evolved Smart Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY
AND MUST BE RECYCLED



FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

IC Warning

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L' émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L' exploitation est autorisée aux deux conditions suivantes:

- (1) L' appareil ne doit pas produire de brouillage;
- (2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.