 


Size:100*70mm

 
Wireless HD Transmitter
Receiver Kit

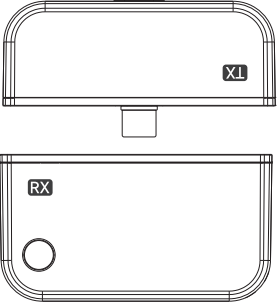


User manual

・Product introduction

Receiver-RX

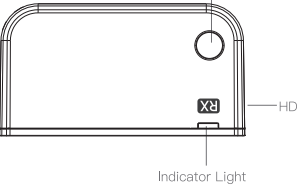

Transmitter-TX

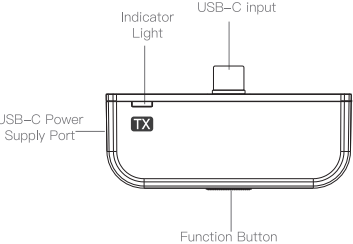 


・Connection

Combination of receiver and transmitter, plug and play

Transmitter-TX:



 Receiver-RX:



1. Connect the HD port of the receiver to the video input port of a display device such as a monitor or television.

 
2. Connect the USB-C power port of the receiver to a charging cable and plug it into a power adapter or USB-C power supply port (voltage 5V, current 2A).

3. Adjust the HD signal source of the monitor or TV to the corresponding HD port until it reaches the receiverThe startup screen shows that the startup has been successful.

4. Connect the transmitter to a mobile phone, computer, or other device with TYPE-C video output functionEquipment. After the indicator light enters the flash state, wait for more than ten seconds to complete the projection.

・Pairing Instructions

The product has been paired out of the factory. In case of pairing failure due to improper operation or other circumstances during use, it is necessary to restore and re pair the device as follows:

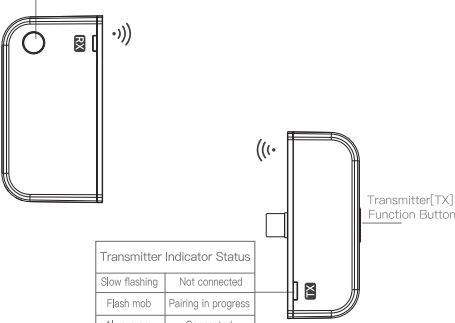

Transmitter Indicator Status	
Slow flashing	Not connected
Flash mob	Pairing in progress
Always on	Connected

1. Press and hold the receiver function key for more than 5 seconds, and he prompt will pop up on the interface :“Pairing Timeout: 90S”, and wait for the transmitter to enter the pairing mode.

2. Press and hold the transmitter function key for more than 5 seconds, the indicator light will flash quickly to pair, and wait for the transmitter indicator light to remain on to indicate successful connection.

・Problem solving

 
Q: How to restore factory settings?

A: When the product fails, press and hold the receiver function button for 15 seconds. After a black screen appears and restart, the factory settings will be restored.

Q: How to enter privacy mode?

A: Tap the transmitter function button to disconnect or reconnect.

ワイヤレス HDMI
送受信機セット

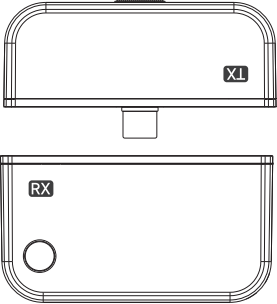


 R 210-254111


取扱説明書

・製品紹介

 受信機-RX

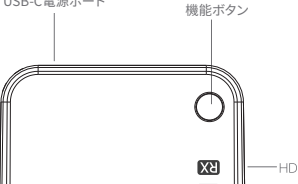

送信機-TX

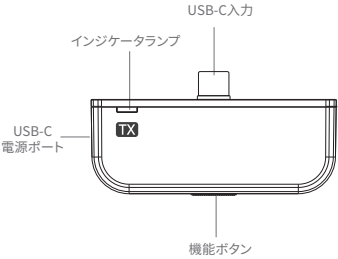 


・接続

受信機と送信機の組み合わせ、プラグアンドプレイ

送信機-TX



 受信機-RX:

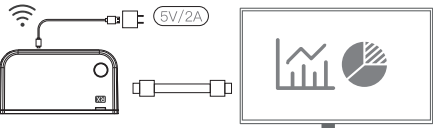

1. 受信機のHDポートをモニターやテレビなどの表示装置のビデオ入力ポートに接続します。

 
2. 受信機のUSB-C電源ポートを充電ケーブルに接続し、電源アダプターまたはUSB-C電源ポート（電圧5V、電流2A）に接続します。

3. モニターまたはテレビのHD信号源を、受信機に届くまで対応するHDポートに調整します。起動画面に起動成功が表示されます。

4. 送信機を携帯電話、コンピューター、またはTYPE-Cビデオ出力機能を備えたその他のデバイスに接続します。インジケータライトが点滅状態になった後、10秒以上待って投影を完了します。

・ペアリング手順

本製品は工場出荷時にペアリング済みです。不適切な操作や使用中のその他の状況によりペアリングに失敗した場合は、以下の手順でデバイスを復元し、再度ペアリングする必要があります。

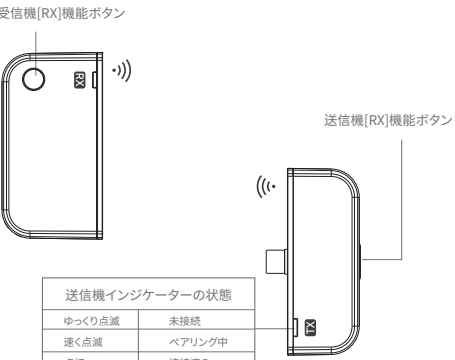

送信機インジケータの状態	
ゆっくり点滅	未接続
速く点滅	ペアリング中
点灯	接続済み

1. 受信機の機能ボタンを5秒以上押し続けると、インターフェースに「ペアリングタイムアウト:90秒」というプロンプトが表示され、送信機がペアリングモードに入るのを待ちます。

2. 送信機の機能ボタンを5秒以上押し続けると、インジケータライトが素早く点滅してペアリングが完了し、送信機のインジケータライトが点灯したままになって接続が成功するまで待ちます。

・問題解決

Q:工場出荷時の設定に戻すにはどうすればいいですか？

A:製品が故障した場合は、受信機の機能ボタンを15秒間押し続けます。黒い画面が表示された後、再起動すると、工場出荷時の設定に戻ります。

Q: プライバシーモードに入るにはどうすればいいですか？

A: 送信機の機能ボタンをタップして、切断または再接続してください。

Q: 接続に失敗しました

A: RXを電源に接続し、コンバーターが使用されているかどうかを確認してください。

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.