



Default user password:1234
Default Administrator password:123456
Both of user password and administrator password can unlock the door.

Box contains:

Main keys	Emergency keys	Battery box
Mounting screws		instructions

1.First opening:
①Insert the main key and turn to horizontal position,then insert the emergency key and turn about 45 degrees counterclockwise.
②Turn the handle counterclockwise.
③Install 4 AA batteries on the top of the safe door.After install batteries, all operations will be voice prompted.

2.Enter administrator mode:
-Press the button near the hinge
-Enter management password(default:123456)
-Press # to confirm

3.Administrator mode guide:
①-Press 1 to change user password
-Enter 4-8 digits as user password
-Enter again
-Input success
②-Press 2 to add fingerprint
-Put your finger on the reader
-Repeat 4 times
-Green light means success
③-Press 3 to delete fingerprint
④-Press 4 to change administrator password
-Enter 4-8 digits as administrator password
-Enter again
-Input success
⑤-Press 5 to change open mode
-Press 1 to set usual mode(password or fingerprint)
-Press 2 to set safe mode(password and fingerprint)
⑥-Press 6 to set Wifi
-Open the APP Tuya Smart
-Add device
-Click “Smart safe”
-Choose your WiFi and enter the code


-Please remember to turn on the 2.4GHZ band of your router this safe can only connect to WiFi on the 2.4GHZ band
-Set success(You can view the records of your door openings and alarms in Tuya Smart.)
Remote opening:
Light the screen press # then press “00#”,the safe will send unlock request to your mobile phone,you can agree or refuse in Tuya Smart

4.Alarm System:
①Permanent: five fingerprint input errors or three password input errors will alarm,and the panel will lock,can’t be operated in 180 seconds,after the lockout is lifted, it only takes one wrong entry to trigger the alarm and lockout again.
②Valid until the next time you open the door: light the screen, then press * to enter vibration alert mode,a certain level of vibration triggers an alarm,after entering the correct password or fingerprint will disarm.

5.Usual mode and safe mode:
-At usual mode,you just need to put the correct password or correct fingerprint to unlock
-At safe mode,you need both password and fingerprint to unlock

6.Quick opening:
You can pull out the main key horizontally,then you just need your password or fingerprint to open the safe at usual mode(If you find it cumbersome or inconvenient to use your key every time you open the door)

7.Attention:
①Press the manage button over 5 seconds to restore factory settings;
②Fingerprints can be added up to 20
③After lighting the screen,Press “00*” to enter silent mode(key tones and voice prompts turn off)
④Some operations might be upgrade,please refer to actual situation.

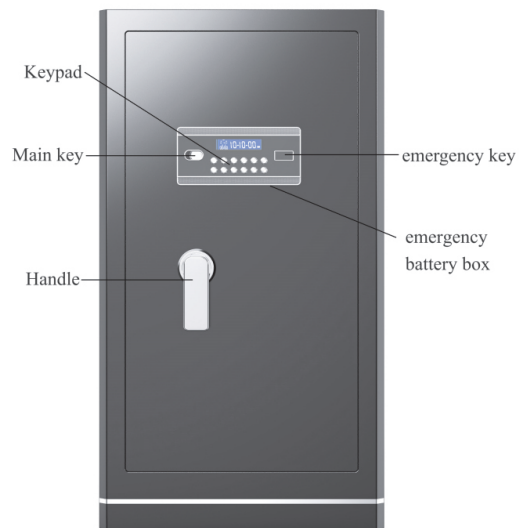

Default password:1234
Default alternate password:123456
Both of password and alternate password can unlock the door.

Box contains:

Main keys	Emergency keys	Battery box
Mounting screws		instructions

1.First opening
①Insert the main key and turn to horizontal position,then insert the emergency key and turn about 45 degrees counterclockwise.
②Turn the handle counterclockwise.
③Install 4 AA batteries on the top of the safe door.

2.Password open method
-press # then press intial password"1234",or alternate code "123456",then press# to confirm,if correct screen shows "OPEN"(wrong shows "ERROR") then turn the handle to open before the screen off
Tips: after entering password 10 seconds,the screen goes out,then you need to repeat above operations.If you enter a wrong digit,youcan press * to delete last digit before confirm

3.Code setting and change
-To change open code:press the button near the hinge,screen shows "-----" enter 4-8 digit as your new code,confirm by #.
-To change alternate code:open the door with previous alternate code,screen shows "OPEN",while screen goes on,press *,then press 4-8 digit as your new code,confirm by #.

4.Alarm function
-Code entered wrong for over 3 times,screen shows"Error",alarm 60 seconds until entering correct codea certain hit

5.Hide your code
-Every time you want to open the door,after press # then press *,your code will be shown as □ instead of number.

6.Quick opening
-Pull out your main key at horizontal position,then you just need enter the code to open(If you feel inconvenient about using keys to open every time)

7.Emergency opening
-When your batteries run out,you can insert the emergency battery box to get safe powered
-if the electronic panel goes wrong or you forget your code,open with emergency key.

Product instruction



Digital Lock video instruction



Fingerprint lock video instruction

Tips:please don’t put the emergency key and battery box into safe

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.