

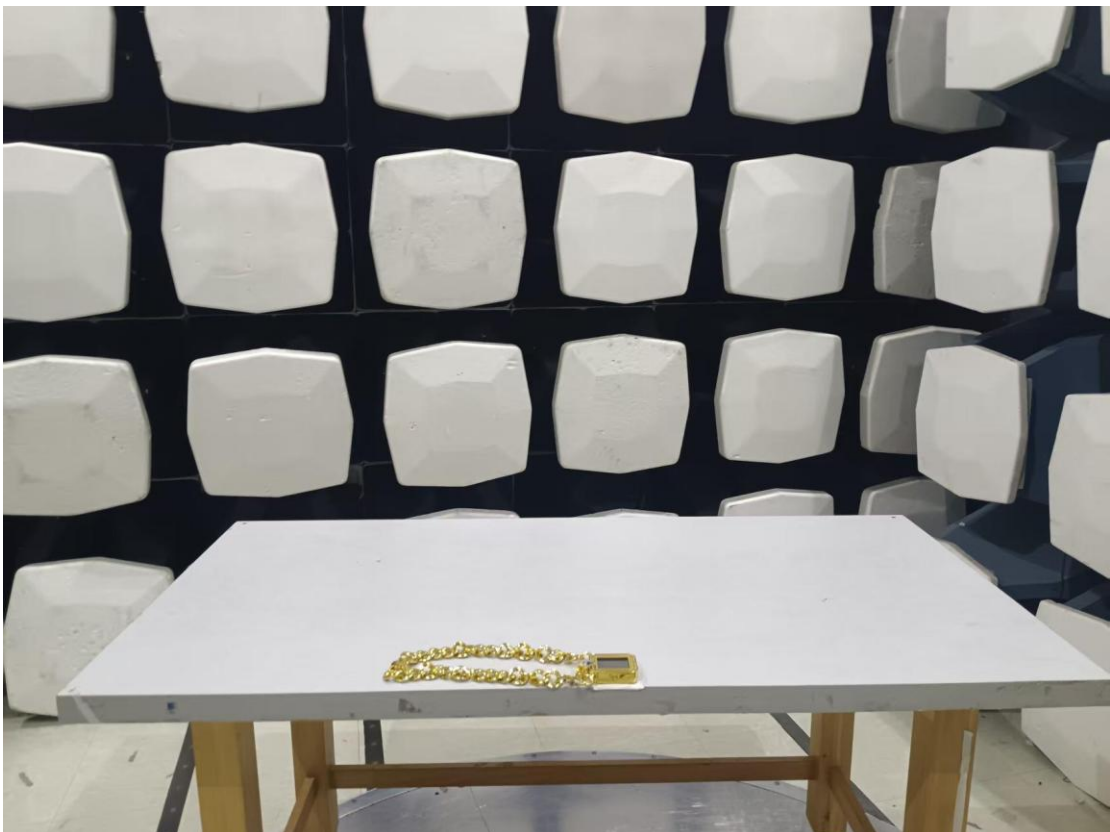


Radiated Photos

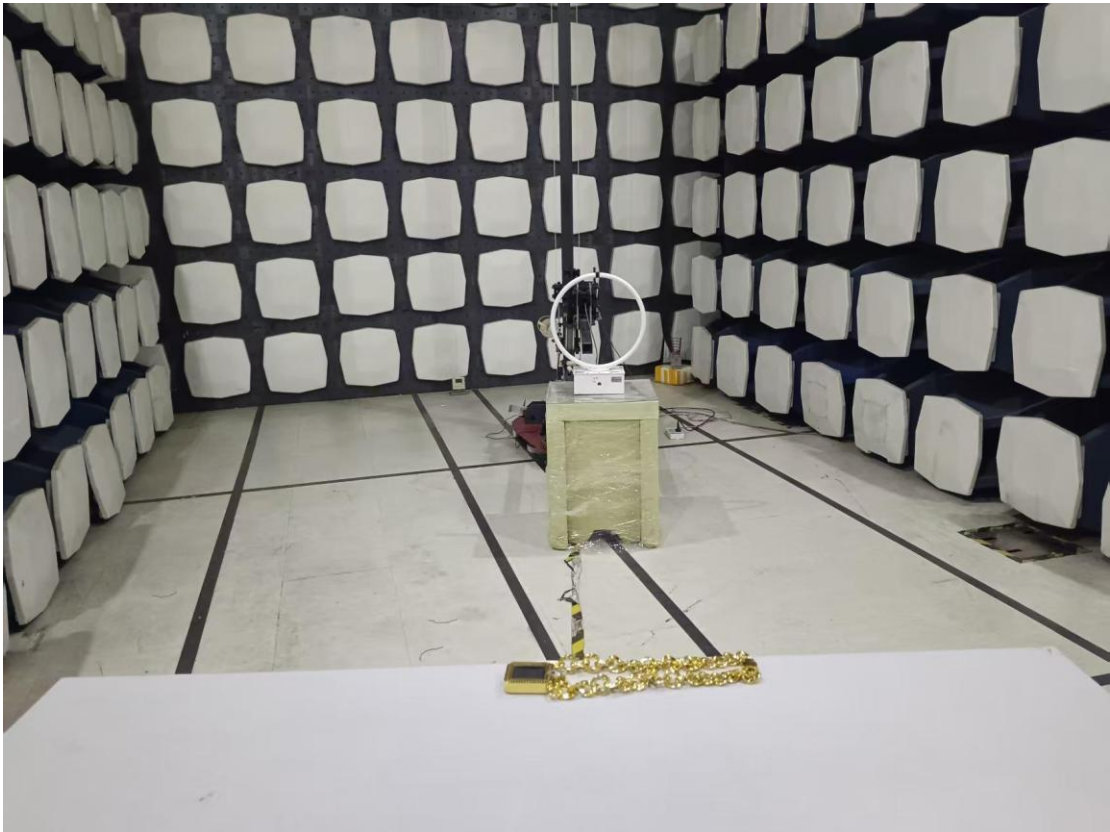


9KHz to 30MHz
(The EUT placed at the center of the turntable)

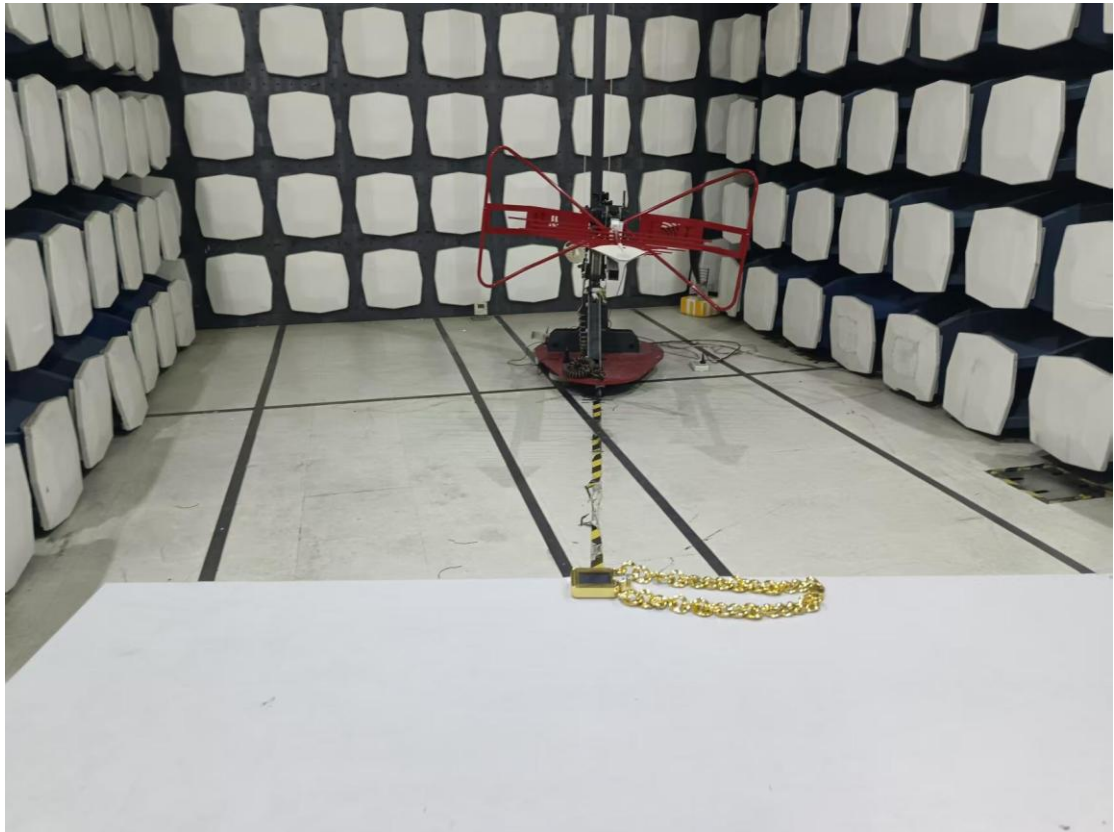

30MHz to 1GHz
(The EUT placed at the center of the turntable)



1GHz to 18GHz
(The EUT placed at the center of the turntable)

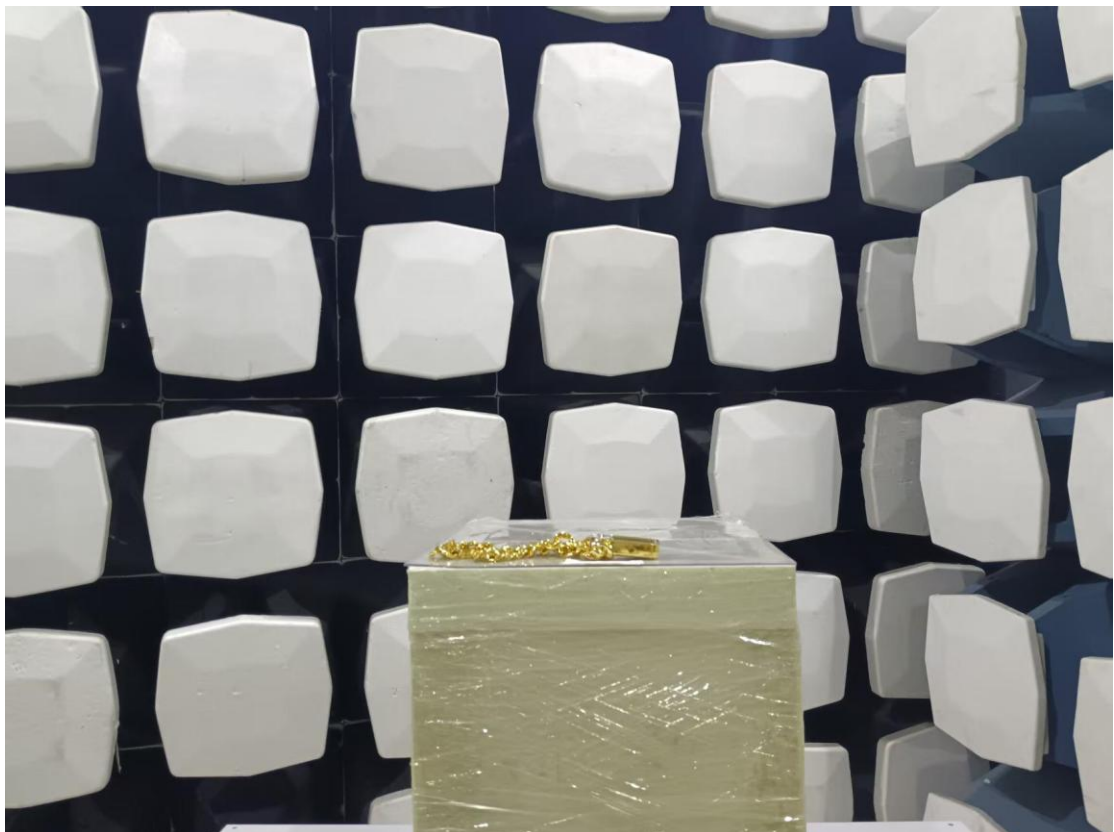

18GHz to 26GHz
(The EUT placed at the center of the turntable)