

 
 
User Guide

Earphone
Compartment

I. Wearing method

1、 Pay attention to distinguishing between the left and right earphones (the left earphone corresponds to the "L" mark; The right ear corresponds to the "R" mark

2、 Wearing indication

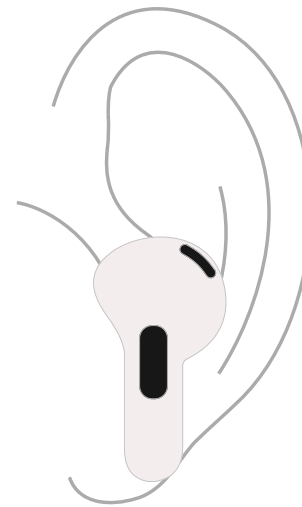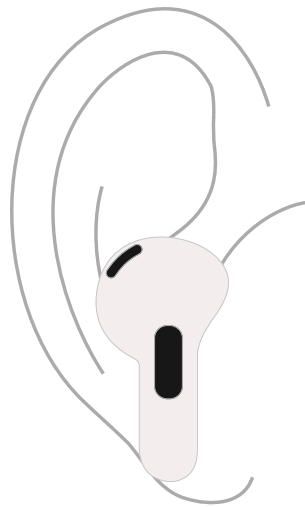


II. First use




Please connect the charger to charge the case first and activate the device.

III.Headphone-phone connection

 Open the headphone case - activate the Bluetooth radio of the headphones

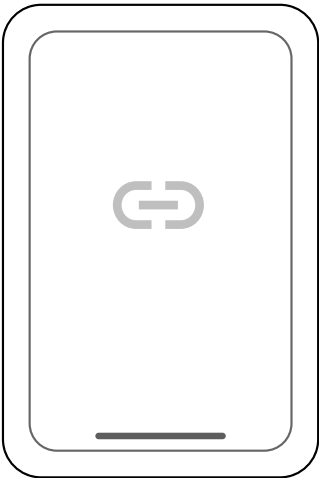

Mobile phone - Turn on Bluetooth

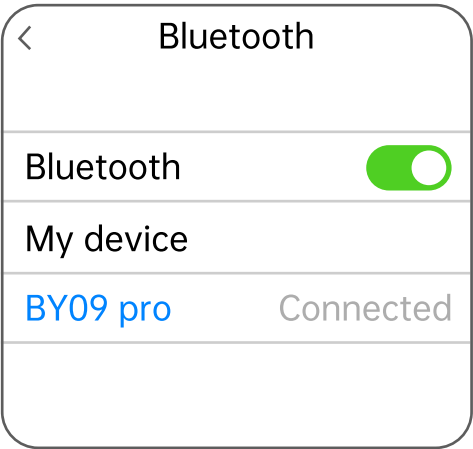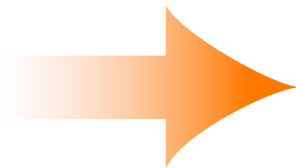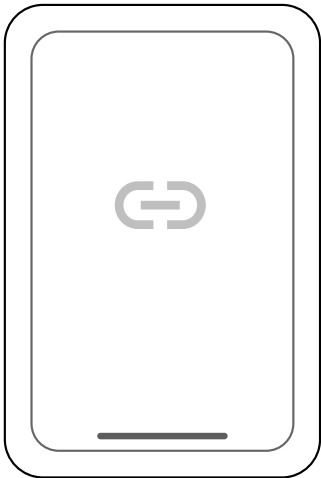   

Headphone-phone connection

IV.Touch command

Operation	Function
Click	When the headphone case screen is off, the response is to turn on the screen
	When the headphone case screen is on, the response is to turn off the screen
Double-click	The startup status & menu style interface responds to the switch of menu styles
Long press	In the power-on state and non-process interface, hold down the key for 3 seconds to quickly enter the "Shut Down/Restart/Restore Factory Settings" interface
	When the device is powered on, press and hold the button for 10 seconds to initiate the "hardware restart" logic
	When the device is turned off, press and hold the button for 3 seconds to power on the earphone case and display the power-on logo

V.Time synchronization

When the user successfully connects the mobile phone to the headphones, the headphone case will automatically synchronize the system time of the mobile phone

 
VI、 Switch wallpaper



Long Press
For 2 Seconds


Switch wallpaper

LONG PRESS THE MAIN SCREEN FOR 2 SECONDS TO ENTER THE LOCK SCREEN WALLPAPER SWITCHING INTERFACE. SLIDE LEFT AND RIGHT TO SWITCH TO THE SELECTED LOCK SCREEN WALLPAPER INTERFACE, AND CLICK TO SELECT THE WALLPAPER

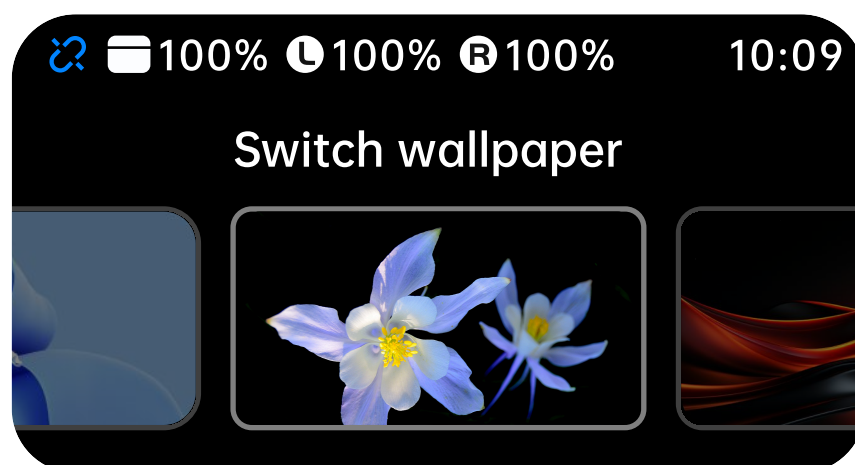


VII.Music

 SUPPORTS SWITCHING BETWEEN TRACKS, PLAY/PAUSE, VOLUME ADJUSTMENT, AND LYRICS DISPLAY (ONLY COMPATIBLE WITH ENGLISH)

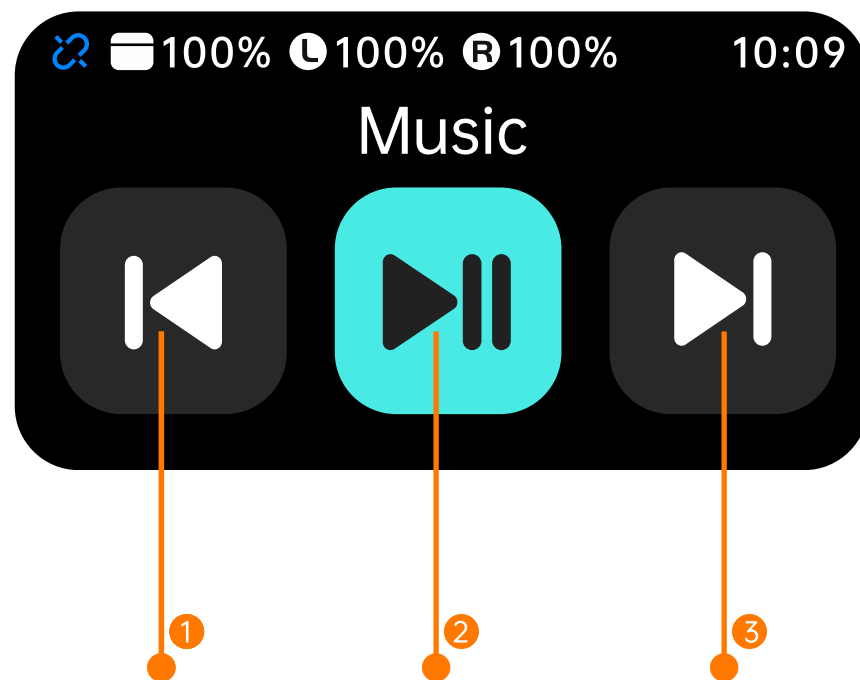


Music

 - 1 PREVIOUS SONG: SINGLE-CLICK TO SWITCH TO THE PREVIOUS SONG
- 2 PLAY/PAUSE TWO-IN-ONE BUTTON: SINGLE-POINT PLAY/PAUSE
- 3 NEXT SONG: SINGLE CLICK TO SWITCH TO THE NEXT SONG
- 4 VOLUME CONTROL: SINGLE-POINT VOLUME REDUCTION/VOLUME INCREASE

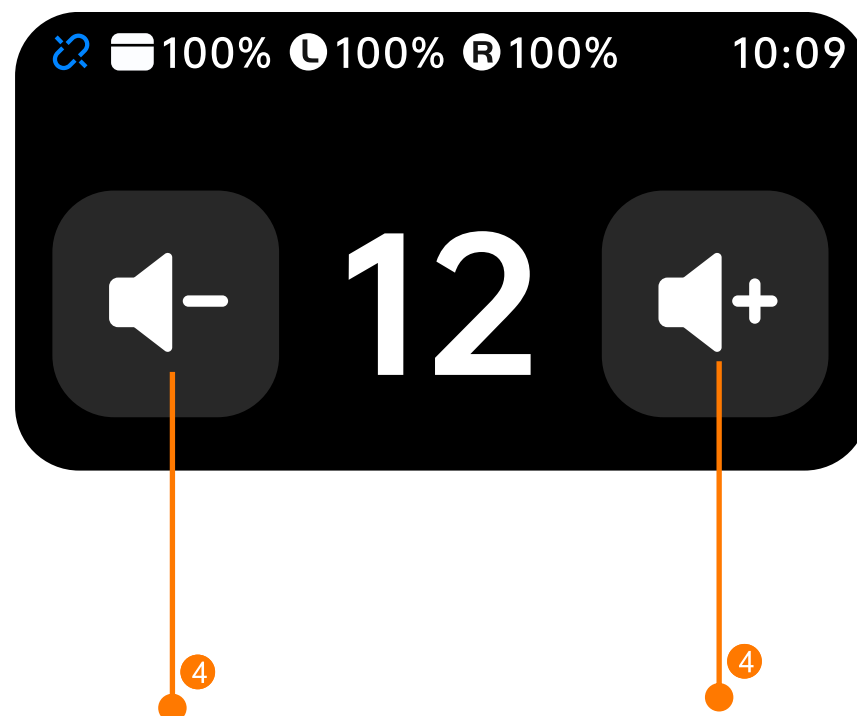


VIII.EQUALIZER

 1. Switch the sound effect mode by clicking the left and right switch buttons.
2. Supported music modes: Classic, Jazz, pop, Classical, Rock, Country;

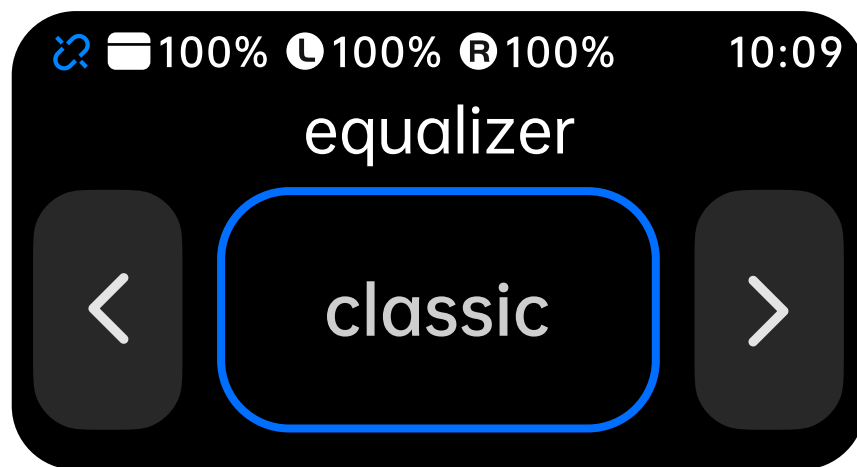


IX.Noise reduction mode

 1. Switch modes by clicking the function icon;
2. Supported modes: Normal, noise reduction, transparency;

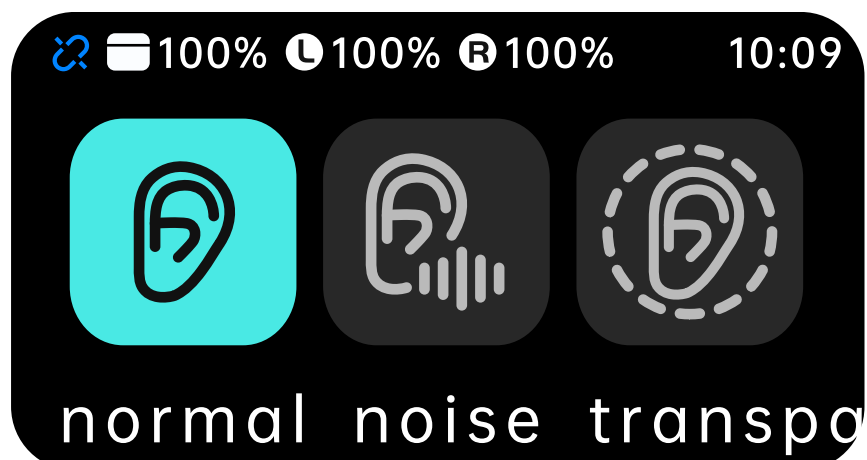


X.Mode

 - 1.Factory default mode: Music mode;
2. You can switch to the game mode (i.e., low latency mode) by clicking the function icon.

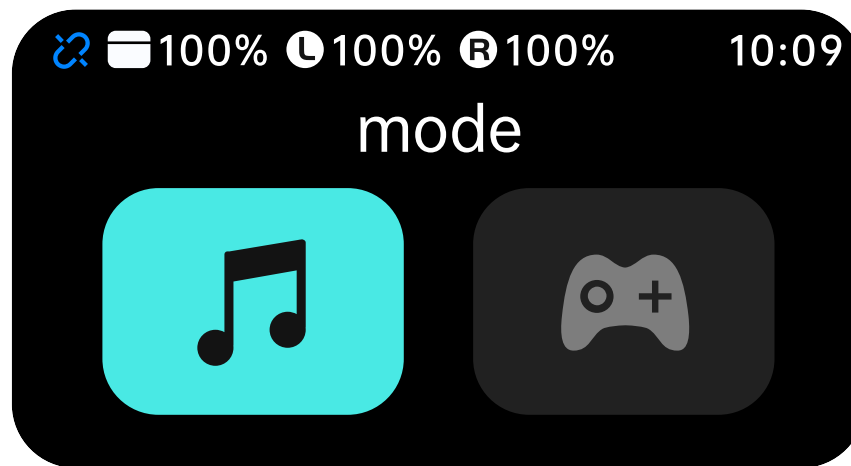


XI.Others

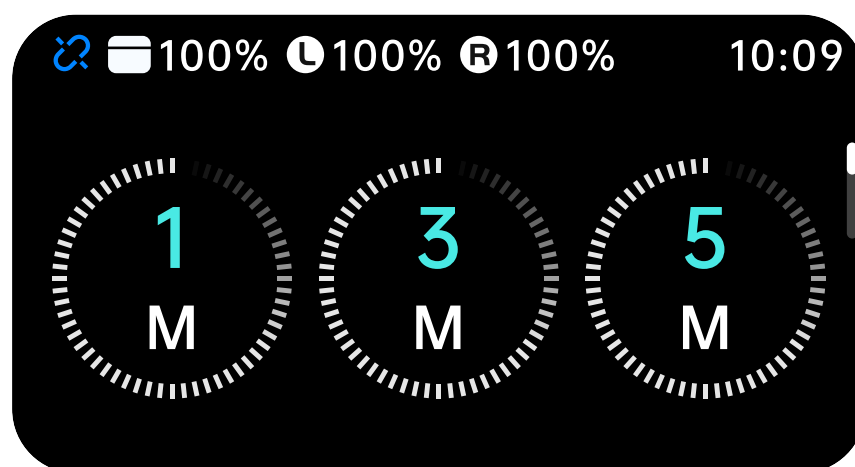 

Timer


In the timer function, preset common durations allow quick timing with a tap; a custom button enables time adjustment. Tap Start to begin, Pause to halt, and Reset to zero.

 XI.Others

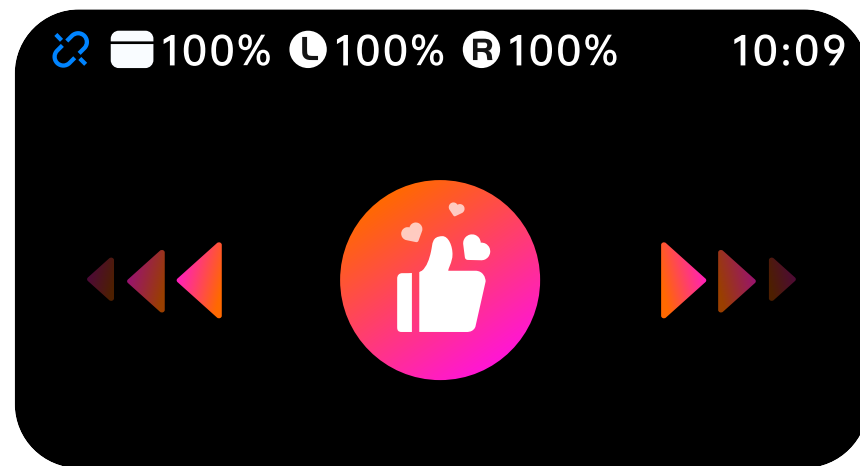

Short video controls

 
In the video like function, when you click the corresponding button, the video software will respond to the previous, next, like/like function

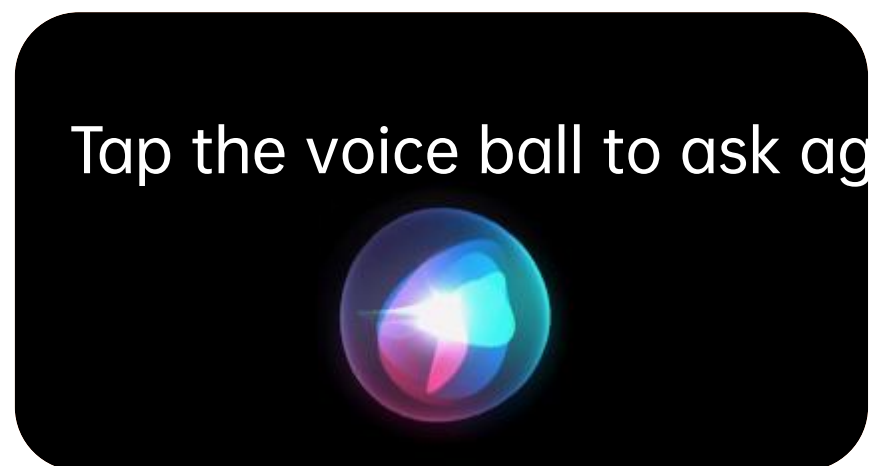

Voice assistant



In the voice assistant function, clicking on the voice ball can wake up the voice assistant on your phone and ask questions.

 XI.Others

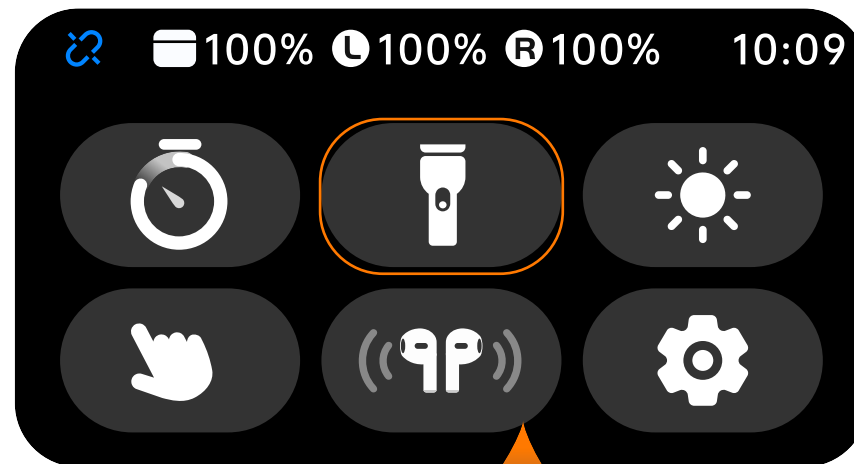

Flashlight

  1. Click to open
2. Swipe right/press the button briefly (to return to the previous level)

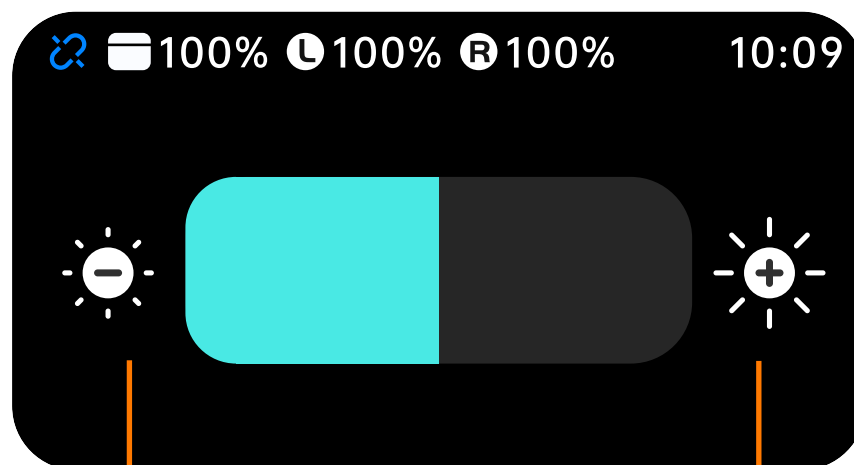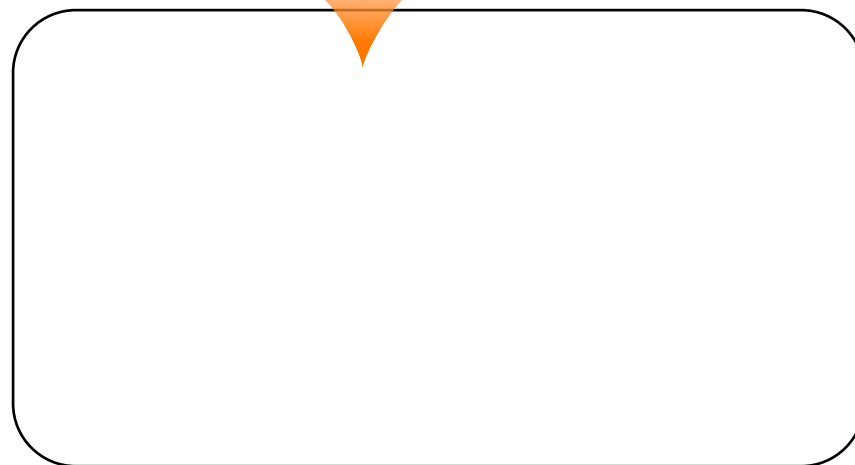

Brightness

Brightness increase or decrease:
Click Brightness Decrease/
Brightness Increase

 


XI.Others




Camera

The earphone case adjustment system uses the built-in camera app to perform the remote photo-taking function. At this time, the camera APP needs to be in the foreground. If the user kills or switches the APP to the background, the device will not respond to the remote photo-taking function

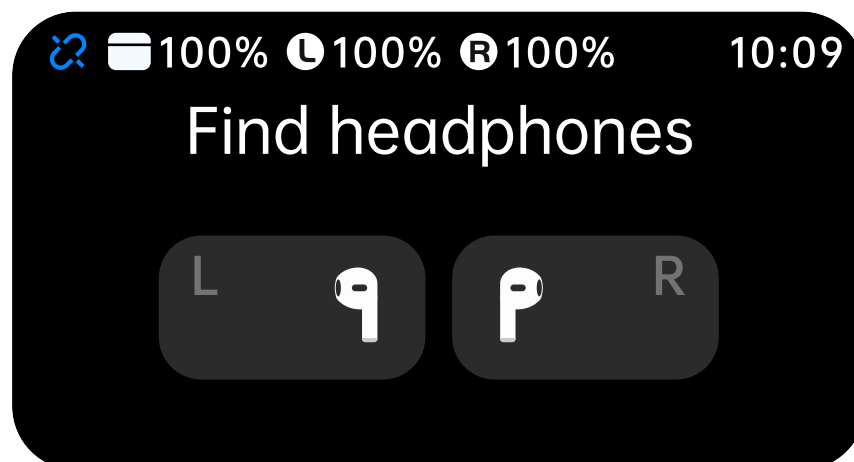


Find headphones

 After the earphone case is connected to the earphones, click "Find Earphones". The earphones will ring to prompt, and the earphone case end will display "Search successful". If the earphone case is not connected to the earphones, the earphone case end will prompt that it is not connected

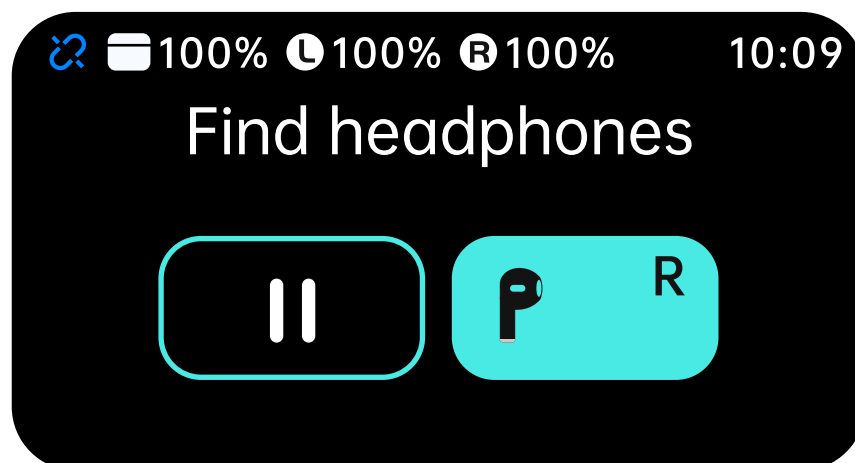

XI.Others

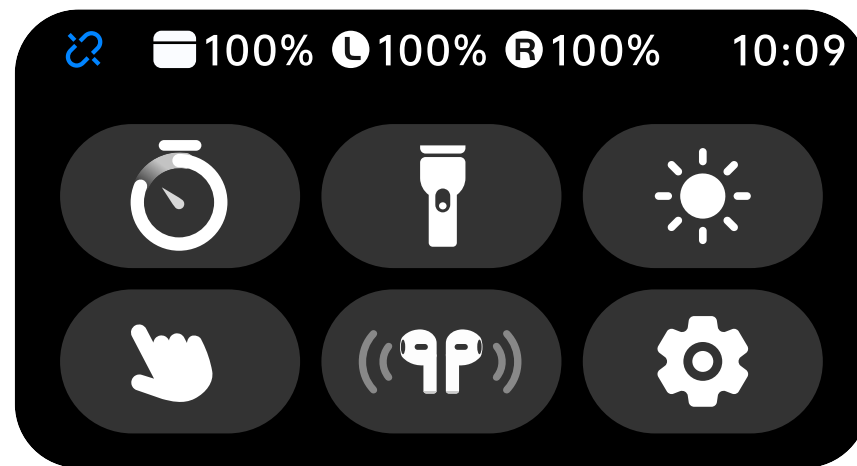 

Control Center

Function Overview: Timer, Flashlight, Brightness , Touch Wake-up, Find Headphones, Settings



Game

Airplane game

Slide the aircraft left and right to earn points by hitting objects.

There are three chances in total for each visit

If you are hit by a stone or a missile, you will lose one chance

XII.Charge

Align and insert the charging cable into the earbud case's port until the screen shows charging. Charge promptly when low battery is indicated. The device is integrated with a non-removable battery.

XII.FAQ

The earphone case cannot be turned on

Please hold down the power button of the battery for more than 3 seconds or if the battery power is too low, please charge it in time

Bluetooth is not connected or cannot be connected

1. Please try restarting the headphone case and reconnecting
2. Please try restarting your phone's Bluetooth and then reconnect
3. Do not connect your mobile phone to other Bluetooth devices simultaneously

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.