 


Plant Therapy®

RetroFlame Ultrasonic Diffuser

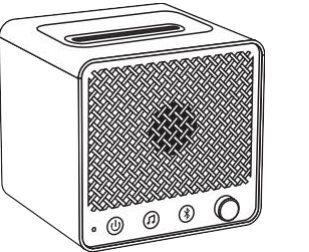

WARNING

Please read carefully the following safety precautions before using this unit. The safety precautions listed below are intended to prevent you and others from injury or to prevent damage to the product.

The manufacturer is not responsible for any damage caused by incorrect use of the product.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with part 18 of the FCC Rules.

- This appliance contains batteries that are only replaceable by skilled persons.
- This appliance contains batteries that are non-replaceable.
- WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance
- Use only with IVP0500-2000G power supply.

- Children should be supervised to ensure that they do not play with the appliance.
- This device can be used by children of 8 years old and over and by people with reduced physical, sensorial or mental capacities, or no experience or no knowledge of the device, if they are appropriately monitored or if they are given instructions on how to use the device safely and if potential risks are anticipated. Cleaning and maintenance of the device must not be performed by unattended children.


PRODUCT DESCRIPTION

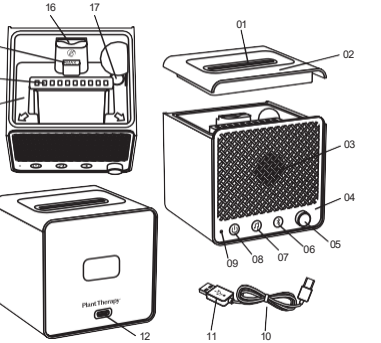

- 1. Mist Outlet
- 2. Cover
- 3. Speaker
- 4. Main Base
- 5. Volume Control Knob
- 6. BT Button
- 7. Ambient Sound Selection Button
- 8. ON/OFF Button
- 9. Indicator Light
- 10. USB-C Cable
- 11. USB Jack
- 12. USB-C Inlet
- 13. Water Tank
- 14. LED Flame Lights
- 15. Max Water Level Line
- 16. Air Outlet
- 17. Ceramic Disc

INSTRUCTIONS

- Charge your diffuser. This diffuser is USB powered and rechargeable.
1. Before using this product, charge your diffuser. Plug the USB cable into the USB-C inlet of your diffuser. The charging time is about 4 hours. Duration of diffusion when functioning with rechargeable battery approximately 2.20hrs (+/- 10 %).
 2. Charging indication: Once connected to the power supply & charging, the red-light charging indicator will slowly blink. When fully charged, the indicator will be steady. When battery capacity is below 10%, the red indicator light will flash 5 times every 5 minutes until fully discharged.
1. Remove the outer cover.
 2. Fill the reservoir with mineral water (bottled water or tap water): do not exceed the maximum water level – 150 ml. Make sure no water is poured into the air outlet of the diffuser.
 3. Add a few drops of essential oil (5-10 drops) to a filled water tank.
 4. Replace the cover on the diffuser correctly. The air outlet must be protected to avoid water entering into it.
 5. Plug the connecting cable into the USB-C inlet located on the rear of the diffuser & plug the USB cable into the power supply.

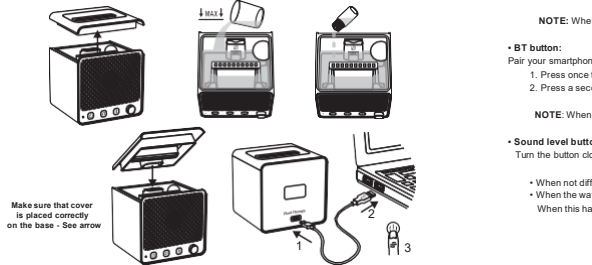

FUNCTIONS

- **On/Off & Light Button:**
 1. Press once to turn ON the continuous diffusion & the flame light.
 2. Press a second time to keep ON the continuous diffusion with flame light OFF.
 3. Press third time to stop diffusion & flame light.

Long press the ON/OFF button for 3 seconds to turn off the diffusion & sound or BT function.

- **Ambient sounds button:**
 1. Press once to turn on "Dreamscape" sound.
 2. Press twice to turn on "Mindful Calm" sound.
 3. Press a third time to turn on "Water & Wind Chimes" sound.
 4. Press a fourth time to turn on "Soothing Relaxation" sound.
 5. Press a fifth time to turn off all ambient sounds.

NOTE: When the ambient sound is turned ON, the BT function automatically turns OFF.

- **BT button:**

Pair your smartphone by looking for RetroFlame.

 1. Press once to turn ON the BT function - Pair your smartphone by looking for RetroFlame.
 2. Press a second time to turn OFF the BT function.

NOTE: When the BT sound is turned ON, the Ambient Sound function automatically turns OFF.


- **Sound level button (large button)**

Turn the button clockwise to increase the volume. Turn the button counterclockwise to reduce the volume.

- When not diffusing, both ambient sounds or BT function can be used.
- When the water level in the reservoir is insufficient or empty, the diffuser will stop automatically. When this happens, fill the reservoir with water following the instructions to return to normal function.

MAINTENANCE

- Disclaimer: Clean your water tank every 3 days to help prevent the growth of microorganisms that can form in standing water. Regular cleaning keeps your diffuser operating safely and ensures the mist you breathe stays fresh.

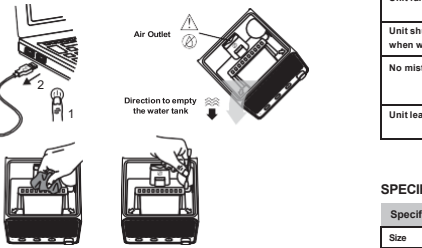

Please clean the product as follow:

1. Turn off the power and disconnect the USB-C cable.
2. Never submerge the device in water.
3. Never pour water out from the air outlet side. Empty it from one of the corners at the opposite side to the air outlet. **Do not empty water in the air outlet. This could damage your diffuser. In the event water enters into the air outlet, let the diffuser dry for at least 24 hours.**
4. Clean the interior of the diffuser with a soft tissue and a little water. If necessary, use some heavily diluted vinegar. Do not use corrosive detergents. Gently wipe the ceramic disc with a cotton pad, being careful not to scratch it. Do not allow metal or sharp objects to be in contact with the ultrasonic mist plate.

Note: please use neutral detergents.

TROUBLE SHOOTING

Please refer to below info when the unit fails to work properly	
Unit fails to turn on	Ensure there is enough water in the tank for diffusion. Ensure the diffuser is charged or use the USB-C cable.
Unit shuts off suddenly when working	Check connection of USB-C cable; unplug and plug back in. Recharge the battery and turn the diffuser on.
No mist or abnormal mist	Ensure there is enough water in the tank for diffusion. Check for dirt/debris on the ultrasonic disc, air outlet, and mist outlet. Clean according to maintenance instructions.
Unit leaks water	In low temperatures or high humidity, mist may condense quickly into water droplets. Wipe away.

SPECIFICATIONS

Specifications RetroFlame	
Size	Dia 121 x 114 x 112 (h)mm
Power input /output	DC5V 2A
Charging port	Type-C
Battery Capacity	3.7V/3000mAh
Bluetooth Version	Bluetooth 5.2
Mist Output	10 ml/h +/-3 ml/h
Water capacity	150 ml